**Saved from manuals.plus.**
**Open the live page for links to other documents and user manuals.**



### ZdalaMit BN59-01180A

# ZdalaMit BN59-01180A Replacement Remote Control User Manual

Model: BN59-01180A

## 1. Introduction

This manual provides essential instructions for the setup, operation, and maintenance of your ZdalaMit BN59-01180A replacement remote control. This remote is designed to function as a direct replacement for various Samsung TV models without requiring any programming or pairing.

## 2. Product Overview

The ZdalaMit BN59-01180A remote control is a standard infrared (IR) remote, featuring a comprehensive layout of buttons for controlling your Samsung television. It is ergonomically designed for comfortable use.




**Image 2.1:** Front view of the ZdalaMit BN59-01180A remote control. This image displays the full button layout, including power, volume, channel, navigation, and function keys, all in black with white and red text.

## 3. Setup: Battery Installation

The ZdalaMit BN59-01180A remote control requires two (2) AAA batteries for operation. Batteries are not included with the remote control.

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover downwards to open it.
3. Insert two 1.5V AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.

4. Slide the battery cover back into place until it clicks securely.

No programming or pairing is required. Once batteries are installed, the remote is ready for use with compatible Samsung TVs.





**Image 3.1:** Rear view of the remote control with the battery cover detached, revealing the two AAA battery slots and their polarity indicators.

## 4. Operating Instructions

Point the remote control directly at your Samsung TV's infrared receiver. Ensure there are no obstructions between the remote and the TV.

### Key Functions:

- **Power (Red Button):** Turns the TV on or off.
- **.QZ / ABC / DEF (Number Buttons 1-9, 0):** Used for direct channel input or text entry.
- **VOL +/-:** Adjusts the volume level.
- **CH ^/v:** Changes channels up or down.
- **MUTE:** Mutes or unmutes the TV sound.
- **SOURCE:** Selects input sources (HDMI, AV, etc.).
- **MENU:** Accesses the TV's main menu.
- **HOME:** Returns to the TV's home screen or Smart Hub.
- **MagicInfo Player I:** Specific button for MagicInfo Player functionality on compatible displays.
- **INFO:** Displays information about the current program or input.
- **Navigation Buttons (Up, Down, Left, Right, Enter):** Used to navigate menus and select options.
- **RETURN:** Returns to the previous screen or menu.
- **EXIT:** Exits the current menu or application.
- **Color Buttons (A, B, C, D):** Functionality varies by TV model and application.
- **Media Control Buttons (Play, Pause, Stop, Fast Forward, Rewind):** Controls media playback.




**Image 4.1:** The remote control being used to operate a Samsung television. This illustrates the typical usage scenario.

## 5. Compatible Samsung TV Models

This replacement remote control is compatible with a wide range of Samsung TV models, including but not limited to:

- DH40D, DH48D, DH55D
- DM32D, DM40D, DM48D, DM55D, DM65D, DM75D
- OH46D, OH55D
- DB32D, DB40D, DB55D, DB48D, DB10D, DB22D
- SMT-3232, SMT-4032
- ED65E, ED75E, EM65E, EM75E
- DC32E, DC40E, DC48E, DC55E, DC32E-M, DC40E-M, DC48E-M, DC55E-M, DC40E-H, DC48E-H
- ML32E, ML55E-R, ML55E
- OH24E, OM24E, OM46D-W, OM55D-W, OM75D-W, OM46D-K, OM55D-K, OM75D-K
- QM105D, LH105QMDNC/GO, QM85D, QM85D-BR
- UD46D-P, UD46E-A, UD46E-C, UD46E-B, UD55E-B, UD55E-P, UD55E-S
- UE46D, UE55D
- LH22DBDPLGC/ZA, LH22DBDPLGCZA, LH32DBDPLGA/ZA, LH32DBDPLGAZA, LH32DMDPLGA/ZA, LH32DMDPLGAZA, LH32DMDSLGA/ZA, LH32DMDSLGAZA, LH32DSDSLGA/ZA, LH32DSDSLGAZA, LH40DBDPLGA/ZA, LH40DBDPLGAZA, LH40DHDPLGA/ZA, LH40DHDPLGAZA, LH40DMDPLGA/ZA, LH40DMDPLGAZA, LH40DMDSLGA/ZA, LH40DMDSLGAZA, LH40DSDSLGA/ZA, LH40DSDSLGAZA, LH46UEDPLGC/ZA, LH55UEDPLGC/ZA

If your Samsung TV model is not listed, please refer to your TV's original remote control model number to confirm

compatibility with BN59-01180A.

## 6. Specifications

| Feature | Detail |
|---|---|
| Model Number | BN59-01180A |
| Brand | ZdalaMit |
| Power Supply | 2 x 1.5V AAA Batteries (not included) |
| Product Dimensions | Approximately 6 x 2 x 1 inches (15.24 x 5.08 x 2.54 cm) |
| Item Weight | Approximately 2.08 ounces (59 grams) |
| Color | Black |
| Special Feature | Ergonomic design |
| Compatible Devices | Samsung Televisions |

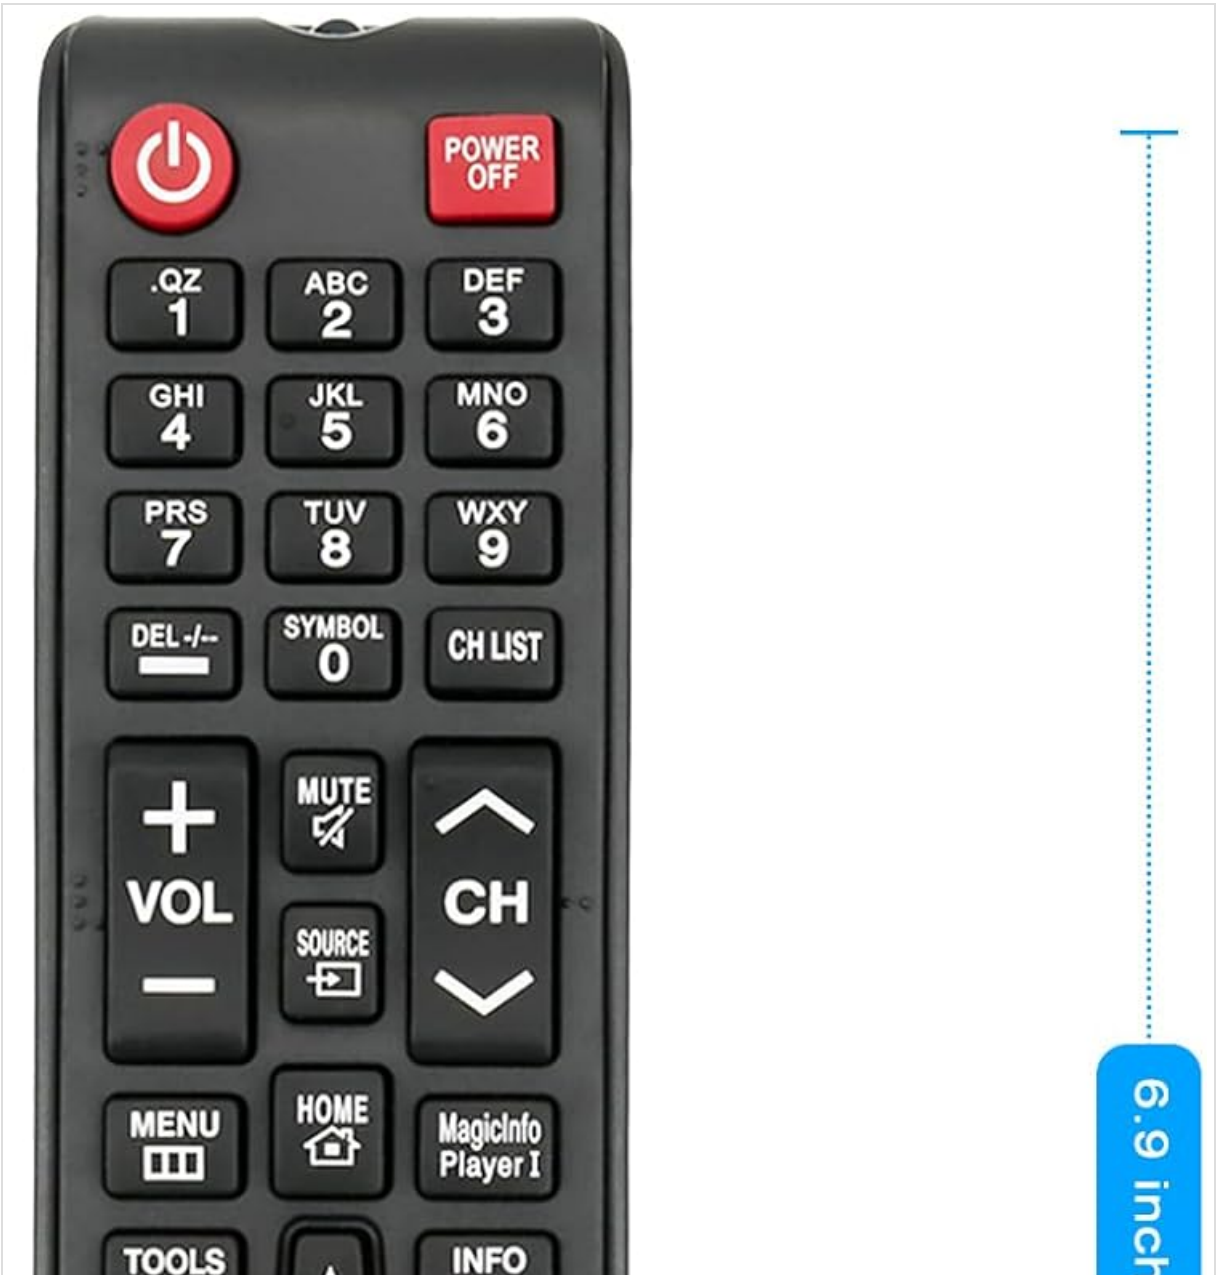





**Image 6.1:** Dimensions of the remote control, showing a length of 6.9 inches and a width of 1.7 inches.

## 7. Troubleshooting

- **Remote not responding:**
  - Ensure batteries are inserted correctly with the correct polarity.
  - Replace old batteries with new 1.5V AAA alkaline batteries.
  - Check for any obstructions between the remote control and the TV's infrared receiver.
  - Ensure you are within the effective range of the TV's IR receiver.
- **Specific buttons not working:**
  - Clean the remote control buttons and surface with a soft, dry cloth to remove any dirt or debris.
  - If only certain buttons are unresponsive, it might indicate a hardware issue.

## 8. Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the remote control in a dry place, away from direct sunlight and extreme temperatures.
- **Battery Replacement:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

## 9. Warranty and Support

For any questions, concerns, or support regarding your ZdalaMit BN59-01180A replacement remote control, please contact the manufacturer or your retailer. Specific warranty details may vary; please retain your purchase receipt for warranty claims.

© 2023 ZdalaMit. All rights reserved.


### Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question



**Open the live page**

**https://manuals.plus/asin/B07B894VYD**

More documents and user manuals: **https://manuals.plus/**