Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Crayola 74-7245

Crayola Ultimate Light Board (Model 74-7245) Instruction Manual

Model: 74-7245 | Brand: Crayola

Introduction

This manual provides essential instructions for the setup, operation, and maintenance of your Crayola Ultimate Light Board. Please read this manual thoroughly before use to ensure proper function and safety.

Safety Information

WARNING: CHOKING HAZARD - Small parts. Not for children under 3 years.

Package Contents

- Crayola Ultimate Light Board (with LED lights and built-in kickstand)
- 1 Removable Tracing Panel
- 6 Mini Washable Gel Markers

Please ensure all items are present before proceeding with setup.



Image: The Crayola Ultimate Light Board in its packaging, illustrating the included components.

Setup

1. Battery Installation

1. Locate the battery compartment on the back of the Light Board.
2. Using a Phillips head screwdriver (not included), open the battery compartment cover.
3. Insert 3 AA batteries (not included) according to the polarity indicators (+/-).
4. Replace the battery compartment cover and secure it with the screw.

Note: Always use fresh batteries and ensure they are inserted correctly.

2. Kickstand Setup

The Light Board features a built-in kickstand for comfortable drawing. Gently pull out the kickstand from the back of the board until it locks into place. This will prop the board at an ergonomic angle.

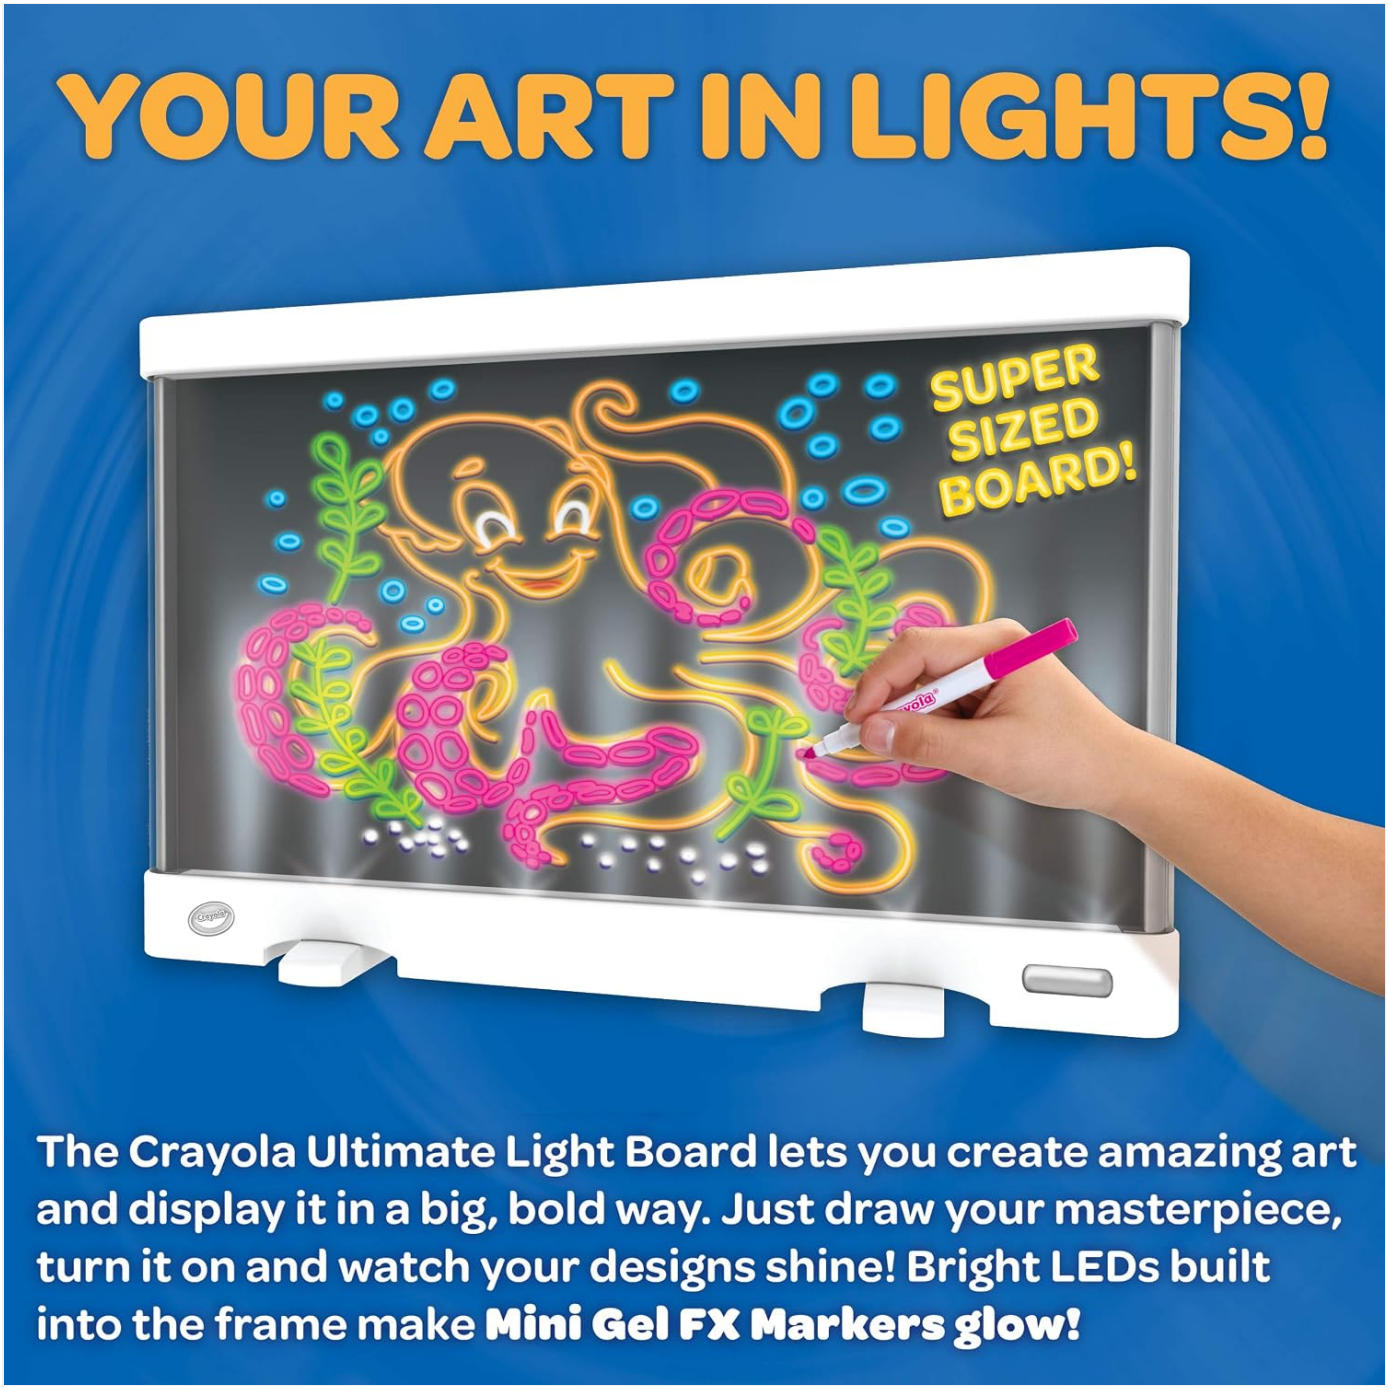


Image: The Crayola Ultimate Light Board showing the built-in kickstand extended, marker storage, and the removable tracing panel.

Operating Instructions

1. Drawing on the Light Board

1. Use the provided Crayola Mini Washable Gel Markers to draw directly onto the clear surface of the Light Board.
2. Press the action button (located on the front of the board) to cycle through 3 different light effects that illuminate your artwork.



Image: A child's hand drawing on the illuminated surface of the Crayola Ultimate Light Board, showcasing the glowing effect of the markers.

2. Using as a Tracing Pad

1. To use the Light Board as a tracing pad, gently remove the black back panel.
2. Place your desired image or template underneath the clear drawing surface.
3. The illuminated surface will allow you to easily trace the image with your gel markers.
4. Once tracing is complete, you can reinsert the black back panel.



Image: The Crayola Ultimate Light Board with its back panel removed, demonstrating its use as a tracing pad with a dog image placed underneath.

Maintenance

1. Cleaning the Drawing Surface

The drawing surface is reusable and can be easily cleaned. Use a soft, damp cloth or a dry eraser to wipe away marker residue. Ensure the surface is completely dry before drawing again.



Image: A hand wiping the drawing surface of the Crayola Ultimate Light Board clean, demonstrating its reusability.

2. Marker Storage

The Light Board features smart marker storage slots on its sides to keep your gel markers organized and prevent loss. Always store markers with caps securely on to prevent drying.

Troubleshooting

- **Lights not illuminating:** Check if batteries are installed correctly and are not depleted. Replace batteries if necessary.
- **Markers not drawing clearly:** Ensure marker caps were securely placed after use. If markers are dry, they may need to be replaced. Refill with Crayola Washable Bold & Bright or Window Markers.
- **Drawing surface appears cloudy:** Clean the surface thoroughly with a soft, damp cloth. Avoid abrasive cleaners.

Specifications

Brand	Crayola

Model Number	74-7245
Color	White
Material	Plastic
Power Source	3 AA Batteries (not included)
Light Type	LED
Item Dimensions (W x H)	18.5"W x 12"H
Item Weight	1 kg
Included Components	Light Board, 6 Mini Washable Gel Markers, Removable Tracing Panel
Recommended Age	Ages 6+

Warranty and Support

Warranty Information

This product is sold without a manufacturer's warranty. Please refer to the retailer's return policy for details on returns or exchanges.

Customer Support

For further assistance or inquiries, please visit the official Crayola website or contact their customer service department. You can find contact information on the product packaging or the Crayola website.
Official Crayola Website: www.crayola.com

© 2023 Crayola. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07BF2XW1H

More documents and user manuals: **https://manuals.plus/**