Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Foxelli MX20B_2-PACK

Foxelli LED Headlamp Flashlight

Model: MX20B_2-PACK

Introduction

The Foxelli LED Headlamp (Model MX20B) is a versatile and lightweight lighting solution designed for various outdoor activities such as running, camping, and hiking. It features super bright LED technology with a 165-foot beam, offering a wide variety of white and red light modes. Built to last, it is waterproof with an IPX5 rating and provides up to 45 hours of run-time on 3 AAA batteries. This manual provides essential information for setup, operation, and maintenance of your headlamp.

Setup

1. Battery Installation

The headlamp operates on 3 AAA batteries (included). To install or replace batteries, follow these steps:

1. Locate the battery compartment on the back of the light unit.
2. Lift the tab to open the compartment.
3. Insert three AAA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the compartment securely until it clicks into place.



Figure 1: Battery installation into the headlamp.

2. Headband Adjustment

The ergonomically designed elastic headband is easily adjustable to fit various head sizes, ensuring a comfortable and secure fit for both adults and kids.

- Use the adjustable buckle on the headband to tighten or loosen the strap as needed for a snug fit.
- Ensure the headlamp is centered on your forehead for optimal balance and light distribution.



Figure 2: Headlamp suitable for both adults and kids with adjustable strap.

Operating Instructions

1. Power On/Off & Mode Selection

The headlamp features a simple one-button design for easy operation and cycling through various light modes:

- **White Light Modes:** Press the power button once to turn on the headlamp. Subsequent presses will cycle through Low, Medium, High, and Strobe white light settings.
- **Red Light Modes:** To activate the red light modes, press and hold the power button for a few seconds. This will switch to Red Light, Red Strobe, and SOS mode.
- **Switching Between White/Red:** To switch back to white light modes from red light modes, press and hold the power button again.
- **Power Off:** To turn off the headlamp from any mode, press the power button until the light turns off (usually

after cycling through all modes or by holding the button down).



Figure 3: Overview of the 7 available light modes.

2. Tilting Mechanism

The light unit can be tilted up to 45 degrees, allowing you to direct the beam precisely where needed for optimal visibility.

- Gently push the light unit forward or backward to adjust its angle. It will click into various positions to hold its setting.

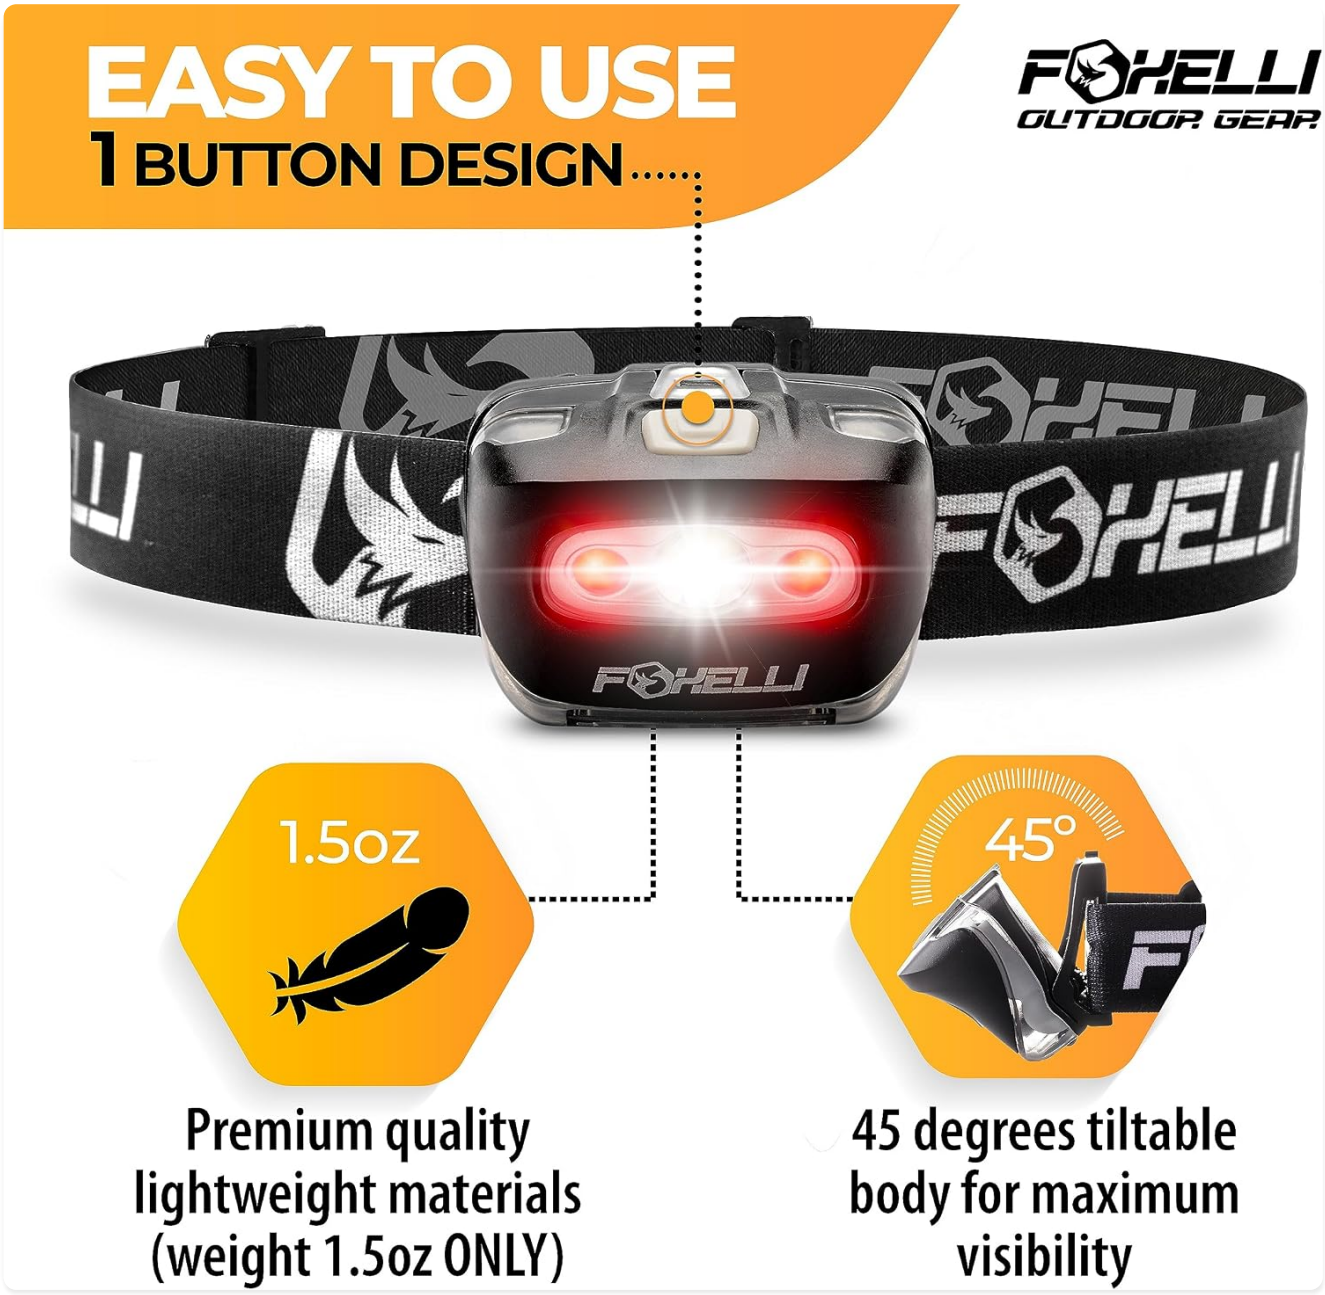


Figure 4: The headlamp features a 45-degree tiltable body.

Official Product Videos

No official seller videos are available for embedding at this time. Please refer to the text instructions and images for guidance.

Maintenance

Battery Replacement

Refer to the 'Battery Installation' section under Setup for detailed instructions on replacing batteries.

Cleaning

- Wipe the headlamp with a soft, damp cloth.
- Do not use abrasive cleaners, solvents, or harsh chemicals, as these may damage the unit.

- Ensure the battery compartment is completely dry before closing it after battery replacement.

Storage

- Store the headlamp in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for extended periods (more than a month), remove the batteries to prevent potential leakage and damage to the device.

Troubleshooting

Problem	Possible Cause	Solution
Light not turning on	1. Incorrect battery polarity 2. Dead or low batteries 3. Loose battery connection	1. Check and correct battery orientation (+/-). 2. Replace with fresh AAA batteries. 3. Ensure batteries are seated firmly in the compartment.
Dim or flickering light	1. Low battery power 2. Dirty battery contacts	1. Replace with fresh AAA batteries. 2. Clean battery contacts with a clean eraser or cotton swab.
Headband slipping	1. Headband is too loose 2. Headband is twisted	1. Adjust the headband using the buckle for a tighter, more secure fit. 2. Untwist the headband and ensure it lies flat against your head.

Specifications

Feature	Detail
Model	MX20B_2-PACK
Special Feature	Adjustable Light Modes
Color	2-Pack Black
Power Source	Battery Powered
Light Source Type	LED
White Brightness	165 Lumens
Included Components	Battery

Feature	Detail
Voltage	4.5 Volts
Light Path Distance	50 Meters
Battery Cell Composition	Alkaline
Item Weight	1.5 Ounces
Number of Batteries	6 AAA batteries required. (included)
Water Resistance Level	Water Resistant (IPX5)
Runtime	Up to 45 hours

Warranty & Support

Foxelli offers a **Lifetime Warranty** for this product, reflecting their commitment to quality and customer satisfaction. For any support needs, questions, or concerns regarding your Foxelli LED Headlamp, please contact Foxelli customer service. Their dedicated team is available to assist you and ensure your happiness with the product. Contact information can typically be found on the product packaging or the official Foxelli website.

© 2025 Foxelli. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07BJ9NLDJ

More documents and user manuals: **https://manuals.plus/**