Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Noma B07BK2NZBQ

Noma 31 cm Wooden Christmas Tree with Colour Changing LEDs User Manual

Model: B07BK2NZBQ

Introduction

Thank you for choosing the Noma 31 cm Wooden Christmas Tree. This festive decoration features RGB colour changing lights and is adorned with wooden festive characters. It includes a convenient 6-hour on, 18-hour off timer function. This manual provides essential information for the safe and proper setup, operation, and maintenance of your product.

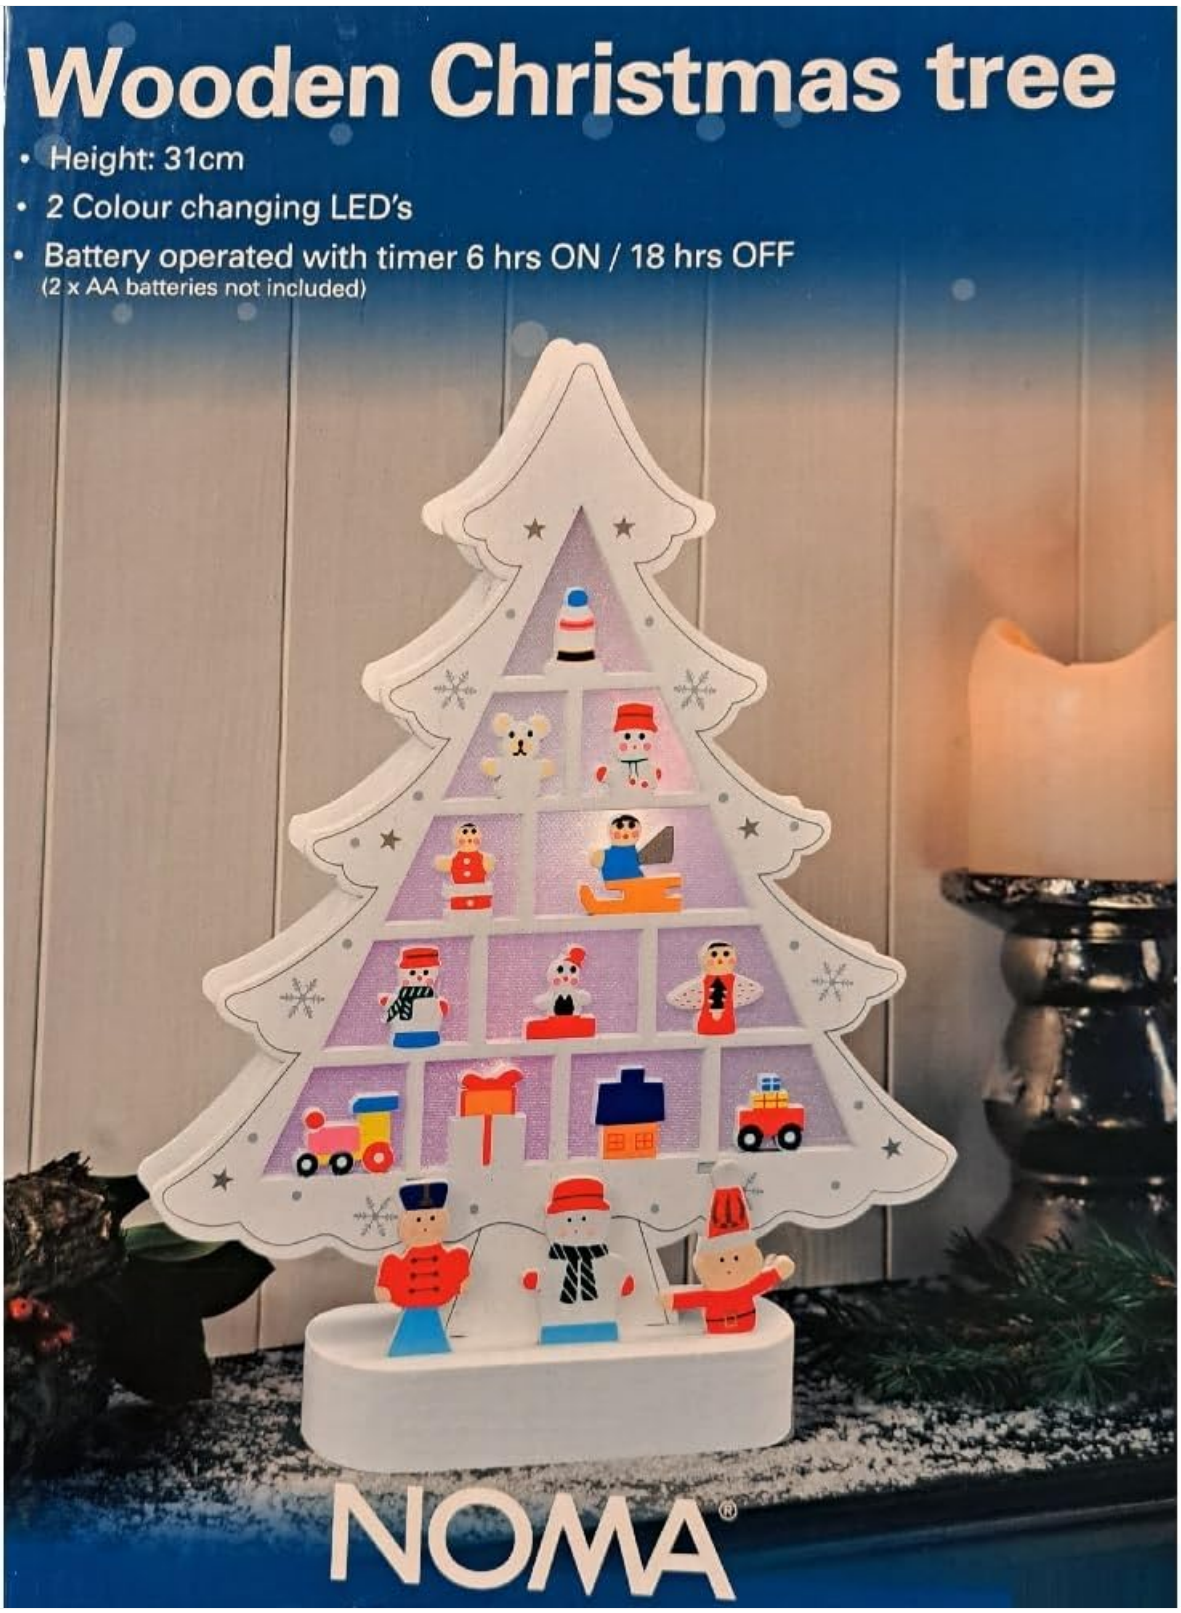


Image 1: The Noma 31 cm Wooden Christmas Tree, showcasing its overall design and festive characters.

Safety Information

- This product is for indoor use only.
- Keep away from direct heat sources and open flames.
- Do not immerse in water or expose to excessive moisture.
- Batteries should be inserted with the correct polarity (+ and -).
- Remove batteries if the product is not used for an extended period.
- Keep batteries out of reach of children.

Package Contents

Please ensure all items are present and in good condition upon unpacking:

- 1 x Noma Wooden Christmas Tree (31 cm)
- 1 x Instruction Manual (this document)

Setup

1. **Unpacking:** Carefully remove all components from the packaging.
2. **Base Assembly (if separate):** If the tree top is separate from its base, gently align the bottom of the tree with the slot in the base and press down firmly until it is securely seated. Ensure stability.
3. **Battery Installation:**
    - Locate the battery compartment, usually on the underside of the base.
    - Open the battery compartment cover.
    - Insert 2 x AA batteries (not included), ensuring correct polarity (+ and -) as indicated inside the compartment.
    - Close the battery compartment cover securely.
4. **Placement:** Place the assembled Christmas tree on a stable, flat surface indoors, away from moisture and direct heat.



Image 2: A detailed view of the Noma Wooden Christmas Tree, highlighting the base where batteries are typically installed.

Operating Instructions

1. **Powering On:** Locate the ON/OFF switch, typically near the battery compartment. Slide the switch to the "ON" position. The LED lights will illuminate and begin their colour-changing sequence.
2. **Colour Changing LEDs:** The integrated LEDs will automatically cycle through various colours, creating a dynamic and festive display. There are no manual controls for changing specific colours or patterns.
3. **Timer Function:**
    - When the unit is switched "ON", the timer function is automatically activated.
    - The lights will remain "ON" for 6 hours.
    - After 6 hours, the lights will automatically switch "OFF" for 18 hours.
    - The cycle will repeat daily, turning on at the same time each day as when it was initially switched "ON".
    - To reset the timer, switch the unit "OFF" and then "ON" again at your desired new start time.
4. **Powering Off:** To turn off the lights completely and deactivate the timer, slide the ON/OFF switch to the "OFF" position.



Image 3: The Noma Wooden Christmas Tree illuminated and displayed as a decorative item, demonstrating its operational appearance.

Maintenance

- **Cleaning:** Wipe the surface of the wooden tree with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** When the lights dim or stop working, it's time to replace the batteries. Follow the battery installation steps in the "Setup" section. Always replace all batteries at the same time with new ones of the same type.
- **Storage:** When not in use, store the Christmas tree in its original packaging or a suitable container in a cool, dry place, away from direct sunlight. Remove batteries before storing for extended periods to prevent leakage.

Troubleshooting

Problem	Possible Cause	Solution
Lights do not turn on.	Batteries are dead or inserted incorrectly. ON/OFF switch is in the "OFF" position.	Check battery polarity and replace with fresh AA batteries. Ensure the switch is in the "ON" position.
Lights are dim.	Low battery power.	Replace batteries with fresh AA batteries.
Timer function is not working as expected.	Timer was activated at an unintended time.	Switch the unit "OFF" and then "ON" again at the desired time for the 6-hour cycle to begin.
Tree feels unstable in its base.	Tree not fully seated in the base.	Gently press the tree top firmly into the base slot. If necessary, ensure the slot is clear of debris.

Specifications

- **Model:** B07BK2NZBQ
- **Brand:** Noma
- **Height:** 31 cm
- **Material:** Wood
- **Colour:** Multicolor
- **Lighting:** Colour Changing LEDs (2 LEDs)
- **Power Source:** 2 x AA Batteries (not included)
- **Timer:** 6 hours ON / 18 hours OFF
- **Item Weight:** 0.34 Kilograms
- **Usage:** Indoor use only

Warranty and Support

For warranty information or technical support, please refer to the retailer where the product was purchased or contact Noma customer service directly. Please retain your proof of purchase for any warranty claims.
For further assistance, you may visit the Noma brand page on Amazon.

© 2023 Noma. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07BK2NZBQ

More documents and user manuals: **https://manuals.plus/**