Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Garmin 010-01994-01

Garmin Approach CT10 Starter Kit User Manual

Automatic Club Tracking System (3 Sensors)

Setup | Operating Instructions | Maintenance | Troubleshooting | Specifications | Warranty | Support

Introduction

This manual provides instructions for the Garmin Approach CT10 Starter Kit, an automatic club tracking system designed to enhance your golf game by recording shot data.

The kit includes 3 sensors that attach to your golf clubs and pair with compatible Garmin golf watches.

Setup

What's in the Box

- 3 CT10 Sensors
- Instruction Manual

Attaching the Sensors

The CT10 sensors are designed to screw into the end of your golf club grips.

1. Remove the existing cap from the end of your golf club grip, if present.
2. Gently screw the CT10 sensor into the hole at the end of the grip. Ensure it is securely fastened but do not overtighten.
3. Repeat for the remaining sensors on your desired clubs.



Image: A single Garmin Approach CT10 sensor, showing its black top and white screw-in base designed to attach to a golf club grip.

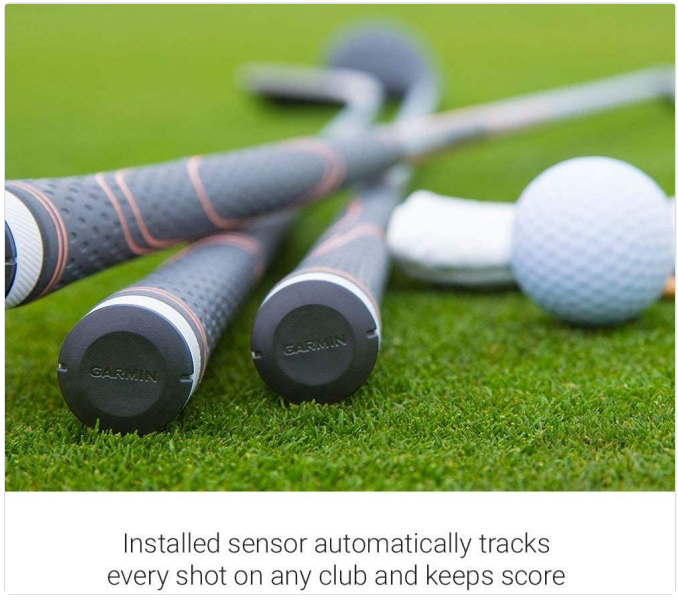


Image: Three golf club grips with Garmin CT10 sensors securely attached to their ends, resting on a golf course.

Pairing with a Compatible Garmin Golf Watch

The CT10 sensors require pairing with a compatible Garmin golf watch for full functionality.

1. Ensure your Garmin golf watch is powered on and in pairing mode (refer to your watch's manual for specific instructions).
2. Take a CT10 sensor and expose it to light (e.g., pull it out of your golf bag) to activate it from sleep mode.
3. On your watch, navigate to the sensor pairing menu.
4. Select "Add Sensor" or similar option.
5. The watch will detect the CT10 sensor. Follow the on-screen prompts to complete the pairing process.
6. Assign the sensor to the correct club type (e.g., Driver, Putter, 7-Iron).
7. Repeat for all 3 sensors.



Image: A person's arm wearing a Garmin golf watch, with three golf club grips featuring CT10 sensors visible in the background, illustrating the pairing setup.

Operating Instructions

Automatic Shot Tracking

Once paired, the CT10 sensors automatically track every shot you take with the equipped clubs.

- When you pull a club with a CT10 sensor from your bag, the sensor activates and communicates with your paired Garmin golf watch.
- The watch will identify the club you are using.
- After you take a shot, the sensor records the shot location, distance, and club type.
- This data is then sent to your Garmin Golf app for analysis.



Image: A golfer holding a club equipped with a CT10 sensor, with a Garmin golf watch visible on their wrist, demonstrating in-play use.

Data Analysis

The Garmin Golf app provides detailed statistics based on the data collected by your CT10 sensors.

- View average distances for each club.
- Analyze strokes gained and other performance metrics.
- Track accuracy to the fairway or green.
- Review your rounds and identify areas for improvement.



Image: A golfer standing on a golf course next to a golf bag, representing the collection of shot data during a round.

Maintenance

Cleaning

Wipe the sensors with a damp cloth to remove dirt or debris. Avoid using harsh chemicals.

Battery Replacement

The CT10 sensors use replaceable Lithium Polymer batteries. The estimated battery life is up to 4 years.

1. Locate the battery cap on the sensor.
2. Use the appropriate tool (often sold separately by Garmin) to carefully unscrew the battery cap.
3. Remove the old battery.
4. Insert a new Lithium Polymer battery, ensuring correct polarity.
5. Screw the battery cap back on securely. Do not overtighten.

Note: *Changing batteries without the correct tool may damage the sensor or cap. Contact Garmin support if you have difficulty.*

Troubleshooting

Sensor Not Tracking Shots

- **Check Battery:** Ensure the sensor battery is not depleted. Replace if necessary.
- **Exposure to Light:** Sensors enter sleep mode to conserve battery. Ensure the sensor is exposed to light (e.g., pulled from the bag) to activate it before a shot.
- **Secure Attachment:** Verify the sensor is securely screwed into the club grip.
- **Watch Connection:** Confirm the sensor is still paired and connected to your Garmin golf watch. Re-pair if

needed.

Inaccurate Shot Data

- **Club Identification:** Ensure the sensor is correctly assigned to the club type in your Garmin golf watch settings.
- **Multiple Clubs:** Avoid pulling multiple clubs from the bag simultaneously, as this can confuse the sensor's club identification.
- **Short Putts:** Very short putts might occasionally be missed due to GPS limitations. These can typically be edited in the Garmin Golf app.

Pairing Issues

- **Activate Sensor:** Make sure the sensor is awake by exposing it to bright light.
- **Watch Pairing Mode:** Confirm your Garmin golf watch is in the correct pairing mode.
- **Proximity:** Keep the sensor close to the watch during the pairing process.
- **Interference:** Move away from other electronic devices that might cause interference.

Specifications

Feature	Detail
Model Number	010-01994-01
Item Weight	0.608 ounces (per sensor)
Product Dimensions	0.5 x 0.5 x 1.1 inches (per sensor)
Batteries	1 Lithium Polymer battery required (included)
Battery Life	Up to 4 years
Connectivity	Bluetooth
Operating System	Garmin OS (compatible watches)
Included Components	3 sensors, manual

Warranty Information

The Garmin Approach CT10 Starter Kit comes with a 1-year limited warranty from the date of purchase.

This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from accident, misuse, abuse, improper installation or operation, or unauthorized repairs.

For full warranty terms and conditions, please refer to the official Garmin website or contact customer support.

Customer Support

For technical assistance, troubleshooting, or warranty claims, please contact Garmin Customer Support.

- **Online Support:** Visit the official Garmin support website.

- **Phone Support:** Refer to your region-specific Garmin website for contact numbers.

When contacting support, please have your product model number (010-01994-01) and proof of purchase available.

© 2024 Garmin Ltd. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07C38R83B

More documents and user manuals: **https://manuals.plus/**