Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ZdalaMit NS-RC4NA-18

Instruction Manual for NS-RC4NA-18 Replacement Remote Control

Model: NS-RC4NA-18 | Brand: ZdalaMit

Introduction

This manual provides comprehensive instructions for the setup, operation, and maintenance of your ZdalaMit NS-RC4NA-18 replacement remote control. This remote is designed to be compatible with various Insignia TV models, including NS-32D311NA17, NS-32D311MX17, NS-40D420NA18, NS-49D420NA18, NS-55D420NA18, NS-40D420MX18, NS-55D420MX18, NS-39D310NA17, NS-50D510NA17, and NS-50D510NA19. It requires no programming or pairing; simply install batteries and it is ready for immediate use.



Image: Front view of the NS-RC4NA-18 replacement remote control, showing all buttons clearly.

Setup

Battery Installation

The NS-RC4NA-18 remote control requires two (2) AAA alkaline batteries for operation. Batteries are not included with the remote control.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch to open it.
3. Insert two AAA batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.

4. Close the battery compartment cover by sliding it back into place until it clicks securely.

Once batteries are installed, the remote is ready for use with your compatible Insignia TV. No additional programming or pairing is required.



Image: Rear view of the NS-RC4NA-18 remote control with the battery cover removed, showing the battery slots for two AAA batteries.

Operating Instructions

The NS-RC4NA-18 remote control features standard buttons for navigating and controlling your Insignia TV. Below is a description of key buttons and their functions:

- **Power ( )**: Turns the TV on or off.
- **Input**: Cycles through available input sources (HDMI, AV, Component, etc.).

- **Number Buttons (0-9)**: Directly select channels.
- **Menu**: Opens the TV's main menu for settings and options.
- **Navigation Pad (Up, Down, Left, Right)**: Navigates through menus and options.
- **Enter**: Confirms selections in menus.
- **Exit**: Exits the current menu or screen.
- **Favorite**: Accesses favorite channels or content.
- **Info***: Displays information about the current program or input.
- **ACC (Audio Closed Caption)**: Toggles audio description or closed captions.
- **CC (Closed Caption)**: Toggles closed captions on or off.
- **Volume (+/-)**: Increases or decreases the TV volume.
- **Mute**: Mutes or unmutes the TV audio.
- **Channel (CH +/-)**: Changes the TV channel up or down.
- **Sleep**: Sets a sleep timer for the TV.
- **Aspect**: Changes the screen aspect ratio.
- **Game**: Activates game mode (if supported by TV).
- **Picture**: Accesses picture settings.
- **Audio**: Accesses audio settings.
- **Media Playback Controls (Play, Pause, Stop, Rewind, Fast Forward, Skip Back, Skip Forward)** Controls media playback on connected devices or TV's built-in media player.



Image: The remote control in use, demonstrating its function with a television.

Maintenance

Cleaning

To maintain the remote control's functionality and appearance, follow these cleaning guidelines:

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not spray cleaner directly onto the remote.
- Avoid using harsh chemicals, solvents, or abrasive cleaning materials, as these can damage the remote's surface or internal components.

Battery Care

- Replace batteries when the remote's responsiveness decreases or it stops functioning.
- If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the remote.
- Dispose of used batteries according to local regulations.

Troubleshooting

Problem	Possible Cause / Solution
Remote is not responding.	**Batteries:** Ensure batteries are inserted correctly with proper polarity (+/-). Replace old or depleted batteries with new AAA alkaline batteries. **Line of Sight:** Ensure there is a clear line of sight between the remote control and the TV's infrared sensor. Obstructions can block the signal. **Distance:** Make sure you are within the effective range of the TV's IR receiver.
Some buttons are not working.	**Compatibility:** Verify that the button function is supported by your specific Insignia TV model. While this remote is broadly compatible, some advanced functions may vary by TV model. **Stuck Buttons:** Check if any buttons are physically stuck or obstructed.
No programming or pairing required.	This remote is pre-programmed for compatible Insignia TVs. If it's not working, the issue is likely battery-related or an obstruction, not a need for programming.

Specifications

Feature	Detail
Model Number	NS-RC4NA-18 (8541714981)
Brand	ZdalaMit
Compatible Devices	Insignia Televisions (NS-32D311NA17, NS-32D311MX17, NS-40D420NA18, NS-49D420NA18, NS-55D420NA18, NS-40D420MX18, NS-55D420MX18, NS-39D310NA17, NS-50D510NA17, NS-50D510NA19)
Power Supply	2 x 1.5V AAA Alkaline Batteries (not included)
Color	Black

Feature	Detail
Product Dimensions	6 x 2 x 1 inches
Item Weight	1.41 ounces
Special Feature	Pre-Programmed, No Pairing Required

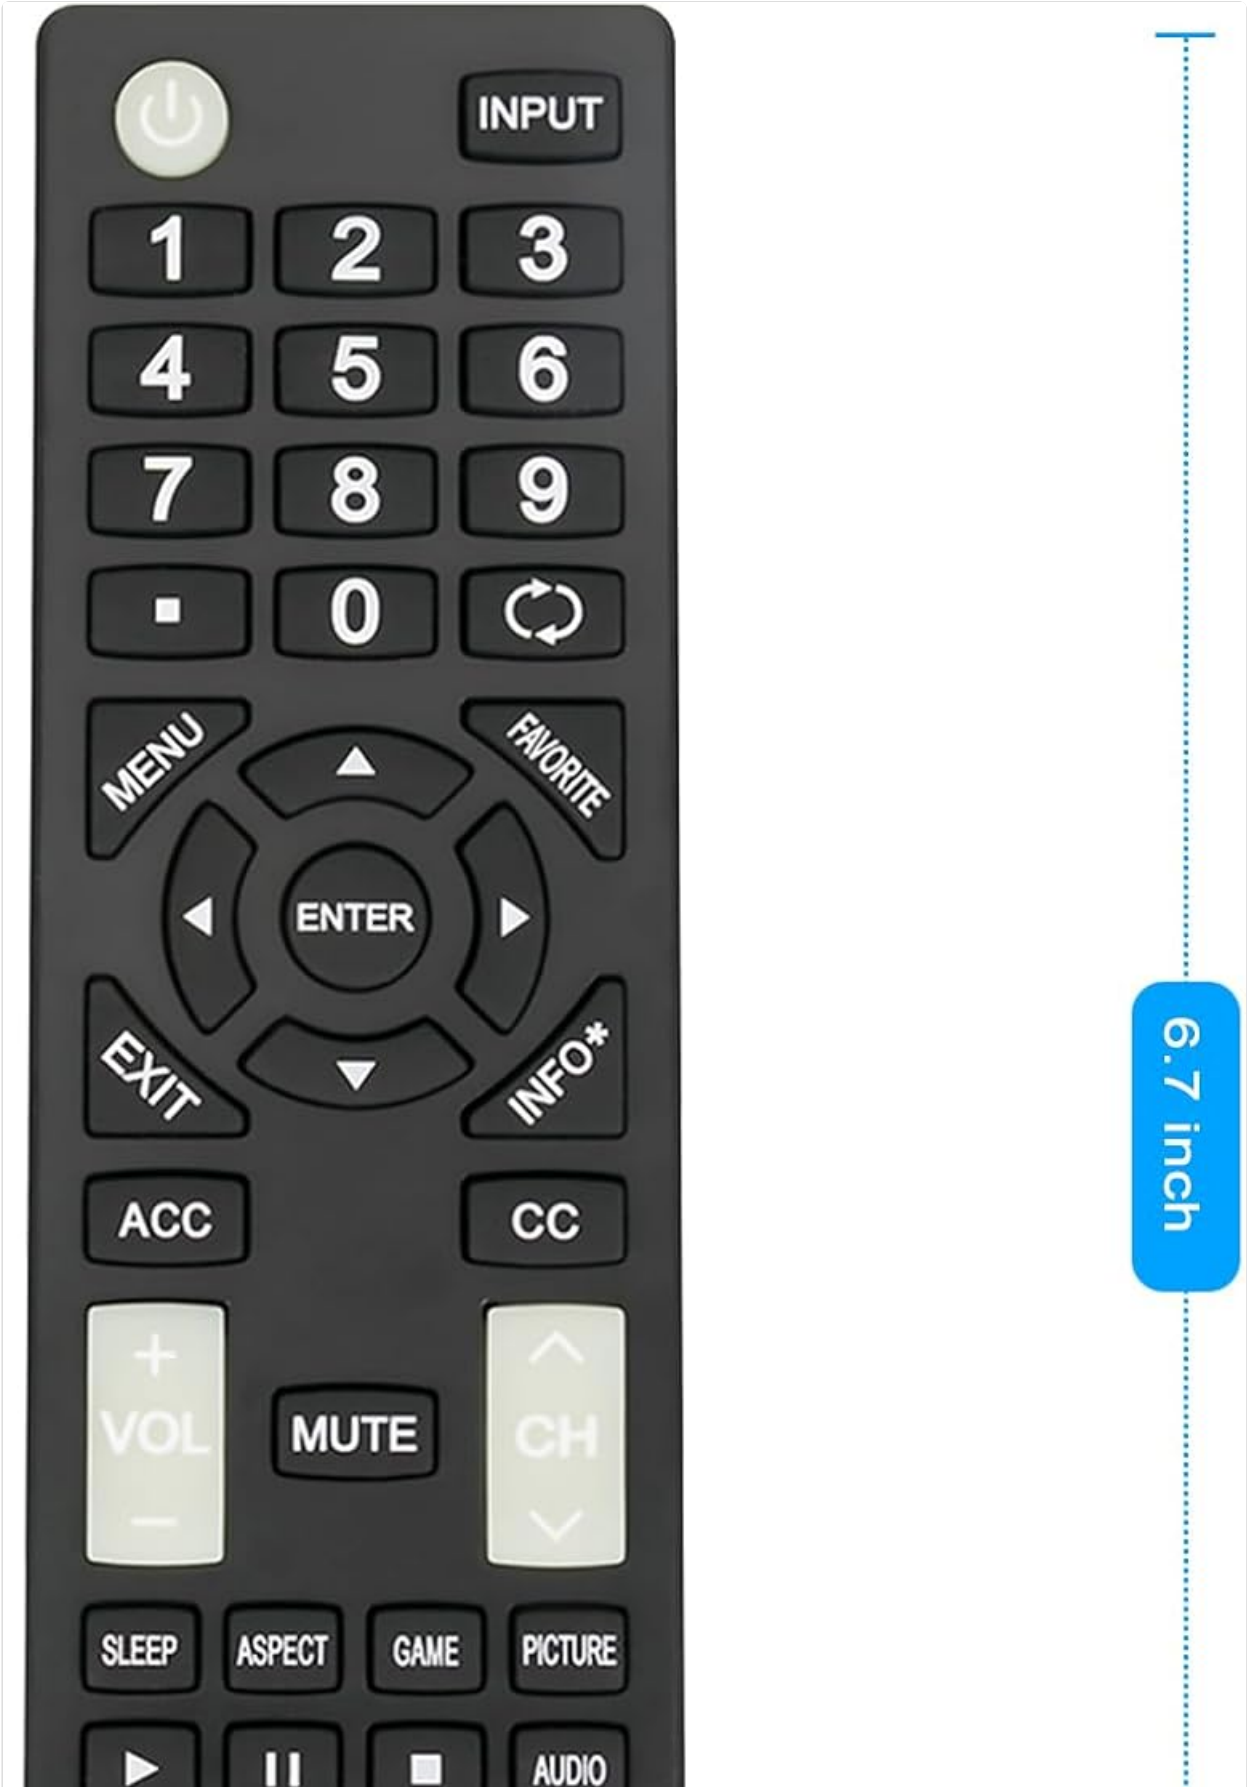




Image: Dimensions of the NS-RC4NA-18 remote control.

Warranty and Support

This product is a replacement remote control. For specific warranty information, please refer to the seller's policy or contact the point of purchase. For general product inquiries or assistance, please feel free to contact the seller.
For support related to Insignia products (the TVs this remote is compatible with), you may visit www.insigniaproducts.com or call their support lines:

- US & Canada: 1-877-467-4289
- Mexico: 01-800-926-3000

Please note that these contact details are for Insignia brand products, which this remote is designed to operate, and not necessarily for the remote control itself, which is manufactured by ZdalaMit.

© 2025 ZdalaMit. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07C91WJFG

More documents and user manuals: **https://manuals.plus/**