Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

K KASONIC MS102A

K KASONIC Music Stand Instruction Manual

Model: MS102A | Brand: K KASONIC

Product Overview

The K KASONIC Music Stand is a versatile 2-in-1 solution designed for musicians and speakers. It functions as both a floor-standing music stand and a desktop book stand, offering flexibility for various uses. Its collapsible and lightweight design ensures portability and easy storage. The stand features a fully adjustable angle tilting bookplate and adjustable height, accommodating users whether sitting or standing. Constructed with sturdy metal tripod support legs, it provides stability for holding music sheets or books.



Image: Overview of the K KASONIC Music Stand, including its main structure, the included music sheet clip, and the carrying bag for transport.

What's Included

Your K KASONIC Music Stand package includes the following components:

- 1 x K KASONIC Music Stand (main unit)
- 1 x Music Sheet Clip Holder
- 1 x Carrying Bag

Setup Instructions

Follow these steps to set up your K KASONIC Music Stand:

1. **Unpack Components:** Carefully remove all items from the carrying bag.
2. **Extend Tripod Base:** Locate the tripod base. Gently pull the legs outwards until they are fully extended and stable. Ensure the non-slip rubber caps are firmly on the ground.
3. **Attach Bookplate (Floor Stand):** If setting up as a floor stand, align the bookplate with the top of the main pole. Securely attach it by tightening the designated knob or screw.
4. **Adjust Height:** Loosen the height adjustment knob on the main pole. Extend the pole to your desired height (between 28.7 inches and 51.2 inches) and tighten the knob to secure it.
5. **Adjust Bookplate Angle:** Loosen the angle adjustment knob on the bookplate. Tilt the bookplate to your preferred reading angle (up to 90 degrees fully adjustable) and tighten the knob.
6. **Attach Music Sheet Clip:** The included music sheet clip holder can be placed on the top edge of the bookplate to secure your sheets.

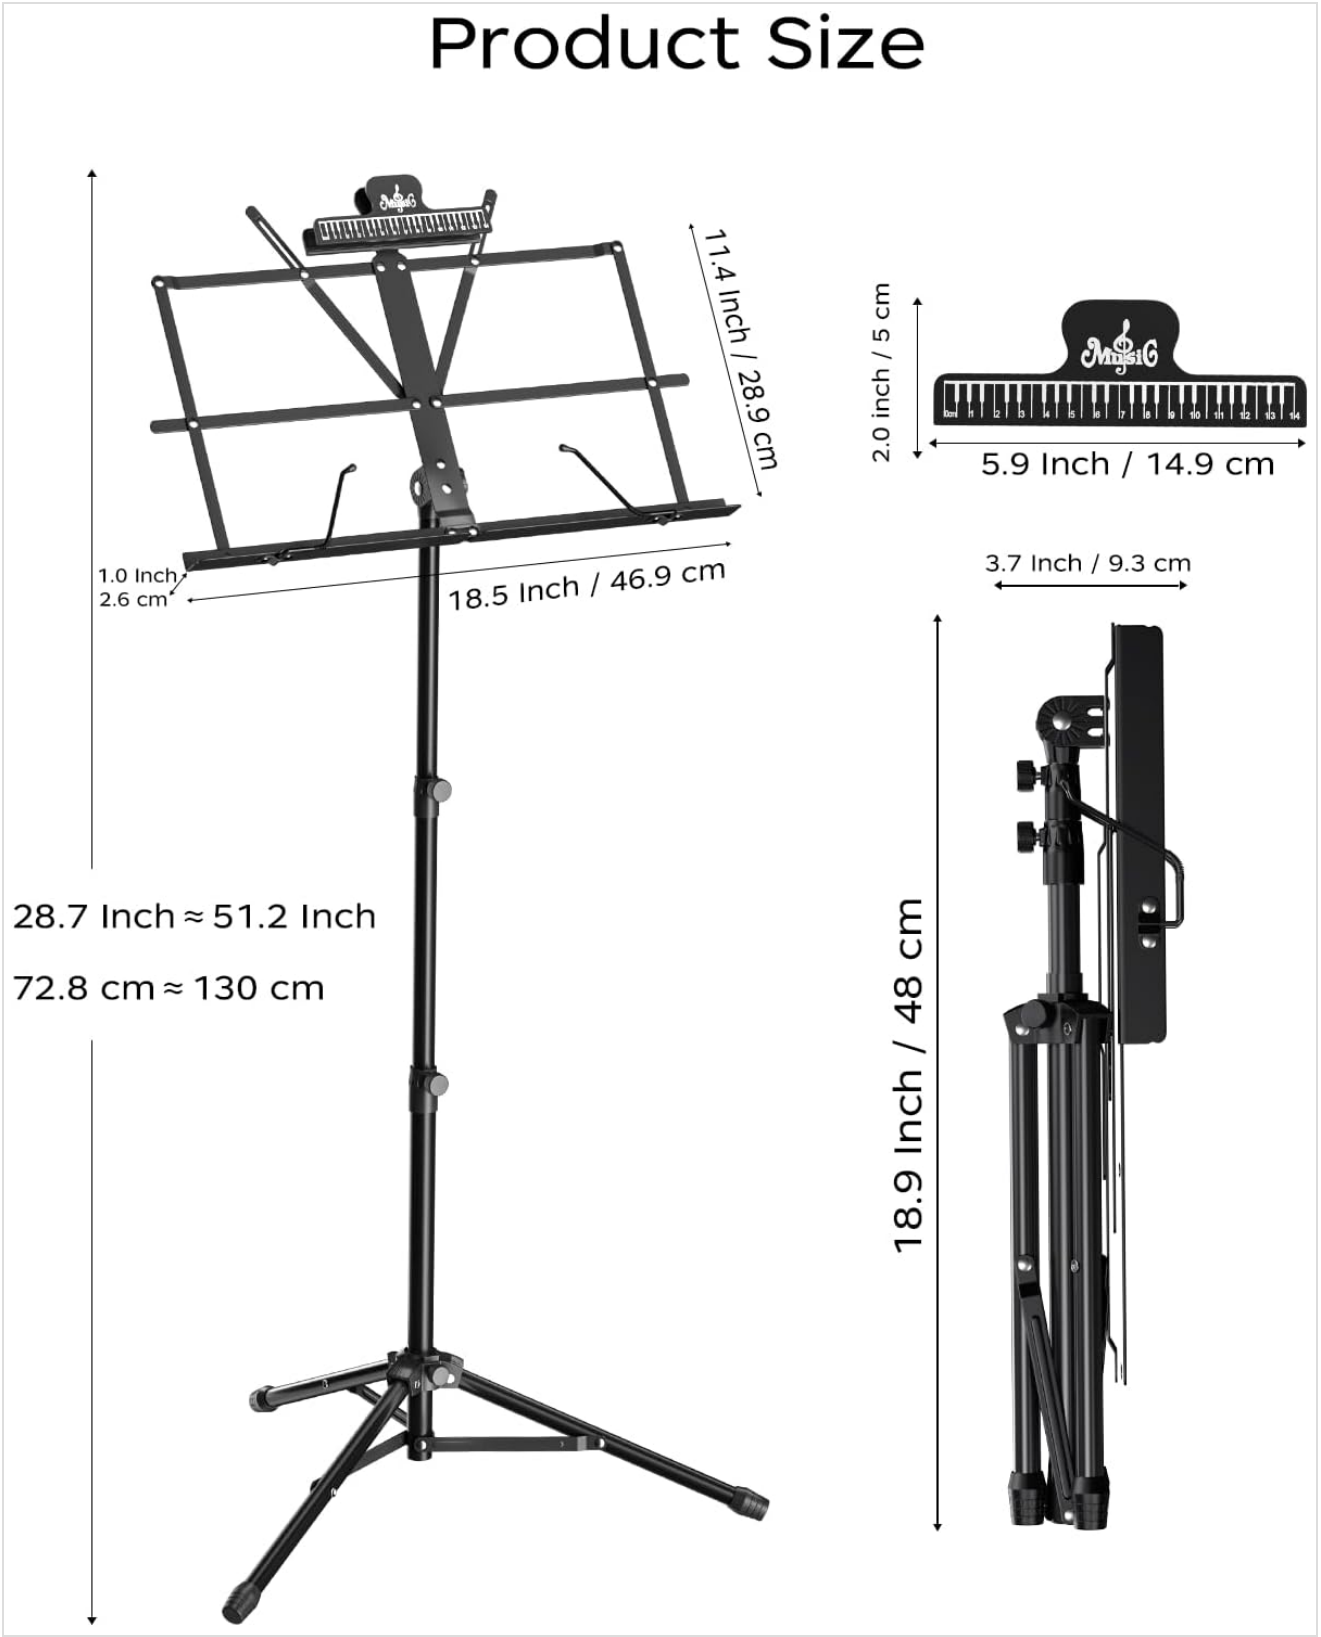


Image: Detailed dimensions of the music stand in both its fully extended and folded configurations, including the music clip.

Operating Instructions

The K KASONIC Music Stand offers dual functionality for various scenarios:

Using as a Floor-Standing Music Stand:

Once assembled as described in the Setup section, the stand is ready for use. Adjust the height and angle to suit your posture, whether standing or sitting. The sturdy tripod base provides stability for holding multiple music sheets or books.

Using as a Desktop Book Stand:

To convert to a desktop stand, simply rotate the nut at the base of the bookplate to detach it from the main pole. The bookplate itself has a built-in support mechanism that allows it to stand independently on a flat surface. This is ideal for practicing at a table or desk.



Image: Demonstrates the music stand's dual functionality as both a floor-standing unit and a compact desktop stand.



Image: Illustrates the 180-degree adjustable angle of the bookplate for optimal viewing.



Image: Shows the adjustable height range of the stand, suitable for both children and adults.

Maintenance

To ensure the longevity and optimal performance of your K KASONIC Music Stand, follow these maintenance guidelines:

- **Cleaning:** Wipe down the metal surfaces with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid abrasive cleaners or solvents.
- **Storage:** When not in use, fold the stand and store it in the provided carrying bag to protect it from dust and scratches. Store in a dry environment.
- **Joints and Fasteners:** Periodically check all knobs, screws, and joints to ensure they are tight. Do not overtighten, as this may damage the components.
- **Rubber Caps:** Inspect the non-slip rubber caps on the tripod legs for wear. Replace if necessary to maintain stability.

Troubleshooting

Problem	Possible Cause	Solution
Stand is wobbly/unstable.	Tripod legs not fully extended or tightened. Uneven surface.	Ensure all tripod legs are fully extended and the central knob is tightened. Move the stand to a flat, even surface.
Bookplate slips or does not hold angle.	Angle adjustment knob is loose. Overloaded bookplate.	Tighten the angle adjustment knob firmly. Reduce the weight on the bookplate if it exceeds its capacity.
Height adjustment slips.	Height adjustment knob is loose.	Ensure the height adjustment knob is securely tightened after setting the desired height.

Specifications

Feature	Detail
Brand	K KASONIC
Model Number	MS102A
Material	Metal
Color	Black
Finish Type	Matte
Base Type	Tripod Legs
Height Adjustment Range	28.7 inches to 51.2 inches (72.8 cm to 130 cm)
Bookplate Angle Adjustment	Up to 90 degrees
Item Weight	2.14 pounds (0.97 kg)
Product Dimensions (L x W x H)	19.5 x 11.25 x 48 inches

Feature	Detail
Assembly Required	No

Warranty and Support Information

For warranty information and customer support, please refer to the contact details provided with your product packaging or visit the official K KASONIC website. Please retain your proof of purchase for any warranty claims.

© 2024 K KASONIC. All rights reserved.
This manual is for informational purposes only. Product specifications are subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07D5KK26W

More documents and user manuals: **https://manuals.plus/**