GLEAM GMS-009

GLEAM GMS-009 Full Metal Sheet Music Stand Instruction Manual

Model: GMS-009

1. Product Overview

The GLEAM GMS-009 Full Metal Sheet Music Stand is a versatile accessory designed for musicians and presenters. It features a robust full-metal construction, adjustable height and angle, and includes a carrying bag, phone holder, sheet music folder, and music clip. It can be used as a traditional music stand or converted into a desktop book stand.



Image 1.1: GLEAM GMS-009 Sheet Music Stand showcasing its adjustable height (35-55 inches) and tray dimensions (13.5 x 17.4 inches).

2. Package Contents

Verify that all items are present in the package:

- 1 x GLEAM Full Metal Sheet Music Stand
- 1 x Desktop Stand Adapter
- 1 x Carrying Bag
- 1 x A4 Sheet Music Folder (with 40 pockets for 80 sheets)
- 1 x Secure Music Clip
- 1 x Phone Holder

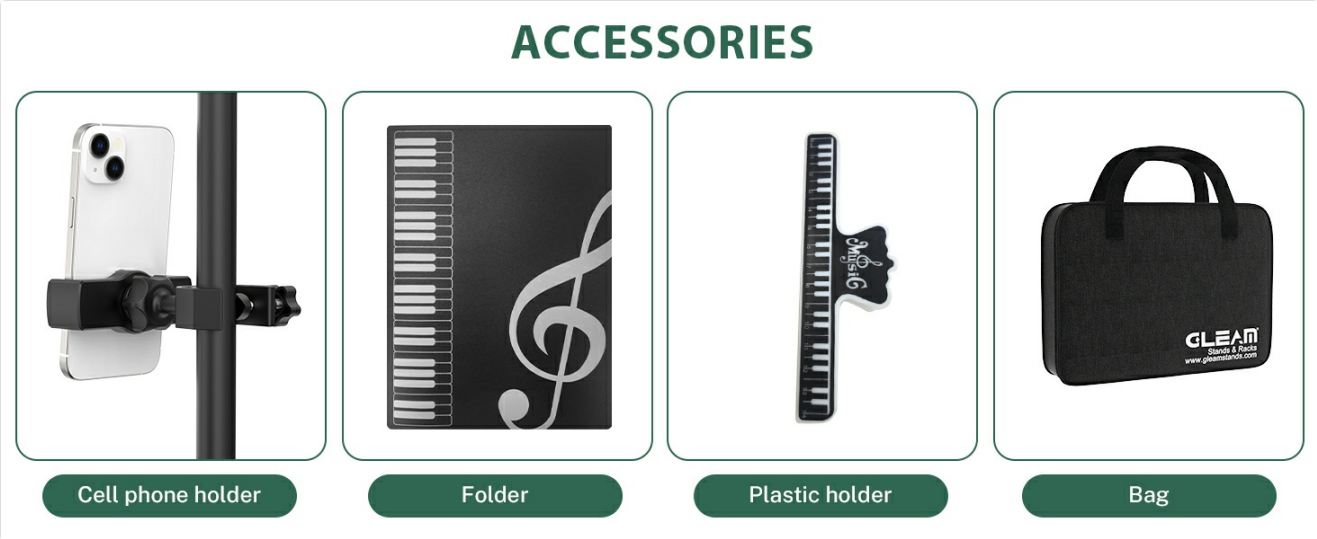


Image 2.1: Overview of included accessories: cell phone holder, folder, plastic holder, and carrying bag.

3. Setup Instructions

Follow these steps to assemble your GLEAM Sheet Music Stand:

1. **Unfold the Tripod Base:** Gently spread the legs of the tripod base until they are fully extended and stable. Ensure the base is on a flat, stable surface.
2. **Attach the Music Tray:** Align the music tray with the top pole of the stand. Secure it by tightening the knob on the back of the tray.
3. **Adjust Height:** Loosen the height adjustment knobs on the main pole. Extend the pole to your desired height (between 35 and 55 inches) and tighten the knobs securely.
4. **Attach Phone Holder (Optional):** The phone holder can be clamped onto the main pole at a comfortable viewing height. Tighten its screw to secure it.

Your browser does not support the video tag.

Video 3.1: Official GLEAM video demonstrating the assembly and features of the Sheet Music Stand.

4. Operating Instructions

4.1. Height Adjustment

The stand offers an extended height range from 35 inches to 55 inches, suitable for both seated and standing use. To adjust the height, loosen the locking knobs on the central pole, slide the pole to the desired height, and then firmly tighten the knobs to secure it.

4.2. Angle Adjustment

The music tray can be tilted up to 180 degrees. Locate the smooth-turning knob on the back of the music tray. Loosen this knob, adjust the tray to your preferred viewing angle, and then tighten the knob to lock the angle in place.



Image 4.1: Close-up of the screw handle used to adjust the angle of the music tray.

4.3. Using the Holding Tray and Clips

The deep 2-inch tray is designed to accommodate thick music books and binders. It features reinforced, high-tension spring arms to firmly grip sheet music, tablets, or even lightweight laptops, ensuring they remain stable during use.



Image 4.2: Illustration of the 2-inch deep tray, wide enough to hold books up to 5 inches thick.

4.4. Desktop Book Stand Conversion

To convert your music stand into a desktop book stand, detach the music tray from the main pole. Attach the included desktop stand adapter to the back of the music tray. This allows you to place the tray on any flat surface for tabletop use.



Image 4.3: The music stand tray configured for use as a desktop book stand, holding a tablet.

4.5. Versatile Applications

The GLEAM GMS-009 is suitable for various uses beyond just sheet music, including:

- Holding music books and binders
- Supporting laptops for presentations or practice
- Serving as a projector stand
- Holding tablets or e-readers

USING SITUATION

Suitable For These: Laptop/Music books/Projector/Tablet

Load Capacity:10 lb/4.5 kg

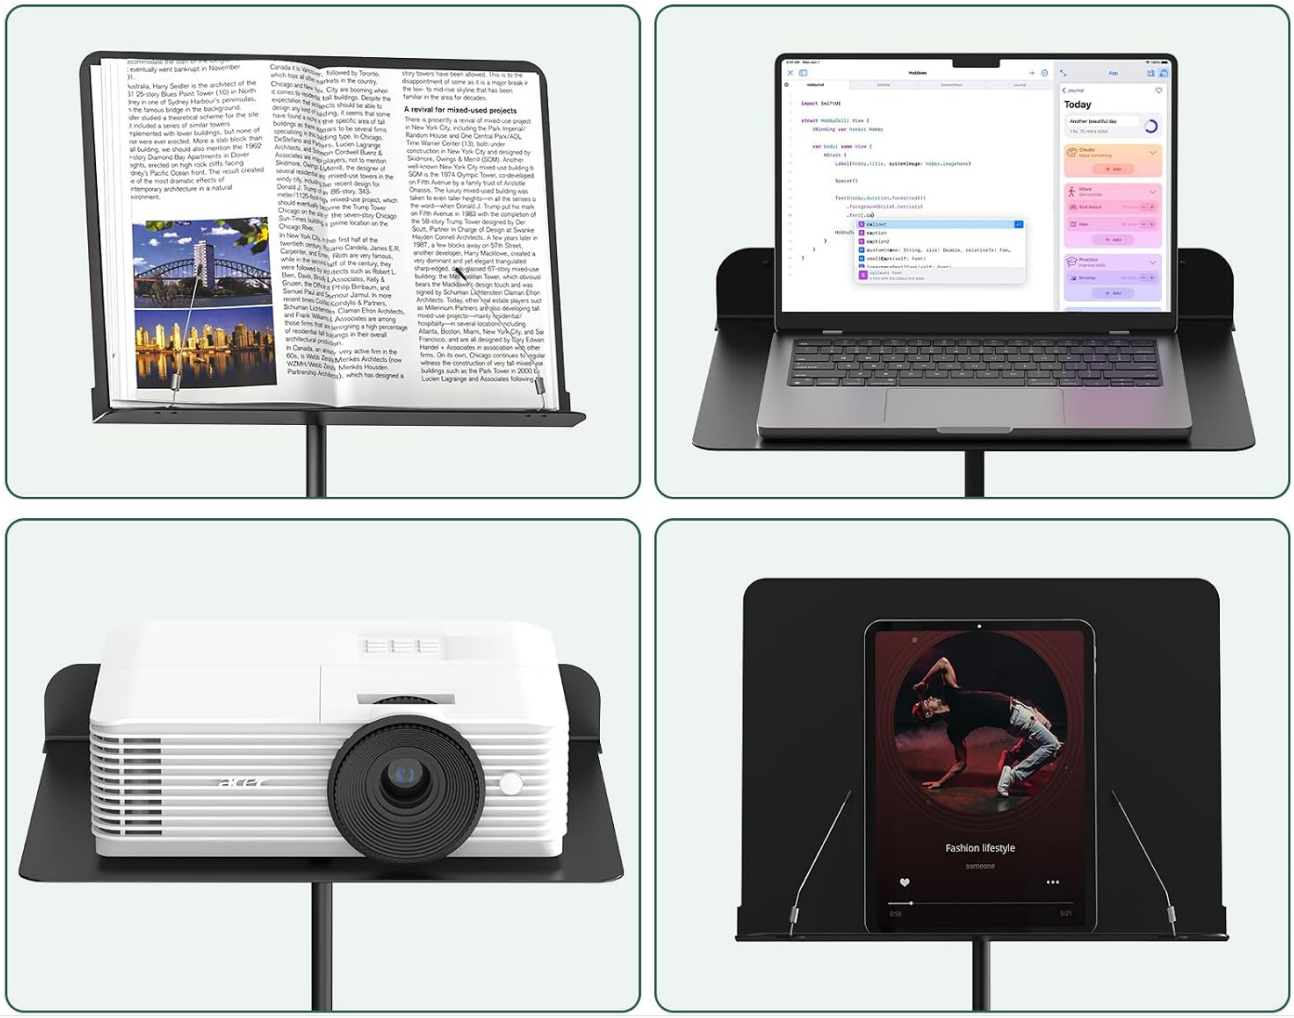


Image 4.4: Examples of the stand's versatility, holding a music book, laptop, projector, and tablet.

5. Maintenance

To ensure the longevity and optimal performance of your GLEAM Sheet Music Stand, follow these maintenance guidelines:

- **Cleaning:** Wipe down the metal surfaces with a soft, dry cloth. For stubborn dirt, use a slightly damp cloth and mild soap, then dry thoroughly. Avoid abrasive cleaners or solvents.
- **Lubrication:** Periodically check the adjustment mechanisms (knobs, sliding poles). If they become stiff, apply a small amount of silicone-based lubricant to ensure smooth operation.
- **Storage:** When not in use, fold the stand and store it in the included carrying bag to protect it from dust and scratches. Store in a dry environment.
- **Inspection:** Regularly inspect all screws and connections to ensure they are tight. Tighten any loose parts to maintain stability.

6. Troubleshooting

If you encounter any issues with your GLEAM Sheet Music Stand, refer to the following common problems and solutions:

- **Stand is Unstable:**
  - Ensure the tripod legs are fully extended and evenly spread on a flat surface.
  - Check that all locking knobs (for height and angle) are securely tightened.
  - Verify that the music tray is properly attached to the main pole.
- **Difficulty Adjusting Height or Angle:**
  - Loosen the respective adjustment knobs completely before attempting to move the parts.
  - If movement is still stiff, apply a small amount of silicone lubricant to the sliding parts or pivot points.
- **Music Sheets Slip:**
  - Ensure the spring-loaded page holders are correctly positioned to secure your sheet music.
  - Use the included secure music clip for additional hold, especially in windy conditions or with thicker books.

7. Specifications

Feature	Detail
Brand	GLEAM
Model Number	GMS-009
Material	Alloy Steel
Color	Black
Item Weight	2.4 kg
Product Dimensions (D x W x H)	12.5"D x 16.5"W x 55"H
Height Adjustment Range	35 inches to 55 inches
Maximum Weight Recommendation	4.5 kg
UPC	682838975523

8. Warranty Information

This GLEAM product comes with a**2-year warranty**. For warranty claims or service, please retain your proof of purchase and contact GLEAM customer support.

9. Customer Support

For further assistance, technical support, or inquiries regarding your GLEAM Sheet Music Stand, please contact us through the following channels:

- **Online:** Visit the official GLEAM website or your retailer's support page.
- **Email:** Refer to the contact information provided with your purchase or on the product packaging.

- **Amazon Support:** For purchases made on Amazon, you can contact Amazon Customer Service for assistance.

We are committed to providing excellent customer service and ensuring your satisfaction with GLEAM products.

© 2026 GLEAM. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question