Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

VOYOR WF200

VOYOR Water Flosser WF200 Instruction Manual

Model: WF200

1. Product Overview

The VOYOR Water Flosser WF200 is a cordless, rechargeable dental water jet flosser designed for deep teeth cleaning and improved oral hygiene. It features multiple working modes and is IPX7 waterproof for convenient use.



Figure 1: VOYOR Water Flosser WF200 and included accessories.

Key Features:

- **Deep Teeth Cleaning:** Delivers 1800 powerful water pulses per minute, effectively removing food residue from hard-to-reach areas, ideal for braces, crowns, and bridges.
- **Three Working Modes:** Includes Normal (powerful rinsing), Soft (gentle rinsing), and Pulse (gum massage) modes to suit various dental conditions.
- **360° Rotating Nozzles:** Features a rotary design for easy cleaning at any angle. Comes with four different types of nozzles for personalized cleaning.
- **Waterproof & Rechargeable:** IPX7 waterproof rating allows safe use in the shower or bathroom. Powered by a 1500 mAh lithium battery, providing approximately one month of use on a four-hour charge.
- **Detachable Water Tank:** Equipped with a 300 ml (10 oz) water tank, reducing the need for frequent refills. The wide mouth design facilitates thorough cleaning of limescale.



Figure 2: Overview of the VOYOR Water Flosser's core advantages.

Product Components:



Figure 3: Detailed view of the VOYOR Water Flosser's components and controls.

Official Product Video:

Your browser does not support the video tag.

Video 1: VOYOR Water Flosser Cordless Rechargeable - Professional Water Pick with 3 Modes, IPX7 Waterproof. This video provides a comprehensive overview of the product's features and benefits.

2. Setup

1. **Charge the Device:** Before first use, fully charge the device. It is powered by a 1500 mAh lithium battery. A full charge takes approximately four hours and provides about one month of use.
2. **Install the Nozzle:** Select the desired nozzle type. Press the nozzle onto the holder until it clicks securely into place.
3. **Fill the Water Tank:** Detach the water tank or open the fill port. Fill the tank with water, ensuring the temperature is below 40°C (104°F). The tank has a 300 ml capacity.

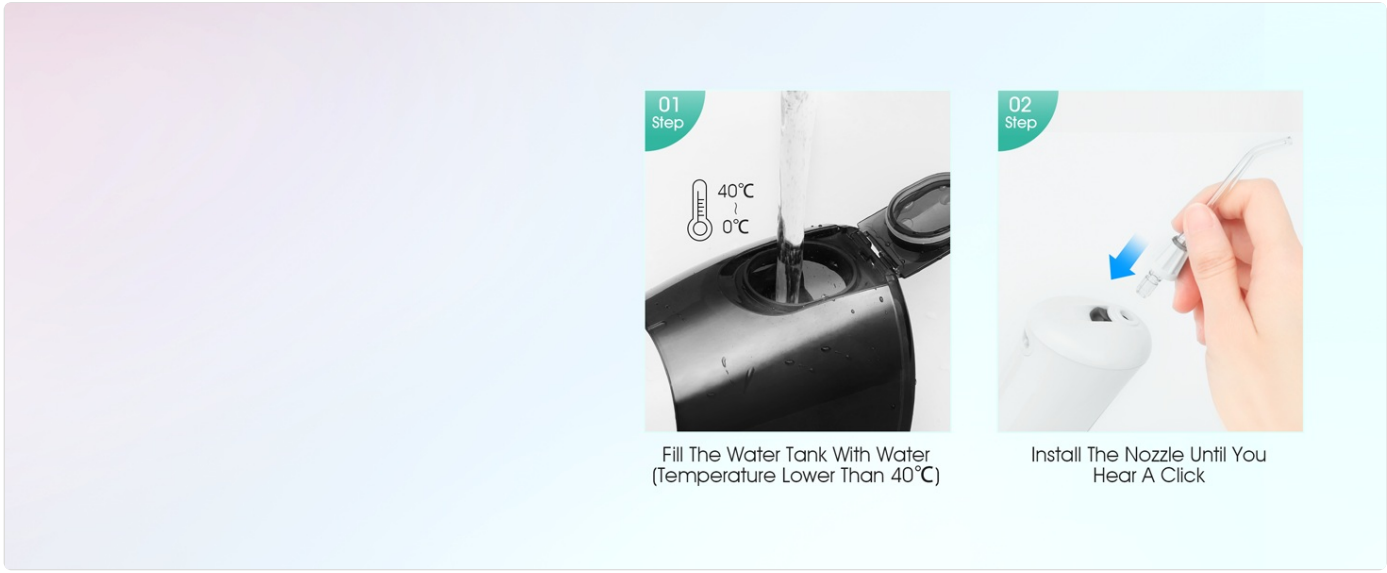


Figure 4: Instructions for filling the water tank and attaching the nozzle.

3. Operating Instructions

1. **Position the Nozzle:** Place the nozzle inside your mouth.
2. **Start the Device:** Press the On/Off button to turn on the water flosser.
3. **Select Working Mode:** Use the 'Mode' button to choose between Normal, Soft, or Pulse mode. For first-time users, it is recommended to start with "Soft" mode.
4. **Begin Flossing:** Direct the water jet flow at a 90-degree angle against your teeth and gums. Move the flosser slowly along your gumline and between teeth for effective oral cleansing. Keep your mouth slightly open to allow water to flow out into the sink.
5. **Turn Off:** Click the On/Off button again to turn off the device when finished.

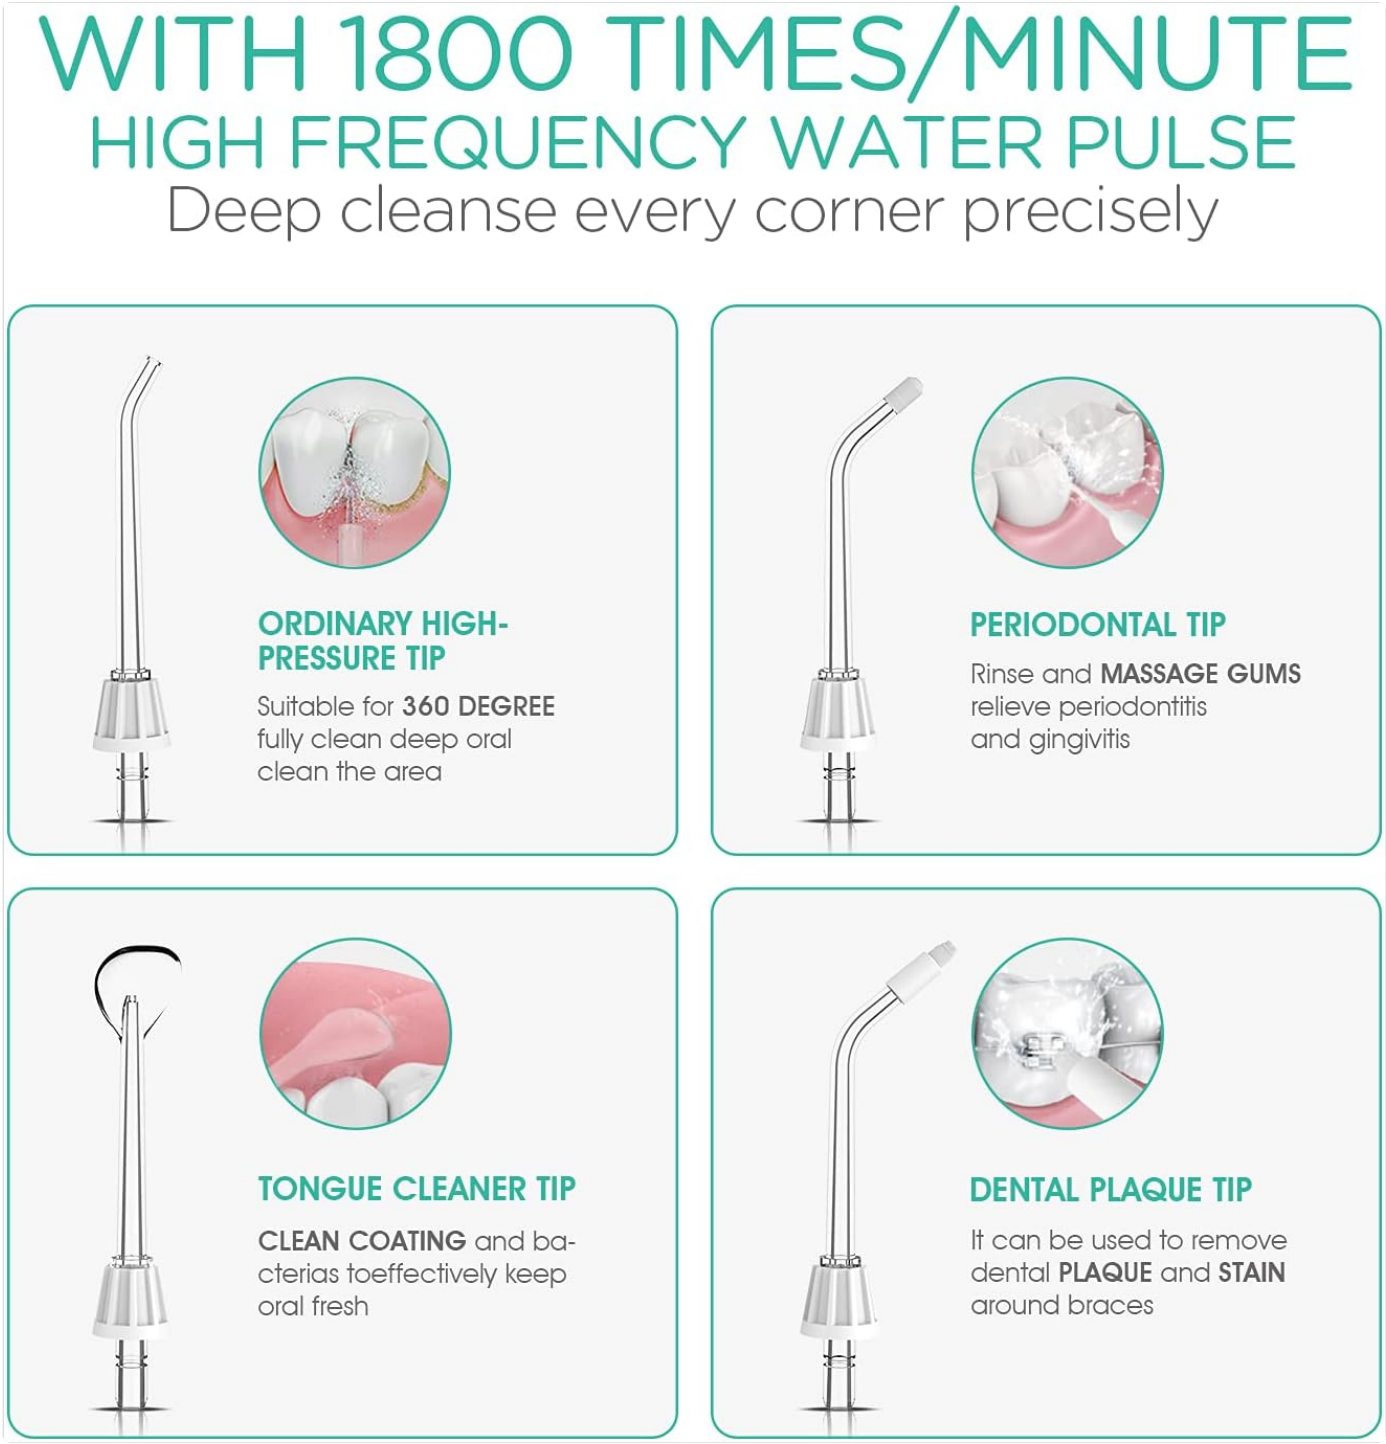


Figure 5: Proper technique for using the VOYOR Water Flosser.

Official Product Video:

Your browser does not support the video tag.

Video 2: Take care of your teeth and take care of your health. This video demonstrates the flosser in use and its benefits.

4. Maintenance

- **Empty and Clean Tank:** After each use, drain any remaining water from the tank. The detachable wide mouth design makes it easy to thoroughly clean the tank and prevent limescale buildup.
- **Wipe Device:** Wipe the device with a clean, dry cloth after each use.
- **Nozzle Replacement:** Replace the nozzle every 6 months. To remove, press the nozzle release button.
- **Charging Port:** Always remember to cover the charge port tightly when using the device, especially in wet environments, to maintain its IPX7 waterproof integrity.

- **Storage:** Store the nozzles hygienically in the provided storage box.

Safety Information:

- Do not use with water above 40°C (104°F).
- Keep away from children.
- Do not submerge the device in water.
- Always follow the charging instructions to prevent electrical hazards.

5. Troubleshooting

No specific troubleshooting steps are provided in the available product information. If you encounter issues with your VOYOR Water Flosser WF200, please refer to the warranty and support section for assistance.

6. Specifications

Feature	Detail
Brand	VOYOR
Model Number	WF200
Product Dimensions	4.02 x 3.43 x 8.78 inches
Item Weight	8.8 ounces
Power Source	Battery Powered (1500 mAh Lithium Battery)
Special Feature	Portable, Cordless, IPX7 Waterproof
Water Pulse Rate	1800 per minute
Water Tank Capacity	300 ml (10 oz)
Country of Origin	China

7. Warranty & Support

Specific warranty details and direct support contact information are not available in the provided product data. For warranty claims or technical assistance, please refer to the product packaging or contact VOYOR customer service through their official website or the retailer where the product was purchased.

Legal Disclaimer: Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition.

© 2025 VOYOR. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07DBQ8Z52

More documents and user manuals: **https://manuals.plus/**