Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

eufy 11S (T2108)

eufy BoostIQ RoboVac 11S (Slim) Robot Vacuum Cleaner User Manual

Model: 11S (T2108) | Brand: eufy

Introduction Safety Information What's in the Box Setup Operation Maintenance Troubleshooting Specifications Warranty & Support

1. Introduction

The eufy BoostIQ RoboVac 11S (Slim) is a super-thin, powerful, and quiet robotic vacuum cleaner designed to efficiently clean hard floors to medium-pile carpets. Its advanced features ensure a thorough cleaning experience with minimal effort.



Figure 1: eufy BoostIQ RoboVac 11S (Slim) Robot Vacuum Cleaner. This image displays the top-down view of the white, circular robot vacuum with the eufy logo and power button.

2. Important Safety Information

Please read all instructions carefully before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Household Use Only:** This appliance is intended for indoor household use only. Do not use it for commercial or industrial purposes.
- **Avoid Water:** Do not immerse the appliance, power cord, or plug in water or other liquids. Do not use in wet

environments.

- **Supervision:** Close supervision is necessary when the appliance is used by or near children.
- **Power Source:** Use only the provided AC power adapter. Using an incorrect adapter may result in damage or fire.
- **Obstacles:** Remove power cords, small objects, and fragile items from the floor before operation to prevent entanglement or damage.
- **Maintenance:** Perform maintenance only as described in this manual. Disconnect power before cleaning or performing maintenance.

3. What's in the Box

Verify that all components are present and in good condition upon unboxing:

- 1 x eufy BoostIQ RoboVac 11S (Slim) Robotic Vacuum Cleaner
- 1 x Charging Base
- 1 x Remote Control (with 2 AAA batteries included)
- 1 x AC Power Adapter
- 1 x Cleaning Tool
- 1 x Side Brush (additional spare included)
- 1 x User Manual & Warranty Information

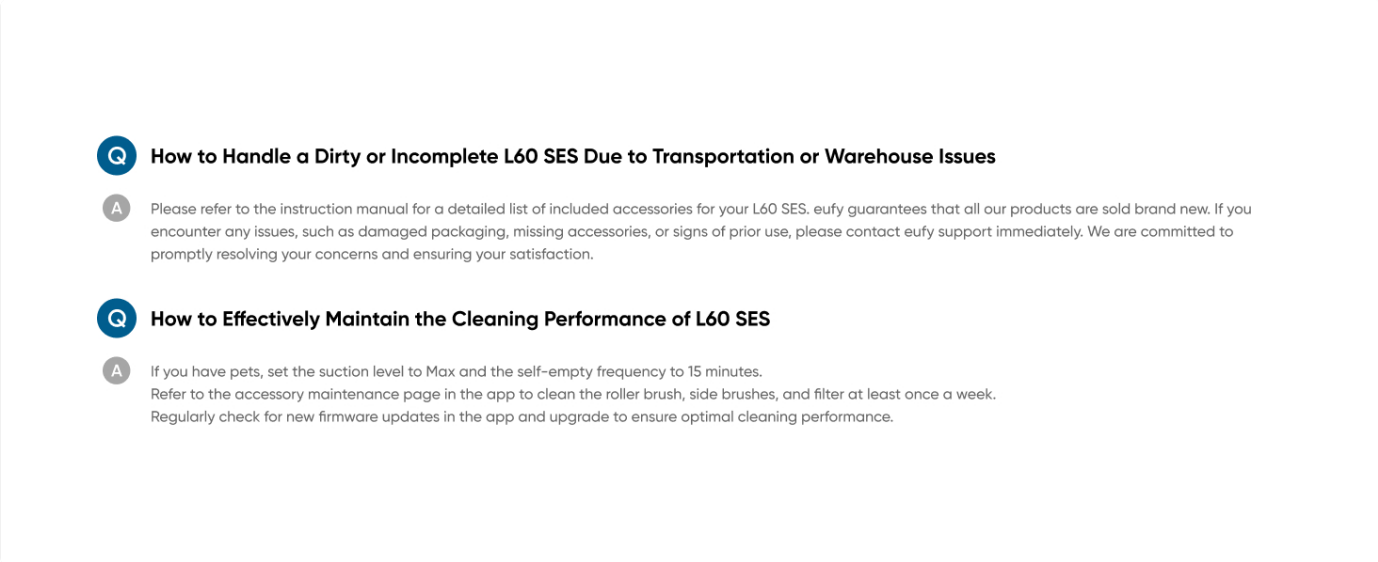


Figure 2: Components included with the RoboVac. This image shows the robot vacuum, charging base, remote control, AC power adapter, cleaning tool, and side brushes.

4. Setup Guide

1. **Prepare the Cleaning Area:**
    - Remove power cords and small objects from the floor that could entangle the robot.
    - Clear any obstacles that might block the RoboVac's path.
    - For optimal cleaning, ensure the area is free of clutter.
2. **Install Side Brushes:**
    - Turn the RoboVac over.
    - Attach the side brushes by pressing them onto the posts until they click into place.

3. **Place the Charging Base:**
    - Place the charging base on a hard, level surface against a wall.
    - Ensure there is at least 3 ft (1 m) of clear space to the front and 1.5 ft (0.5 m) to each side of the charging base.
    - Connect the AC power adapter to the charging base and plug the other end into a wall outlet.
4. **Initial Charge:**
    - Place the RoboVac onto the charging base, ensuring the charging pins align.
    - The indicator light on the RoboVac will pulse blue during charging and turn solid blue when fully charged.
    - Allow the RoboVac to fully charge before its first use (approximately 5-6 hours).



Figure 3: The RoboVac's ultra-thin 2.85" design allows it to glide under furniture for thorough cleaning. This image shows the robot vacuum cleaning under a wooden cabinet, highlighting its slim profile.

5. Operating Instructions

5.1 Powering On/Off

- To power on, press the power button on the RoboVac or the remote control.
- To power off, press and hold the power button on the RoboVac until the indicator light turns off.

5.2 Cleaning Modes

The RoboVac offers several cleaning modes to suit different needs:

- **Auto Cleaning:** The default mode. The RoboVac automatically cleans until the battery is low, then returns to the charging base.
- **Spot Cleaning:** Ideal for concentrated areas of dirt. The RoboVac intensely cleans a specific area in a spiral pattern.
- **Edge Cleaning:** The RoboVac cleans along walls and furniture edges.
- **Single Room Cleaning:** Cleans a single room thoroughly.



Figure 4: The remote control for the eufy RoboVac 11S. This image shows a hand holding the remote control, with various cleaning mode icons displayed below it, indicating easy set-and-forget cleaning options.

5.3 BoostIQ Technology

The RoboVac features BoostIQ Technology, which automatically increases suction power within 1.5 seconds when extra vacuuming strength is needed, such as when transitioning from hard floors to carpets.



Figure 5: BoostIQ Technology maximizes cleaning on carpeting. This image illustrates the RoboVac moving from a hard floor to a carpet, with a graphic showing increased suction power on the carpeted area.

5.4 Quiet Operation

The RoboVac 11S operates quietly, at a volume no louder than an operating microwave, allowing for undisturbed cleaning.



Figure 6: The RoboVac 11S operates quietly, making it suitable for use even when a child is sleeping nearby. This image shows the robot vacuum cleaning near a sleeping child, emphasizing its quiet operation.

6. Maintenance

Regular maintenance is crucial for optimal performance of your RoboVac. Always power off the RoboVac and disconnect it from the charging base before performing any maintenance.

6.1 Emptying the Dustbox

Empty the dustbox after each use or when the 'Dustbox Full' indicator illuminates.

1. Press the dustbox release button and pull out the dustbox.
2. Open the dustbox cover and empty its contents.
3. Tap the dustbox to remove excess dirt.
4. Reinsert the dustbox until it clicks into place.



Figure 7: The large 0.6L dustbox of the eufy RoboVac 11S. This image shows the dustbox removed from the robot vacuum, illustrating its capacity.

6.2 Cleaning the Filter

Clean the filter weekly or as needed. The filter is washable.

1. Remove the dustbox.
2. Take out the filter assembly.
3. Brush off any debris from the filter. Rinse the filter under running water.
4. Allow the filter to air dry completely before reinserting. Do not expose to direct sunlight.



Figure 8: The washable filter component of the RoboVac. This image shows the filter removed from the dustbin, ready for cleaning.

6.3 Cleaning the Rolling Brush

Clean the rolling brush weekly to prevent hair and debris accumulation.

1. Turn the RoboVac over and press the release tabs to open the brush guard.
2. Lift out the rolling brush.
3. Use the provided cleaning tool to remove hair and debris from the brush.
4. Reinsert the rolling brush and close the brush guard until it clicks.



Figure 9: The rolling brush of the RoboVac. This image shows the main rolling brush, which should be regularly cleaned to remove tangled hair and debris.

6.4 Cleaning the Side Brushes

Inspect side brushes regularly for wear and tear. Replace them if they are damaged.

- Pull the side brushes off their posts.
- Remove any hair or debris wrapped around the brushes or posts.
- Reattach the brushes by pressing them firmly onto the posts.



Figure 10: A side brush of the RoboVac. This image shows one of the side brushes, which sweep debris into the vacuum's path.

6.5 Cleaning the Sensors and Charging Pins

Wipe the drop sensors and charging pins with a dry cloth monthly.

- Locate the drop sensors on the bottom of the RoboVac.
- Wipe them clean with a dry cloth.

- Clean the charging pins on both the RoboVac and the charging base.

7. Troubleshooting

If your RoboVac encounters an issue, refer to the following common solutions:

7.1 General Performance Issues

- **Reduced Suction/Poor Cleaning:**
  - Empty the dustbox.
  - Clean the filter and ensure it is dry before reinstallation.
  - Clean the rolling brush and side brushes, removing any tangled hair or debris.
  - Check for blockages in the suction inlet.
- **RoboVac Not Charging:**
  - Ensure the charging base is powered on and the indicator light is solid.
  - Clean the charging pins on both the RoboVac and the charging base.
  - Verify the RoboVac is correctly positioned on the charging base.
- **RoboVac Gets Stuck Frequently:**
  - Clear power cords, small toys, and other obstacles from the cleaning path.
  - For long-pile carpets or areas with low furniture, consider using boundary strips (sold separately) to restrict access.
  - Ensure drop sensors are clean to prevent falls from elevated surfaces.

7.2 Error Indicators (Flashing Red Light)

The RoboVac will emit a series of beeps when it is in trouble, indicated by a flashing or solid red light. Refer to the table below for common issues:

Beeps	Issue
One beep	RoboVac is stuck or a wheel is hanging in mid-air.
Two beeps	RoboVac's bumper is stuck.
Three beeps	RoboVac's drop sensors are dirty.
Four beeps	RoboVac's power level is too low.

For solid red indicator light issues, consult the full user manual for more information.

8. Specifications

Feature	Detail
Brand	eufy
Model Name	eufy 11S
Special Feature	Super-Thin, Quiet, Self-Charging

Feature	Detail
Color	White
Product Dimensions	12.8"L x 12.8"W x 2.85"H
Filter Type	Washable
Battery Life	Up to 100 minutes (under standard suction)
Voltage	240 Volts
Dustbox Capacity	600 Milliliters
Power Source	Battery Powered
Control Method	Remote
Item Weight	6.34 pounds
Item Model Number	T2108



Figure 11: Dimensions of the eufy RoboVac 11S. This image provides a diagram with measurements for the robot vacuum.

9. Warranty & Support

9.1 Warranty Information

The eufy BoostIQ RoboVac 11S (Slim) comes with a**12-month warranty** from the date of purchase. This warranty covers manufacturing defects and issues arising from normal use. Please retain your proof of purchase for warranty claims.

9.2 Customer Support

For any questions, technical support, or warranty inquiries, please contact eufy customer service. You can also refer to the official user manual for detailed information:

- **Official User Manual (PDF):** Download PDF
- **eufy Support Website:** Visit the official eufy website for FAQs and contact options.

© 2023 eufy. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07DF9GVK9

More documents and user manuals: **https://manuals.plus/**