YING RAY 2018062801

YING RAY Replacement Remote Control Instruction Manual for Cooper & Hunter C&H Air Conditioner Model RG36F1/BGEFU1

Introduction

This manual provides detailed instructions for the YING RAY replacement remote control, designed for use with Cooper & Hunter C&H Air Conditioner models RG36F1/BGEFU1 and RG36F1(B)/BGEFU1. This remote control operates in Fahrenheit and requires no programming. Simply insert batteries to begin operation.

Product Overview

The YING RAY replacement remote control is a direct functional equivalent for specific Cooper & Hunter C&H air conditioner models. It features a clear LCD display and ergonomically arranged buttons for easy access to all essential air conditioner functions.



Image: Front view of the YING RAY replacement remote control, displaying temperature and mode settings.





Image: Angled view of the remote control, highlighting its design and button layout.

Setup

Battery Installation

To install batteries, follow these steps:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two (2) AAA 1.5V ordinary batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

The remote control does not require programming and will function immediately after battery installation.





Image: Back of the remote control with the battery cover in place.





Image: Back of the remote control with the battery compartment open, ready for battery insertion.

Operating Instructions

This section details the functions of each button and how to operate your air conditioner using the remote control.

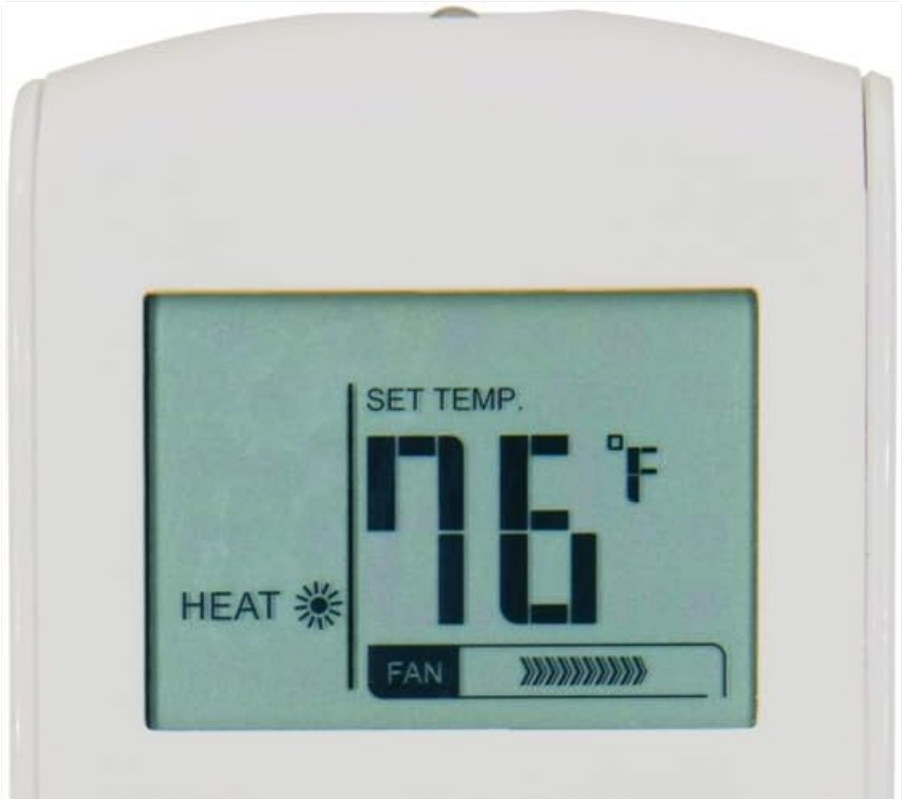




Image: Detailed view of the remote control's buttons and display.

Button Functions

- **ON/OFF:** Powers the air conditioner on or off.
- **MODE:** Cycles through operating modes: Auto, Cool, Dry, Fan, Heat.
- **TEMP ▲/▼:** Adjusts the set temperature up or down.
- **FAN:** Selects fan speed: Auto, Low, Med, High.
- **SLEEP:** Activates or deactivates the sleep mode for energy-saving and quiet operation.
- **SWING:** Controls the vertical swing of the air deflector.
- **DIRECT:** Adjusts the horizontal direction of the air deflector.
- **TURBO:** Initiates rapid cooling or heating for a short period.

- **LED:** Turns the air conditioner's display light on or off.
- **SHORT CUT:** Recalls your favorite settings.
- **TIMER ON:** Sets a timer for the air conditioner to turn on automatically.
- **TIMER OFF:** Sets a timer for the air conditioner to turn off automatically.

Basic Operation

1. **Turning On/Off:** Press the **ON/OFF** button once to turn the unit on, and again to turn it off.
2. **Adjusting Temperature:** Use the **TEMP ▲** or **TEMP ▼** buttons to set your desired temperature. The display shows temperature in Fahrenheit.
3. **Changing Modes:** Press the **MODE** button repeatedly to cycle through available operating modes (Auto, Cool, Dry, Fan, Heat).
4. **Setting Fan Speed:** Press the **FAN** button to adjust the fan speed.
5. **Using Timer Functions:** Press **TIMER ON** or **TIMER OFF** and then use the **TEMP ▲/▼** buttons to set the desired time. Confirm with the timer button again or wait for the setting to apply.

Maintenance

Cleaning the Remote Control

To maintain optimal performance and appearance, clean the remote control regularly:

- Wipe the surface with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water and a mild detergent, then wipe dry immediately.
- Do not use abrasive cleaners, alcohol, or corrosive liquids, as these can damage the remote's surface or internal components.

Battery Replacement

Replace batteries when the remote control's display becomes dim or the remote becomes unresponsive. Always replace both batteries simultaneously with new AAA 1.5V ordinary batteries. Do not mix old and new batteries or different types of batteries.

Troubleshooting

- **Remote not responding:**
  - Check if the batteries are inserted correctly with the correct polarity.
  - Replace the batteries with new ones.
  - Ensure there is a clear line of sight between the remote control and the air conditioner's receiver. Remove any obstructions.
  - Confirm that the remote control is compatible with your specific Cooper & Hunter C&H air conditioner model (RG36F1/BGEFU1 or RG36F1(B)/BGEFU1).
- **Display is dim or blank:**
  - This usually indicates low battery power. Replace the batteries.
- **Air conditioner not responding to specific commands:**
  - Ensure you are within the effective range of the air conditioner.
  - Verify that the air conditioner unit itself is powered on and functioning correctly.

Specifications

Product Model	2018062801 (YING RAY)
Compatible AC Models	Cooper & Hunter C&H RG36F1/BGEFU1, RG36F1(B)/BGEFU1
Battery Type	2 x AAA 1.5V Ordinary Batteries (not included)
Display Unit	Fahrenheit
Dimensions	Approximately 6 x 3 x 1 inches
Item Weight	Approximately 0.81 ounces

Warranty and Support

As a replacement remote control, specific warranty details may vary. Please refer to the seller or retailer from whom you purchased this product for information regarding warranty coverage and return policies. For further assistance or inquiries, contact the seller directly.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question