Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Bush Furniture WC53296-03

Bush Furniture Fairview Collection Accent Cabinet with Doors and Shelves

Model: WC53296-03

Introduction

This instruction manual provides comprehensive guidance for the assembly, operation, and maintenance of your Bush Furniture Fairview Collection Accent Cabinet. Designed for versatility, this cabinet offers storage solutions for various spaces, including home offices, living rooms, and dining areas. Please read all instructions carefully before beginning assembly and retain this manual for future reference.



Image: The Bush Furniture Fairview Collection Accent Cabinet, featuring two louvered doors and an Antique White finish with a contrasting top.

Safety Information

- **Read All Instructions:** Ensure you understand all assembly steps before proceeding.
- **Two-Person Assembly:** For safety and ease, assembly is recommended with two people.
- **Use Correct Tools:** Only use the tools specified in the assembly guide. A screwdriver is typically required.
- **Secure Placement:** Place the cabinet on a level, stable surface. Consider using wall anchor kits (if provided) to prevent tipping, especially in households with children or pets.
- **Weight Limits:** Do not exceed the specified weight capacity for shelves (50 pounds per shelf). Overloading can cause damage or injury.
- **Keep Small Parts Away:** During assembly, keep small parts and hardware away from children and pets to prevent choking hazards.

- **Proposition 65 Warning:** This product may contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

Package Contents

Before beginning assembly, verify that all components and hardware are present. Refer to the separate parts list included in your packaging. If any parts are missing or damaged, contact customer support immediately.

- Cabinet Panels (Top, Bottom, Sides, Back, Shelves, Doors)
- Hardware Pack (Screws, dowels, cam locks, hinges, handles, shelf pins)
- Assembly Instructions Booklet

Setup and Assembly

Follow the step-by-step instructions provided in the separate assembly guide included with your product. The general process involves:

1. **Unpacking:** Carefully remove all components from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Side Panel Assembly:** Attach the side panels to the base and top panels using the provided hardware.
3. **Back Panel Installation:** Secure the back panel to the assembled frame.
4. **Shelf Installation:** Insert shelf pins into the desired height positions and place the adjustable shelves. One fixed shelf is also included.
5. **Door and Hinge Attachment:** Attach the hinges to the doors and then mount the doors to the cabinet frame. Ensure hinges are properly aligned for smooth operation.
6. **Handle Installation:** Secure the handles to the cabinet doors.
7. **Final Adjustments:** Adjust door alignment using the hinge screws if necessary.



Image: Detail of a Euro-style hinge, illustrating the mechanism for door attachment and adjustment.

Operating and Usage

Your Bush Furniture Accent Cabinet is designed for versatile storage. Here are guidelines for its use:

- **Adjustable Shelves:** The cabinet features two adjustable shelves and one fixed shelf. To adjust an adjustable shelf, remove the shelf pins, reposition them to the desired height, and then place the shelf back onto the pins.
- **Door Operation:** The louvered doors open and close smoothly on Euro-style hinges. Ensure nothing obstructs their path.
- **Storage Capacity:** Each shelf can support up to 50 pounds. Distribute weight evenly to maintain stability. This cabinet is suitable for storing clothes, files, folders, jewelry, and various household items.
- **Placement:** This cabinet is suitable for various rooms including bedrooms, classrooms, dining rooms, home offices, and living rooms.



Image: The accent cabinet functioning as a coffee bar, demonstrating its utility in a kitchen or dining area.



Image: A complete home office setup featuring the accent cabinet alongside other coordinating furniture from the Bush Furniture Fairview Collection.

Maintenance

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
- **Spills:** Clean spills immediately to prevent staining or damage to the engineered wood.
- **Hardware Check:** Periodically check all screws and fasteners to ensure they remain tight. Retighten as needed.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause fading or discoloration of the finish.
- **Protect Surfaces:** Use coasters or mats under hot or wet items placed on the cabinet top.



Image: A close-up view of the cabinet's top surface, highlighting the engineered wood material and finish.

Troubleshooting

Problem	Possible Cause	Solution
Doors do not align properly.	Hinges are not adjusted correctly.	Adjust the screws on the Euro-style hinges to align the doors. Refer to the assembly guide for detailed hinge adjustment instructions.
Cabinet feels wobbly.	Loose fasteners or uneven floor.	Ensure all assembly screws are tightened. If the floor is uneven, use furniture levelers or shims under the base.
Missing parts or damaged components.	Manufacturing error or shipping damage.	Do not proceed with assembly. Contact Bush Furniture customer support immediately for replacement parts.

Problem	Possible Cause	Solution
Shelves are difficult to insert or remove.	Shelf pins are not fully inserted or misaligned.	Ensure shelf pins are fully seated in the pre-drilled holes and are at the same height on both sides.

Specifications

Brand: Bush Furniture

Model Number: WC53296-03

Product Dimensions: 12.76"D x 31.73"W x 30.71"H (32.4 cm D x 80.6 cm W x 78.0 cm H)

Color: Antique White

Material: Engineered Wood (Frame and Top)

Handle Material: Pewter

Number of Shelves: 3 (Two adjustable, one fixed)

Weight Limit per Shelf: 50 Pounds

Item Weight: 37.2 Pounds

Assembly Required: Yes

Mounting Type: Floor Mount, Freestanding

UPC: 042976077150

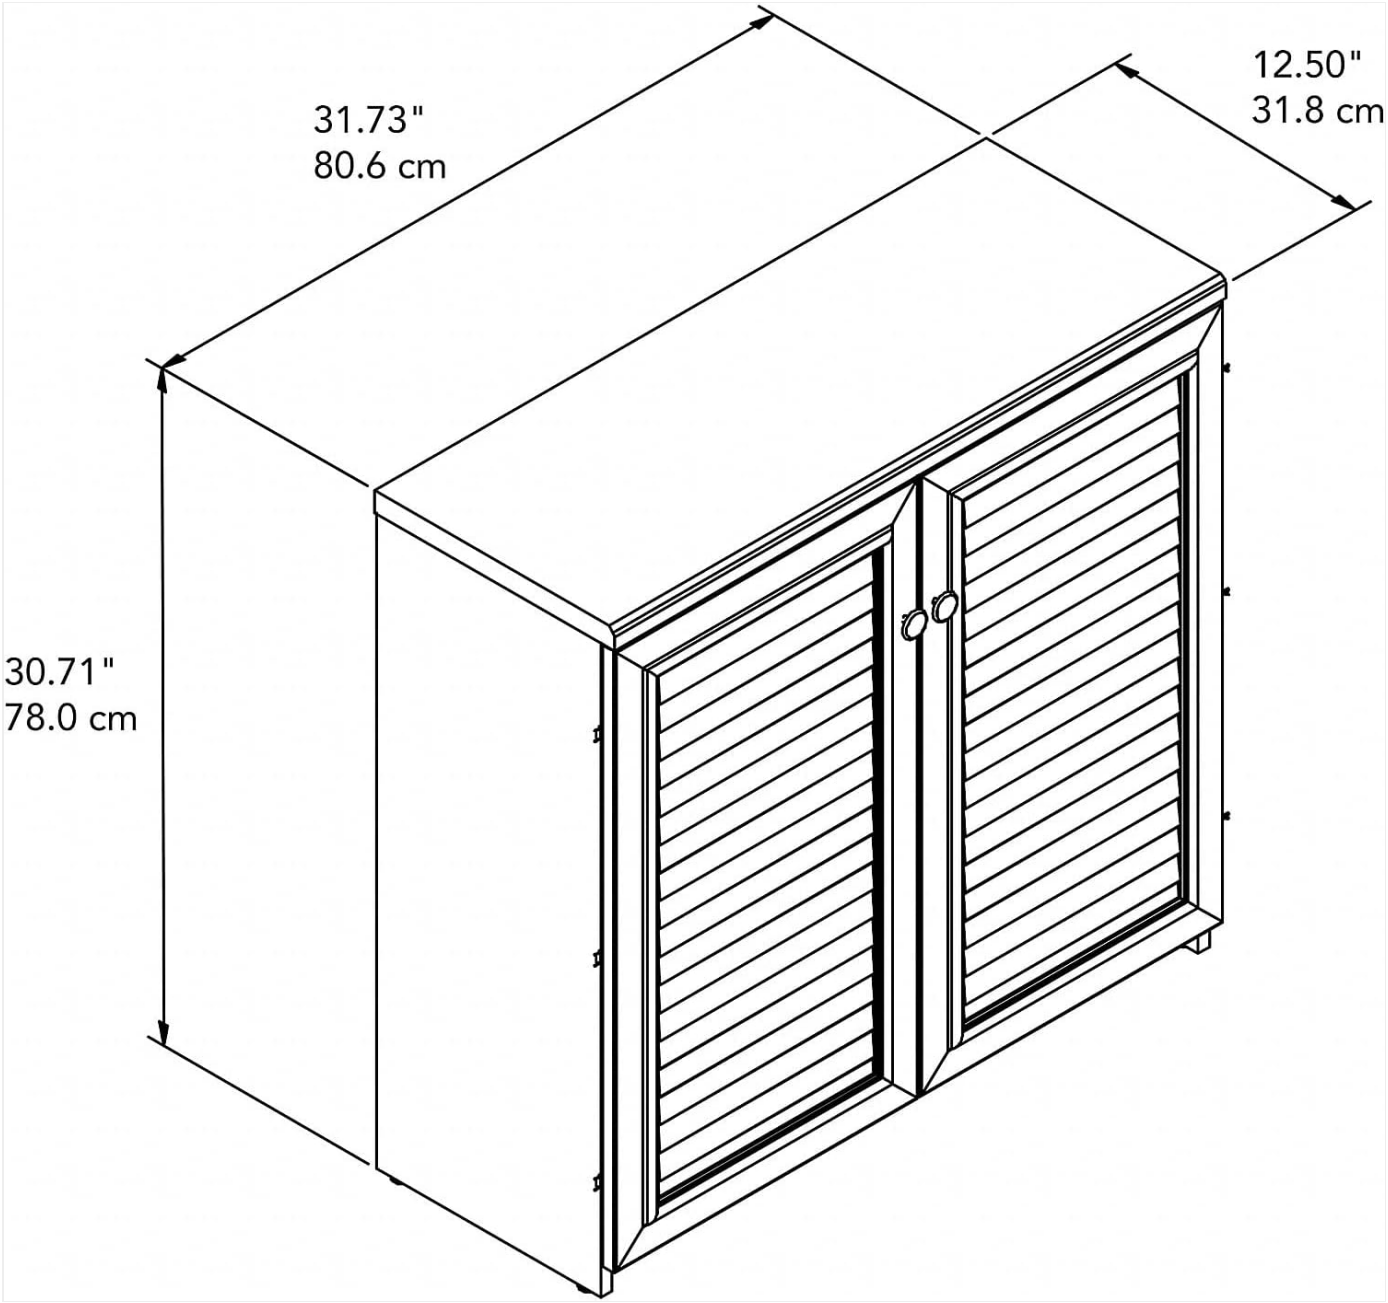


Image: Technical diagram illustrating the precise dimensions of the accent cabinet: 31.73 inches wide, 12.76 inches deep, and 30.71 inches high.

Warranty and Support

Bush Furniture stands behind the quality of its products. For specific warranty details, please refer to the warranty card included with your purchase or visit the official Bush Furniture website. For customer support, including assistance with assembly, missing parts, or product inquiries, please contact Bush Furniture directly. Contact information is typically provided in the packaging or on their official website.

Online Resources: You may find additional support and product information by visiting the Bush Furniture Store on Amazon.

© 2025 Bush Furniture. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07FK61ZG1

More documents and user manuals: **https://manuals.plus/**