CalExotics SE-4412-50-3

CalExotics Hype Massager SE-4412-50-3 User Manual

Model: SE-4412-50-3 | Brand: CalExotics

Product Overview

The CalExotics Hype Massager is a vibrating personal massager designed to provide various sensations and increase circulation. It features an ultra-powerful head with resonating vibrations, a flexible neck, and easy push-button controls with LED lights. The device offers 10 functions of vibration, pulsation, and escalation, and includes a security travel lock feature for convenience.

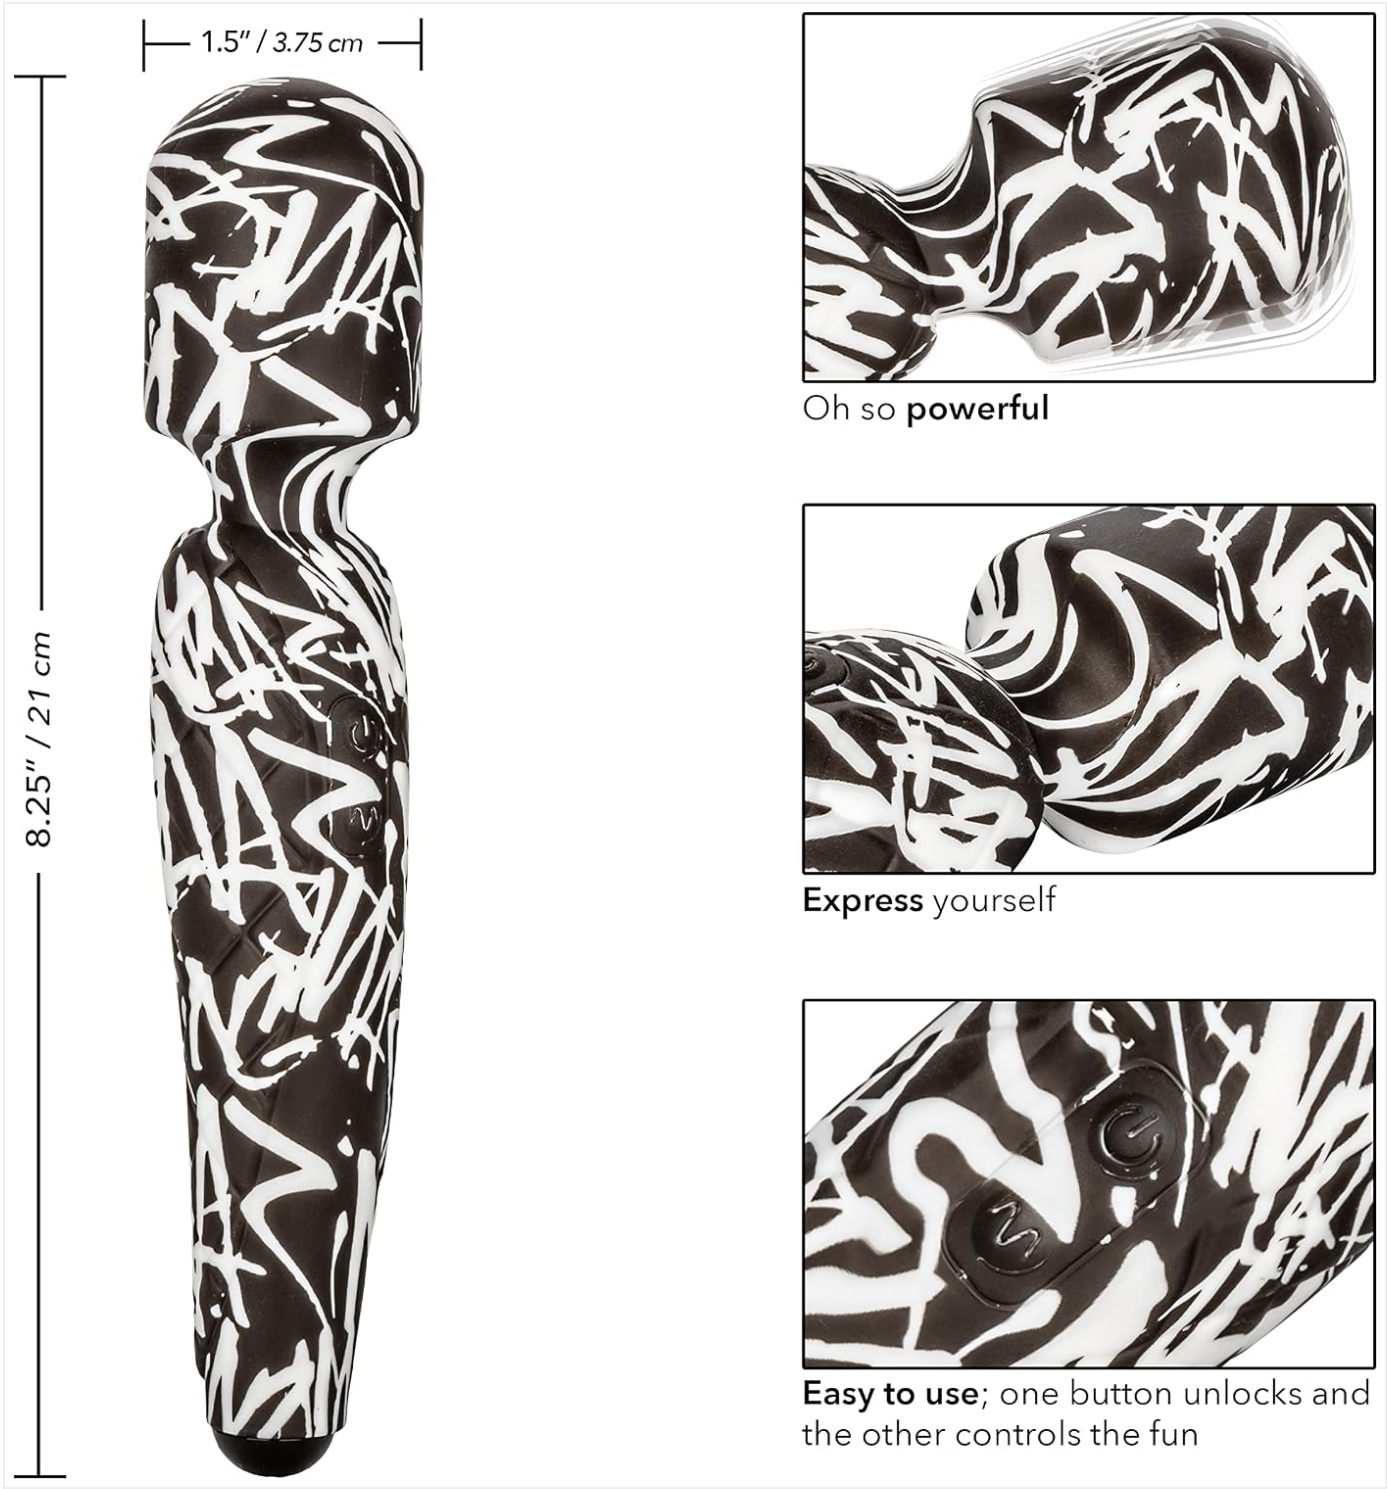


Figure 1: Front view of the CalExotics Hype Massager.

Setup and Charging

Before first use, fully charge your Hype Massager. The device is USB rechargeable, and a charging cord is included. A complete charge typically takes 2 hours.

1. Connect the included USB charging cord to the charging port located at the base of the massager.
2. Plug the USB end of the cord into a compatible USB power source (e.g., computer, USB wall adapter).
3. The LED light on the massager will flash while charging. It will glow steadily when fully charged.
4. A full charge provides approximately 70 minutes of use on high speed or 150 minutes on low speed.



MASSAGER



ULTRA **POWERFUL** HEAD WITH **DEEP RESONATING VIBRATIONS** AND **FLEXIBLE NECK**

- HYGIENICALLY SUPERIOR **SILICONE**
- **INSTRUCTIONS** INCLUDED
- EASY TO USE **PUSH-BUTTON** CONTROLS
- SAFE FOR USE **IN** OR **OUT** OF THE **WATER**
- **BODY SAFE,** UNSCENTED, PHTHALATE FREE

SECURITY **TRAVEL LOCK** FEATURE – **HOLD** POWER BUTTON FOR **3 SECONDS** TO TURN **ON** OR **OFF**

10 INTENSE FUNCTIONS

USB RECHARGEABLE
CHARGING CORD INCLUDED



MASSAGER WILL RUN FOR:
70 Minutes on High Speed
2.5 Hours on Low Speed
Complete Charge in 2 Hours

©2018 California Exotic Novelties, LLC, Ontario, CA. Made in China.
Product Registration: calexotics.com/warranty. Silicone (massager), ABS with Metallic Plating (décor), Nickel-Free Copper (charging port). All rights reserved. The shape and appearance of this packaging is a trademark and trade dress of California Exotic Novelties, LLC. Wash before and after each use. Use with water-based lubricant. For adult use as a non-medical pleasure device only. Not for medical use. Discontinue use in the event of any medical condition or pain.

••Please Note•• Fully charge product before use. Battery life depends on frequency and speed of use. We recommend fully charging your product once every 6 months.

SE-4412-50-3
7 16770 09166 6
06.2018



Figure 2: Massager connected to its USB charging cable.

Operating Instructions

The Hype Massager features simple push-button controls for ease of use.

1. **Power On/Off:** To turn the massager on or off, press and hold the top button for 3 seconds. The LED light will indicate power status.
2. **Cycle Functions:** Once powered on, press the bottom button to cycle through the 10 available functions of vibration, pulsation, and escalation.
3. **Travel Lock:** The device includes a security travel lock feature. To activate or deactivate, press and hold the top button for 3 seconds. This prevents accidental activation during travel.

[redacted]

Video 1: Official CalExotics Hype Massager demonstration, showing power on/off and function cycling.

Maintenance and Care

Proper care ensures the longevity and hygiene of your Hype Massager.

- **Cleaning:** The massager is made of hygienically superior silicone and is safe for use in or out of water. Wash the product before and after each use with warm water and a body-friendly soap or a dedicated toy cleaner. Rinse thoroughly and allow to air dry.
- **Storage:** Store the massager in a clean, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Battery life varies depending on frequency and speed of use. To maintain optimal battery performance, fully charge your product at least once every 6 months, even if not in regular use.

Troubleshooting

If you encounter any issues with your Hype Massager, please refer to the following common solutions:

- **Device not turning on:** Ensure the device is fully charged. Press and hold the top button for 3 seconds to activate or deactivate the travel lock.
- **Weak vibrations:** The battery may be low. Recharge the device fully.
- **Charging issues:** Ensure the USB cable is securely connected to both the massager and the power source. Try a different USB port or power adapter.

If problems persist, please contact CalExotics customer support.

Specifications

Feature	Detail
Model Number	SE-4412-50-3
Product Dimensions (L x W x H)	2.5 x 5.25 x 9.25 inches

Weight	3.53 ounces
Material	Silicone, ABS Plastic Metallic Plating
Color	Black
Battery Type	1 Lithium Polymer battery (included)
Charging Time	Approximately 2 hours for a complete charge
Run Time (High Speed)	Up to 70 minutes
Run Time (Low Speed)	Up to 150 minutes
Functions	10 (vibration, pulsation, escalation)



Figure 3: Product dimensions of the Hype Massager.

Warranty and Support

The CalExotics Hype Massager comes with a 1-year manufacturer warranty.
For product registration and warranty information, please visit the official CalExotics website:calexotics.com/warranty.
For further assistance or support, please contact CalExotics customer service.

© 2023 CalExotics. All rights reserved.
For adult use as a non-medical pleasure device only. Not for medical use. Discontinue use in the event of any medical condition or pain.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question