De'Longhi FH2133

De'Longhi IdealFry FH2133 User Manual

Model: FH2133

1. Introduction

Thank you for choosing the De'Longhi IdealFry FH2133 Hot Air Fryer and Multicooker. This appliance is designed to provide a healthier way to enjoy your favorite fried and baked foods, utilizing a powerful hot air circulation system. Its versatile 4-in-1 functionality allows for air frying, mini oven use, convection grilling, and pan cooking, making it an indispensable tool in your kitchen.



Image: The De'Longhi IdealFry FH2133 hot air fryer, showcasing its sleek white and black design with control knobs on top.

2. Important Safety Instructions

Please read all instructions carefully before using the appliance and keep them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.

- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off”, then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure adequate ventilation around the appliance during use.

3. Product Overview

Familiarize yourself with the main components of your De'Longhi IdealFry FH2133:

- **Main Unit:** The primary body housing the heating elements and fan.
- **Removable Frying Basket:** For holding food during cooking, with a convenient folding handle.
- **Transparent Lid:** Allows for easy monitoring of the cooking process.
- **Control Knobs:** For setting temperature/power level and timer.
- **Removable Lid Frame:** For easy cleaning of the lid.



Image: A direct front view of the De'Longhi IdealFry FH2133, highlighting its compact and functional design.



Image: The De'Longhi IdealFry FH2133 with its main components separated, showing the frying basket, lid frame, and the main appliance body.

4. Setup and First Use

4.1 Unpacking

Carefully remove the appliance and all accessories from the packaging. Remove any packaging materials, stickers, or labels.

4.2 Cleaning Before First Use

Before using your IdealFry for the first time, clean all removable parts (frying basket, lid, lid frame) with warm soapy water. Wipe the main unit with a damp cloth. Ensure all parts are completely dry before assembly.

4.3 Placement

Place the appliance on a stable, heat-resistant, and level surface. Ensure there is sufficient space (at least 10 cm) around the appliance for proper air circulation.

5. Operating Instructions

The De'Longhi IdealFry FH2133 offers versatile cooking options with its 4-in-1 functionality.

5.1 Power and Temperature Control

The appliance features a SHS Double heating system with 1400W upper and 300W lower heating elements. The temperature dial (marked 1 to 4) controls the heat intensity. Setting 3 is suitable for most general cooking. Settings 1-2 use lower vortex power, ideal for delicate items like melting cheese without displacement.



Image: A close-up view of the top panel of the De'Longhi IdealFry FH2133, showing the two control knobs for temperature/power and timer settings.

5.2 Cooking Capacity

The IdealFry has a generous capacity, allowing you to cook up to 1.25 kg of fresh potatoes or 1 kg of frozen fries in a single batch.



Image: A hand demonstrating the removal of the frying basket, filled with golden fries, from the De'Longhi IdealFry FH2133.

5.3 Using the De'Longhi Recipe App

Enhance your cooking experience with the De'Longhi Recipe App, offering over 200 recipes specifically adapted for the IdealFry. The app provides detailed instructions and cooking times for various dishes, ensuring optimal results.

- Download the De'Longhi Recipe App from your device's app store.
- Browse recipes by food type or cooking method.
- Follow the in-app instructions for ingredient preparation and cooking settings.

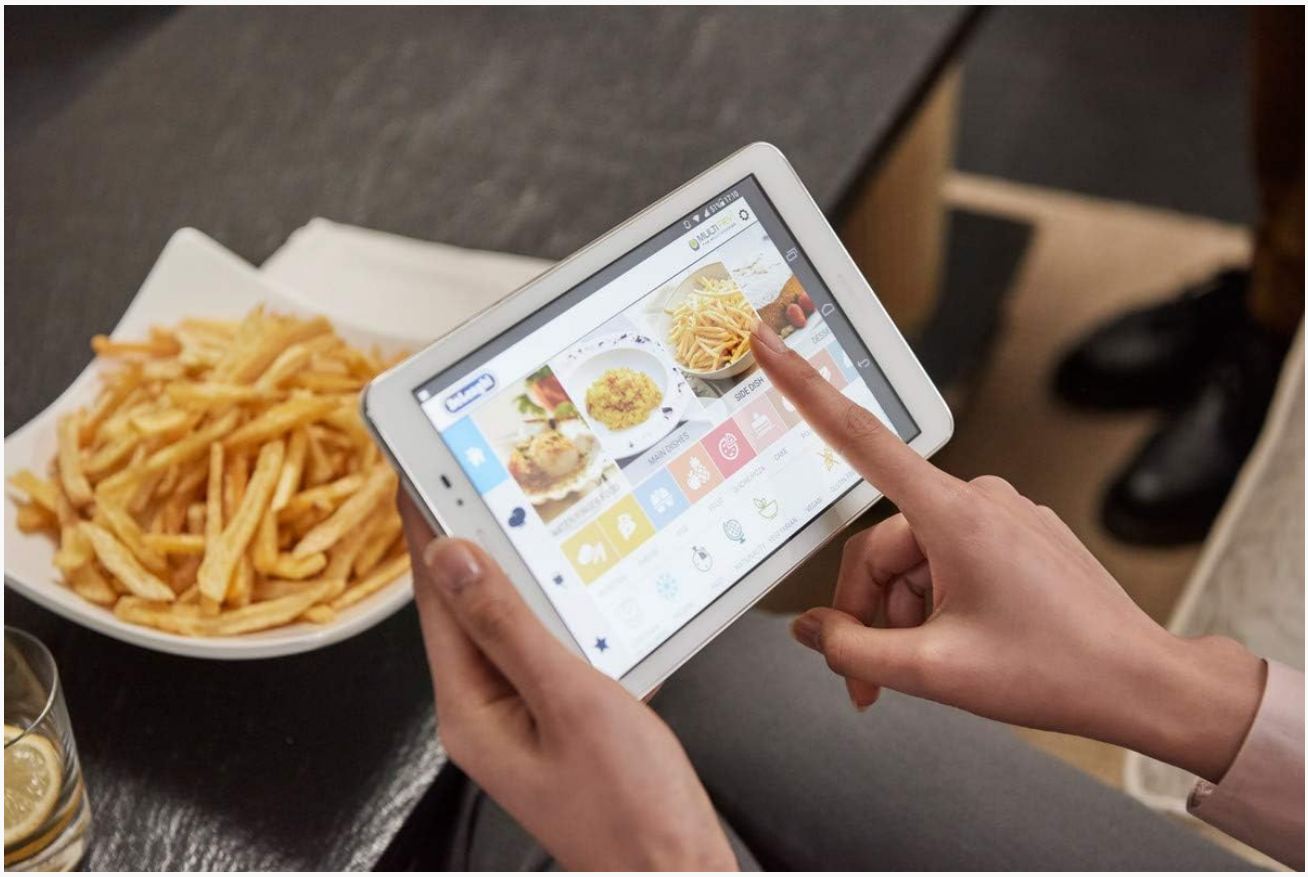


Image: A user's hands navigating the De'Longhi recipe app on a tablet, with a bowl of cooked fries visible in the background, illustrating the convenience of digital recipes.

6. Cleaning and Maintenance

Regular cleaning ensures the longevity and optimal performance of your IdealFry.

6.1 Daily Cleaning

- Always unplug the appliance and allow it to cool completely before cleaning.
- Wash the removable frying basket and lid frame with warm soapy water. These parts are also dishwasher safe.
- Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.

6.2 Deep Cleaning

For thorough cleaning, the lid and internal components can be removed.

- Refer to the diagram for safe removal of the lid and internal parts.
- Clean the heating element and fan area with a soft brush or damp cloth, ensuring no food residue remains.
- Ensure all parts are completely dry before reassembling the appliance.



Image: An exploded view diagram illustrating the steps to remove the lid and internal components of the De'Longhi IdealFry FH2133 for comprehensive cleaning.

7. Troubleshooting

If you encounter any issues with your De'Longhi IdealFry FH2133, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; appliance not assembled correctly.	Ensure the power cord is securely plugged into a working outlet. Check if all removable parts are correctly in place.

Problem	Possible Cause	Solution
Food is not cooked evenly.	Too much food in the basket; food not shaken/stirred during cooking.	Do not overload the basket. Shake or stir food halfway through cooking for even results.
Food is not crispy.	Not enough oil (for fresh ingredients); temperature too low; cooking time too short.	Add a small amount of oil (e.g., 1 tablespoon for fresh fries). Increase temperature or cooking time as needed.
White smoke coming from the appliance.	Fat residue from previous use; cooking fatty food.	Clean the appliance thoroughly after each use. This is normal when cooking very fatty foods.

If the problem persists after trying these solutions, please contact customer support.

8. Specifications

Feature	Specification
Brand	De'Longhi
Model Number	FH2133
Color	Black/White
Product Dimensions (L x W x H)	38.8 x 29.1 x 28.8 cm
Capacity	1.25 Kilograms
Maximum Weight Capacity	1.25 Kilograms
Power	1600 Watts
Voltage	240 Volts
Material	Aluminum and Plastic
Features	Double Compartment, Programmable
Item Weight	1.25 Kilograms
Spare Parts Availability	1 Year
Recommended Uses for Product	Bake, Broil, Steam, Roast, Reheat
Country of Origin	China

9. Warranty and Support

Your De'Longhi IdealFry FH2133 comes with a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including the duration of coverage and details on spare parts availability (typically 1 year).

For technical support, service, or to inquire about spare parts, please visit the official De'Longhi website or contact their customer service department in your region. Contact information can usually be found on the De'Longhi website or in the product documentation.

Always ensure you have your model number (FH2133) and proof of purchase ready when contacting support.

© 2023 De'Longhi. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question