Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

CASIO DW-5735E-7JR

CASIO G-SHOCK GLACIER GOLD DW-5735E-7JR Watch User Manual

Model: DW-5735E-7JR

Introduction

This manual provides detailed instructions for the proper use and care of your CASIO G-SHOCK GLACIER GOLD DW-5735E-7JR watch. This model is a 35th Anniversary limited edition, featuring a high-transparency clear skeleton resin, gold IP accents on the case and screw back, and a gold-colored dial and LCD. Designed with G-SHOCK's renowned shock-resistant structure, it offers exceptional durability and functionality.

Please read this manual thoroughly to ensure optimal performance and longevity of your watch.





Figure 1: Front view of the CASIO G-SHOCK GLACIER GOLD DW-5735E-7JR watch.

Setup

Before using your watch, perform the initial setup steps. Refer to the included quick start guide for button identification.

1. **Time Setting:**
   - In Timekeeping Mode, press and hold the **ADJUST** button until the city code starts to flash.
   - Use the **FORWARD** and **REVERSE** buttons to select your home city code.
   - Press the **MODE** button to cycle through settings: DST (Daylight Saving Time), 12/24-hour format, seconds, hour, minute, year, month, day.
   - Use the **FORWARD** and **REVERSE** buttons to change the flashing value.
   - Press **ADJUST** to exit the setting screen.
2. **Date Setting:** The date is typically set automatically when you set the time and year. Ensure the correct year, month, and day are entered during time setting. The full auto-calendar feature will adjust for month lengths and leap years.



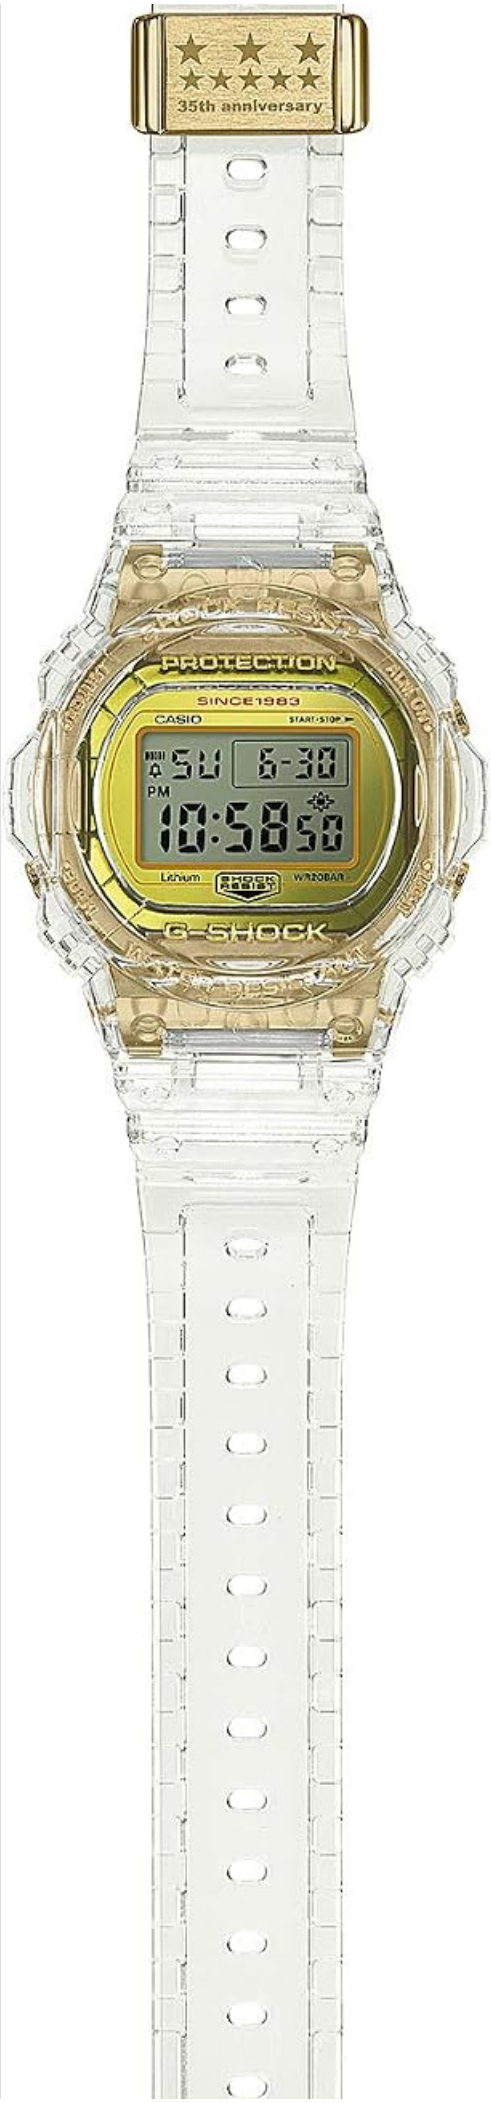

35th anniversary
PROTECTION
SINCE1983
CASIO
START·STOP
SU
6-30
PM
10:58 50
Lithium
SHOCK RESIST
W.R.20BAR
G-SHOCK



Figure 2: Side view of the watch, showing button layout.

Operating Instructions

Your G-SHOCK watch offers various functions accessible through different modes.

Mode Navigation

Press the **MODE** button to cycle through the following modes:

- Timekeeping Mode (current time, date)
- Stopwatch Mode
- Timer Mode
- Alarm Mode

Stopwatch Function

- Enter Stopwatch Mode.
- Press the **START/STOP** button (usually top right) to start and stop the stopwatch.
- Press the **RESET** button (usually bottom right) to reset to zero.
- To record split times, press **SPLIT** (usually bottom left) while the stopwatch is running. Press again to release the split and display the current running time.
- The stopwatch measures up to 24 hours in 1/100-second increments for the first hour, then in 1-second increments.

Timer Function

- Enter Timer Mode.
- Press and hold **ADJUST** to enter timer setting mode.
- Use **FORWARD** and **REVERSE** buttons to set the desired countdown time (up to 24 hours, in 1-second units).
- Press **ADJUST** to confirm and exit setting mode.
- Press **START/STOP** to start and stop the countdown.
- The timer features an auto-repeat function.

Alarm Function

- Enter Alarm Mode.
- Use **FORWARD** and **REVERSE** buttons to select an alarm (AL1, AL2, etc.) or the Hourly Time Signal (SIG).
- Press and hold **ADJUST** to enter alarm time setting.
- Use **FORWARD** and **REVERSE** buttons to set the alarm hour and minute.
- Press **ADJUST** to confirm.
- Press **START/STOP** to toggle the selected alarm or hourly time signal ON/OFF.

EL Backlight

Press the **LIGHT** button (usually top left) to illuminate the display. The EL backlight includes an afterglow feature, keeping the display lit for a few seconds after the button is released.

Flash Alert

The watch features a flash alert function that causes the display to flash in conjunction with alarms, hourly time signals, and timer countdown end alerts.

Maintenance

- **Cleaning:** Wipe the watch regularly with a soft, dry cloth. For stubborn dirt, use a soft cloth dampened with water and a mild neutral detergent, then wipe dry. Avoid using volatile agents like thinner or benzine.
- **Water Resistance:** This watch is 20 BAR water resistant. It is suitable for everyday use, showering, swimming, and snorkeling. Do not operate buttons underwater. After exposure to saltwater, rinse the watch with fresh water and wipe it dry.
- **Temperature Exposure:** Avoid exposing the watch to extreme temperatures, direct sunlight for prolonged periods, or sudden temperature changes.
- **Chemicals:** Avoid contact with gasoline, cleaning solvents, aerosol sprays, adhesives, paints, etc. These can cause discoloration, deterioration, or damage to the resin case and band.
- **Battery Replacement:** The watch uses a single battery. When the display becomes dim or functions become unstable, it is time to replace the battery. Battery replacement should be performed by an authorized CASIO service center.

Troubleshooting

Problem	Possible Cause	Solution
Incorrect Time/Date	Timekeeping settings are incorrect.	Refer to the "Time Setting" section under Setup to adjust the time and date. Ensure the correct home city and DST setting are selected.
Display is Dim/Blank	Low battery power.	The battery may need replacement. Contact an authorized CASIO service center.
Alarm/Timer Does Not Sound	Alarm/Timer is turned off or volume is too low (if applicable).	Ensure the alarm or timer is activated in its respective mode. Check if the flash alert is enabled for visual notification.
Buttons are unresponsive	Watch is underwater or exposed to extreme conditions.	Do not operate buttons underwater. Allow the watch to return to normal temperature if exposed to extreme cold or heat. If the issue persists, contact customer support.

Specifications

- **Model Number:** DW-5735E-7JR
- **Brand:** CASIO G-SHOCK
- **Display Type:** Digital
- **Movement:** Quartz
- **Case Material:** Stainless Steel
- **Band Material:** Urethane/Rubber Type Belt (Clear)
- **Windshield Material:** Glass

- **Case Diameter:** 45.4 mm
- **Case Thickness:** 14.2 mm
- **Band Width:** 25 mm
- **Product Weight:** 78 grams
- **Water Resistance:** 20 BAR (200 meters)
- **Special Features:** Shock-resistant structure, Stopwatch (1/100 sec, 24hr, split), Timer (1 sec unit, 24hr max, auto-repeat), Multi-alarm, Hourly Time Signal, Full Auto-Calendar, 12/24-hour format, EL Backlight (with afterglow), Flash Alert (for alarm/hourly signal/timer)
- **Battery:** 1 x Unknown (included)

Warranty and Support

Your CASIO G-SHOCK DW-5735E-7JR watch comes with a **1-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

The warranty does not cover:

- Damage resulting from improper handling, lack of care, accidents, or normal wear and tear.
- Battery replacement.
- Damage caused by unauthorized repair or modification.

For warranty service or technical support, please contact your local authorized CASIO service center or the retailer where the watch was purchased. Please retain your proof of purchase for warranty claims.

For more information, visit the official CASIO website.

© 2023 CASIO Computer Co., Ltd. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07GVLLGHS

More documents and user manuals: **https://manuals.plus/**