Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

YING RAY 20180904002

YING RAY Replacement Remote Control for Quietside Air Conditioners

Model: 20180904002

Introduction

This manual provides instructions for the setup, operation, and maintenance of your YING RAY replacement remote control for Quietside Air Conditioners. This remote is designed to work with specific Quietside models and displays temperature in Fahrenheit only. Please read this manual thoroughly before use.

Important Safety Information

- Keep batteries out of reach of children.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the remote control will not be used for an extended period.
- Do not expose the remote control to direct sunlight, heat sources, or moisture.
- This remote control is not a toy.

Package Contents

- YING RAY Replacement Remote Control (1)
- *Note: AAA 1.5V batteries are NOT included.*

Setup

1. Battery Installation

This remote control requires two AAA 1.5V batteries (not included). Follow these steps to install them:

1. Open the battery compartment cover on the back of the remote control.
2. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
3. Close the battery compartment cover.

Important Note on Battery Types: There are two common types of AAA batteries, referred to as "Type A" (longer positive pole) and "Type B" (shorter positive pole). If the remote does not power on after battery installation, especially

with "Type B" batteries, the positive pole of the battery may not be making proper contact with the spring in the remote. Refer to the image below for guidance.



Image Description: This image illustrates two types of AAA batteries, labeled 'A' (longer positive pole) and 'B' (shorter positive pole). Below this, a series of three images demonstrates how to gently pull out the positive pole spring within the remote's battery compartment using a small tool, specifically for 'Type B' batteries, to ensure proper contact. This adjustment can resolve issues where the remote does not power on.

2. Compatibility Check

This remote control is specifically designed for certain Quietside Air Conditioner models. It is compatible with:

- QSCE-091, QSCC-091
- QSCE-121, QSCC-121
- QSCE-181, QSCC-181
- QSCE-241, QSCC-241

No programming is required. The remote should function directly with compatible units once batteries are installed.

Tips for Battery Used:



There are two kinds of battery types in USA & CANADA market.
"A" and "B"
"A" is a little longer than "B" in battery positive pole as picture showing.
Sometimes type "B" may have poor contact with positive pole spring,
If this remote control doesn't work with your air conditioner, please pull the positive pole spring out a little as following picture showing (For type “B”)

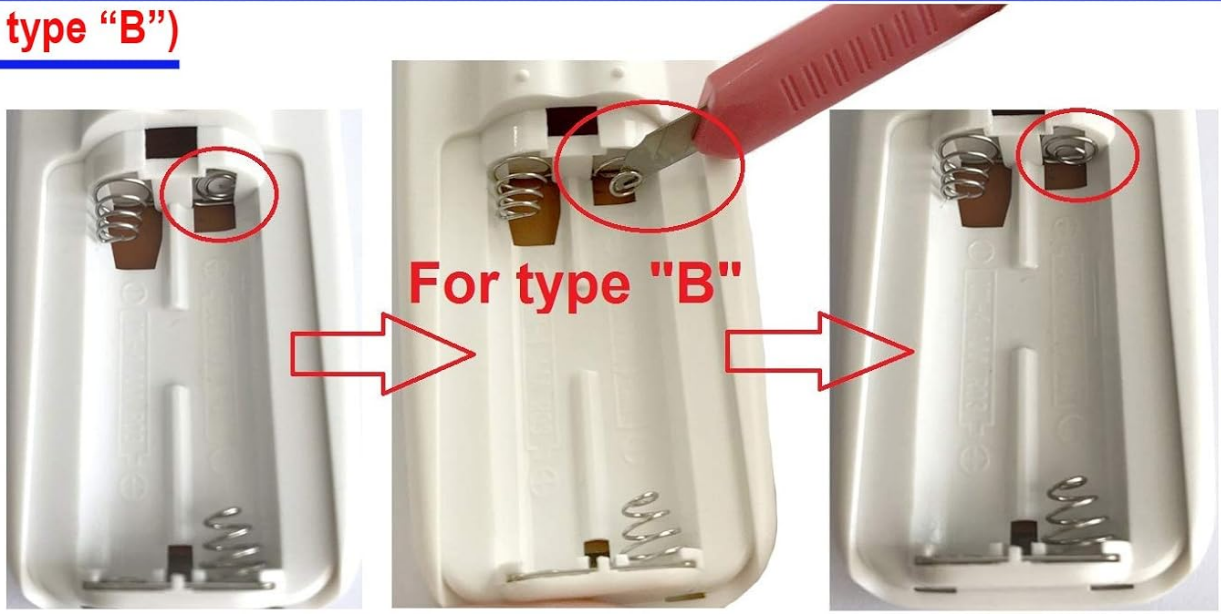


Image Description: This image displays the front of the YING RAY replacement remote control. The screen shows "85°F" and icons for fan speed and mode. Below the screen are buttons for ON/OFF, temperature adjustment (up/down arrows), and other functions like "AUTOSTOP", "HOUR", "MIN", and "CLOCK". A green overlay on the image explicitly states "Working with: QSCE QSHE Series 1, QSCE QSCC Series 1", confirming compatibility.

Operating Instructions

Point the remote control directly at the air conditioner's receiver when operating.

Basic Functions

- **ON/OFF:** Press the **ON/OFF** button to turn the air conditioner on or off.
- **Temperature Adjustment:** Use the **Up (▲)** and **Down (▼)** arrow buttons to increase or decrease the desired temperature. The display shows temperature in Fahrenheit only.
- **Mode Selection:** Press the **MODE** button (if present, typically indicated by an icon) to cycle through available operating modes (e.g., Cool, Fan, Dry, Heat - depending on your AC unit's capabilities).

- **Fan Speed:** Press the **FAN** button (if present, typically indicated by a fan icon) to adjust the fan speed.

Timer Functions

The remote may include timer functions for scheduled operation:

- **AUTOSTOP:** This button likely sets a timer for the unit to automatically turn off. Consult your air conditioner's main manual for specific details on its timer functions.
- **HOUR** / **MIN:** These buttons are typically used in conjunction with timer settings to adjust the hour and minute for scheduled operations.
- **CLOCK:** This button may be used to set the current time on the remote's display or to activate a clock-based timer function.

Maintenance

Battery Replacement

Replace batteries when the remote control's display becomes dim or if the remote stops responding. Always replace both batteries at the same time with new AAA 1.5V batteries. Dispose of old batteries responsibly according to local regulations.

Cleaning

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these can damage the remote's surface or internal components.

Troubleshooting

- **Remote not powering on after battery installation:**

  Ensure batteries are inserted with correct polarity (+/-). If using "Type B" batteries (shorter positive pole), the battery spring inside the remote might need slight adjustment to ensure proper contact. Gently pull the positive pole spring out a little as shown in the "Tips for Battery Used" image in the Setup section.

- **Remote not controlling the air conditioner:**
  - Check if the batteries are fresh and correctly installed.
  - Ensure there are no obstructions between the remote control and the air conditioner's receiver.
  - Confirm that your air conditioner model is listed as compatible with this remote control. This remote is not universal.
  - Try resetting the remote by removing the batteries for a few minutes and then reinserting them.

- **Display is dim or unresponsive:**

  Replace the batteries with new ones.

Specifications

Feature	Detail
Brand	YING RAY
Model Number	20180904002
Compatible Devices	Quietside Air Conditioners (QSCE-091, QSCC-091, QSCE-121, QSCC-121, QSCE-181, QSCC-181, QSCE-241, QSCC-241)

Display Type	Fahrenheit ONLY
Connectivity Technology	Infrared
Controller Type	Button Control
Maximum Range	10 Meters
Battery Type	AAA (1.5V) x 2 (Not Included)
Special Feature	Ergonomic

Warranty and Support

For warranty information or technical support, please contact the seller or manufacturer directly. Refer to your purchase documentation for contact details.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07H34RJN2

More documents and user manuals: **https://manuals.plus/**