Hunter CC5C92C40

Hunter Fan 52-inch Casual Fresh White Indoor/Outdoor Ceiling Fan with LED Light Kit Instruction Manual

Model: CC5C92C40

1. Introduction

This manual provides detailed instructions for the installation, operation, and maintenance of your Hunter Fan 52-inch Casual Fresh White Indoor/Outdoor Ceiling Fan with LED Light Kit. This versatile fan features a Fresh White finish, reversible blades (Washed Walnut / Fresh White), and an integrated LED light kit, making it suitable for both indoor and outdoor environments. The WhisperWind motor ensures powerful yet quiet air movement.

Please read all instructions carefully before beginning installation to ensure safe and proper operation.

2. Safety Information

- **Electrical Safety:** Always disconnect power at the main circuit breaker or fuse box before beginning installation or performing any maintenance. Ensure all electrical connections comply with local codes and ordinances.
- **Mounting:** The fan must be securely mounted to a ceiling joist or a fan-rated outlet box capable of supporting the fan's weight.
- **Blade Clearance:** Ensure there is adequate clearance between the fan blades and any obstructions, including walls and furniture.
- **LED Bulbs:** Handle LED bulbs with care. Do not overtighten.
- **Qualified Electrician:** If you are unsure about any part of the installation process, consult a qualified electrician.

3. Package Contents

Verify that all components listed below are present before beginning installation:

- Motor Assembly (Hunter WhisperWind Motor)
- Fan Blades (4, reversible Washed Walnut / Fresh White)
- Integrated Light Kit with Clear Glass
- LED Bulbs (2, 9W dimmable, E26 base)

- Downrods (1 x 3-inch, 1 x 2-inch)
- Mounting Hardware
- Remote Control (with wall mount)



Figure 3.1: Overview of Hunter Fan components. This image displays the main motor housing, fan blades, and the integrated light kit, illustrating the primary parts included in the package.

4. Setup and Installation

Follow these steps for proper installation of your ceiling fan:

4.1 Mounting Options

The fan features an Installer's Choice three-position mounting system, allowing for standard, angled, or low ceiling mounting. Select the appropriate mounting method for your ceiling type.



Figure 4.1: Angled view showing the fan's mounting canopy and downrod. This illustrates how the fan connects to the ceiling, highlighting the downrod for proper suspension.

4.2 Downrod Selection

Use either the included 2-inch or 3-inch downrod to ensure the proper distance from the ceiling and optimize air movement at your preferred blade height.

4.3 Electrical Connection

Connect the fan to a 120 Volts AC power source. Ensure all wiring is secure and properly insulated according to electrical codes.

4.4 Blade Attachment

Attach the four fan blades securely to the motor assembly. The blades are reversible, offering a Fresh White or Washed Walnut finish option.



Figure 4.2: Close-up view of the Fresh White side of a fan blade. This image highlights the clean, smooth finish of one side of the reversible blade.



Figure 4.3: Close-up view of the Washed Walnut side of a fan blade. This image shows the textured, wood-grain appearance of the alternative side of the reversible blade.

4.5 Light Kit Installation

Install the integrated light kit with clear glass and screw in the two 9W dimmable LED bulbs (E26 base) into their sockets.



Figure 4.4: Detailed view of the light kit with clear glass. This image focuses on the design and structure of the fan's integrated lighting component.

5. Operating Instructions

Your Hunter Fan is designed for ease of use. Familiarize yourself with its controls for optimal comfort.

5.1 Power On/Off

The fan and light can be turned on or off using the wall switch or the included remote control.

5.2 Fan Speed Control

Adjust the fan's 3 speeds (low, medium, high) using the remote control. The 13-degree blade pitch is optimized for ideal air movement and peak performance.

5.3 Reversible Motor

The WhisperWind motor is reversible, allowing you to change the direction of airflow. In warmer weather, set the fan to rotate counter-clockwise for a downward airflow that creates a cooling effect. In cooler weather, set it to rotate clockwise

for an upward airflow that helps circulate warm air trapped near the ceiling.

5.4 Light Operation

The integrated LED light kit includes two dimmable 9W LED bulbs. Use the remote control to turn the lights on/off and adjust their brightness.



Figure 5.1: Overall view of the Hunter Fan with its LED light kit illuminated. This image provides a complete perspective of the fan's design and functionality when in operation.

6. Maintenance

Regular maintenance ensures the longevity and optimal performance of your fan.

- **Cleaning:** To clean the fan, wipe surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents, as they may damage the finish.
- **Bulb Replacement:** When replacing bulbs, ensure the power is off. Use only E26 base, 9W dimmable LED bulbs.
- **Blade Care:** Periodically check fan blades for dust accumulation and clean as needed to maintain balanced operation.

7. Troubleshooting

If you encounter issues with your fan, refer to the following common problems and solutions:

- **Fan Not Operating:**
  - Check that the circuit breaker is on and the wall switch is in the 'ON' position.
  - Ensure all wiring connections are secure.
- **Lights Not Working or Flickering:**
  - Verify that the LED bulbs are screwed in tightly.
  - Confirm that the light kit's electrical connections are secure.
  - If flickering persists, ensure the bulbs are compatible with the fan's dimming function.
- **Fan Wobble:**

- Ensure all blade screws are tightened.
- Check that the downrod and mounting bracket are securely fastened.
- Verify that the blades are not bent or damaged.

- **No Power to Fan:**
  - Confirm that the main power supply to the fan is active.
  - Inspect all electrical connections for proper contact.

8. Specifications

Detailed technical specifications for the Hunter Fan Model CC5C92C40:

Feature	Specification
Brand	Hunter
Model Number	CC5C92C40
Dimensions (L x W x H)	52"L x 52"W x 14.34"H
Item Weight	25 pounds
Color	Fresh White
Material	Glass, Metal
Power Source	AC
Voltage	120 Volts
Wattage	9 watts (for light)
Air Flow Capacity	3904 Cubic Feet Per Minute
Light Source Type	LED
Number of Light Sources	2
Bulb Base	E26
Control Method	Remote Control
Indoor/Outdoor Usage	Outdoor
Special Features	Droop Free, Flexible Mounting, LED Bulbs, Reversible Blades, Variable Speed, Wobble Free
UPC	840304133376

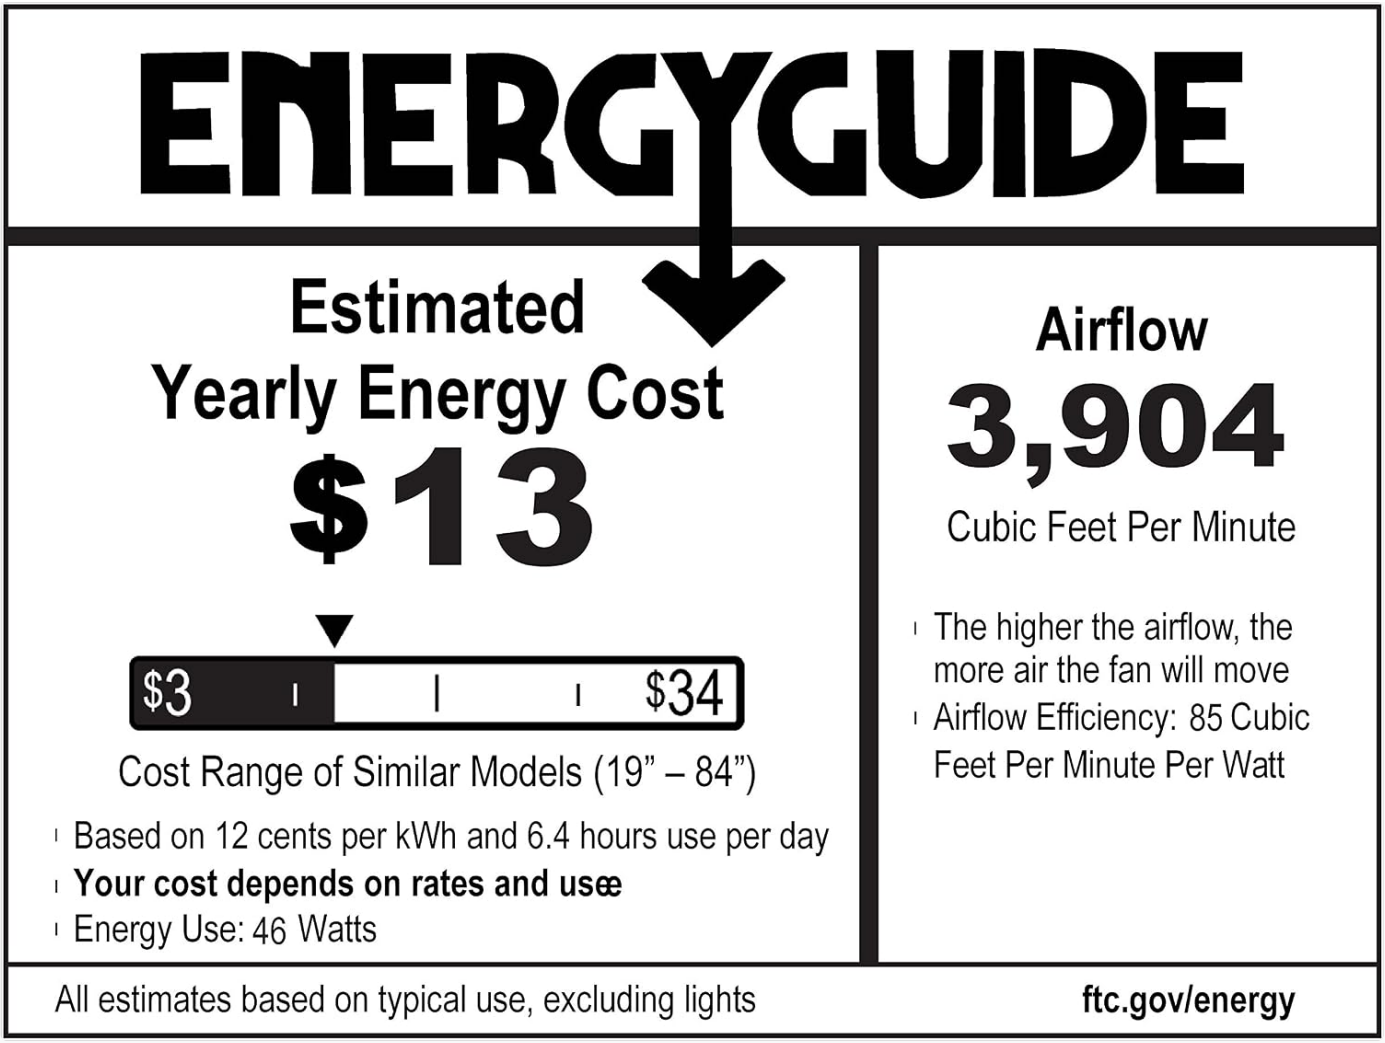


Figure 8.1: Energy Guide label for the Hunter Fan. This label provides estimated yearly energy cost and airflow information for the product.

9. Warranty and Support

9.1 Warranty Information

This Hunter Fan product is covered by a **90-day limited warranty**. Please refer to the warranty documentation included with your purchase for specific terms and conditions.

9.2 Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact Hunter Fan Company customer support. Refer to the contact information provided in your product packaging or visit the official Hunter Fan website.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question