Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Perixx PERIBOARD-716

Perixx PERIBOARD-716 Wireless Keyboard with Touchpad User Manual

Model: PERIBOARD-716 | Brand: Perixx

1. Introduction

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your Perixx PERIBOARD-716 Wireless Keyboard with Touchpad. Please read this manual thoroughly before using the product to ensure proper function and longevity.
The Perixx PERIBOARD-716 is a compact wireless 2.4 GHz keyboard featuring a large integrated touchpad and a Nano receiver. Its dimensions are approximately 14.45 x 4.76 x 0.71 inches.

2. Key Features

- **All-in-One:** Compact keyboard with a large touchpad, ideal for laptop, PC, or smart TV navigation. Supports multi-touch gestures including pointing, zooming, and scrolling.
- **Wireless Connectivity:** Utilizes 2.4 GHz wireless technology with an operating range of up to 33 feet (10 meters).
- **Quiet and Comfortable Keys:** Features a scissor-key mechanism for enhanced stability, optimized key travel, and a low profile, providing a comfortable typing experience.
- **Convenient Multimedia Control:** Easy access to multimedia functions via Fn keys or Fn Lock. Note: If alphabet keys (J, K, L, etc.) produce numbers, press 'Fn + Num Lock' to toggle the number lock function.
- **System Compatibility:** Supports Smart TVs and other Human Interface Devices (HID), compatible with Windows 7, 8, and 10.

3. Package Contents

Upon opening the package, please verify that all items listed below are present and in good condition:

- Perixx PERIBOARD-716 Wireless Keyboard with Touchpad
- USB Nano Receiver
- User Manual (this document)

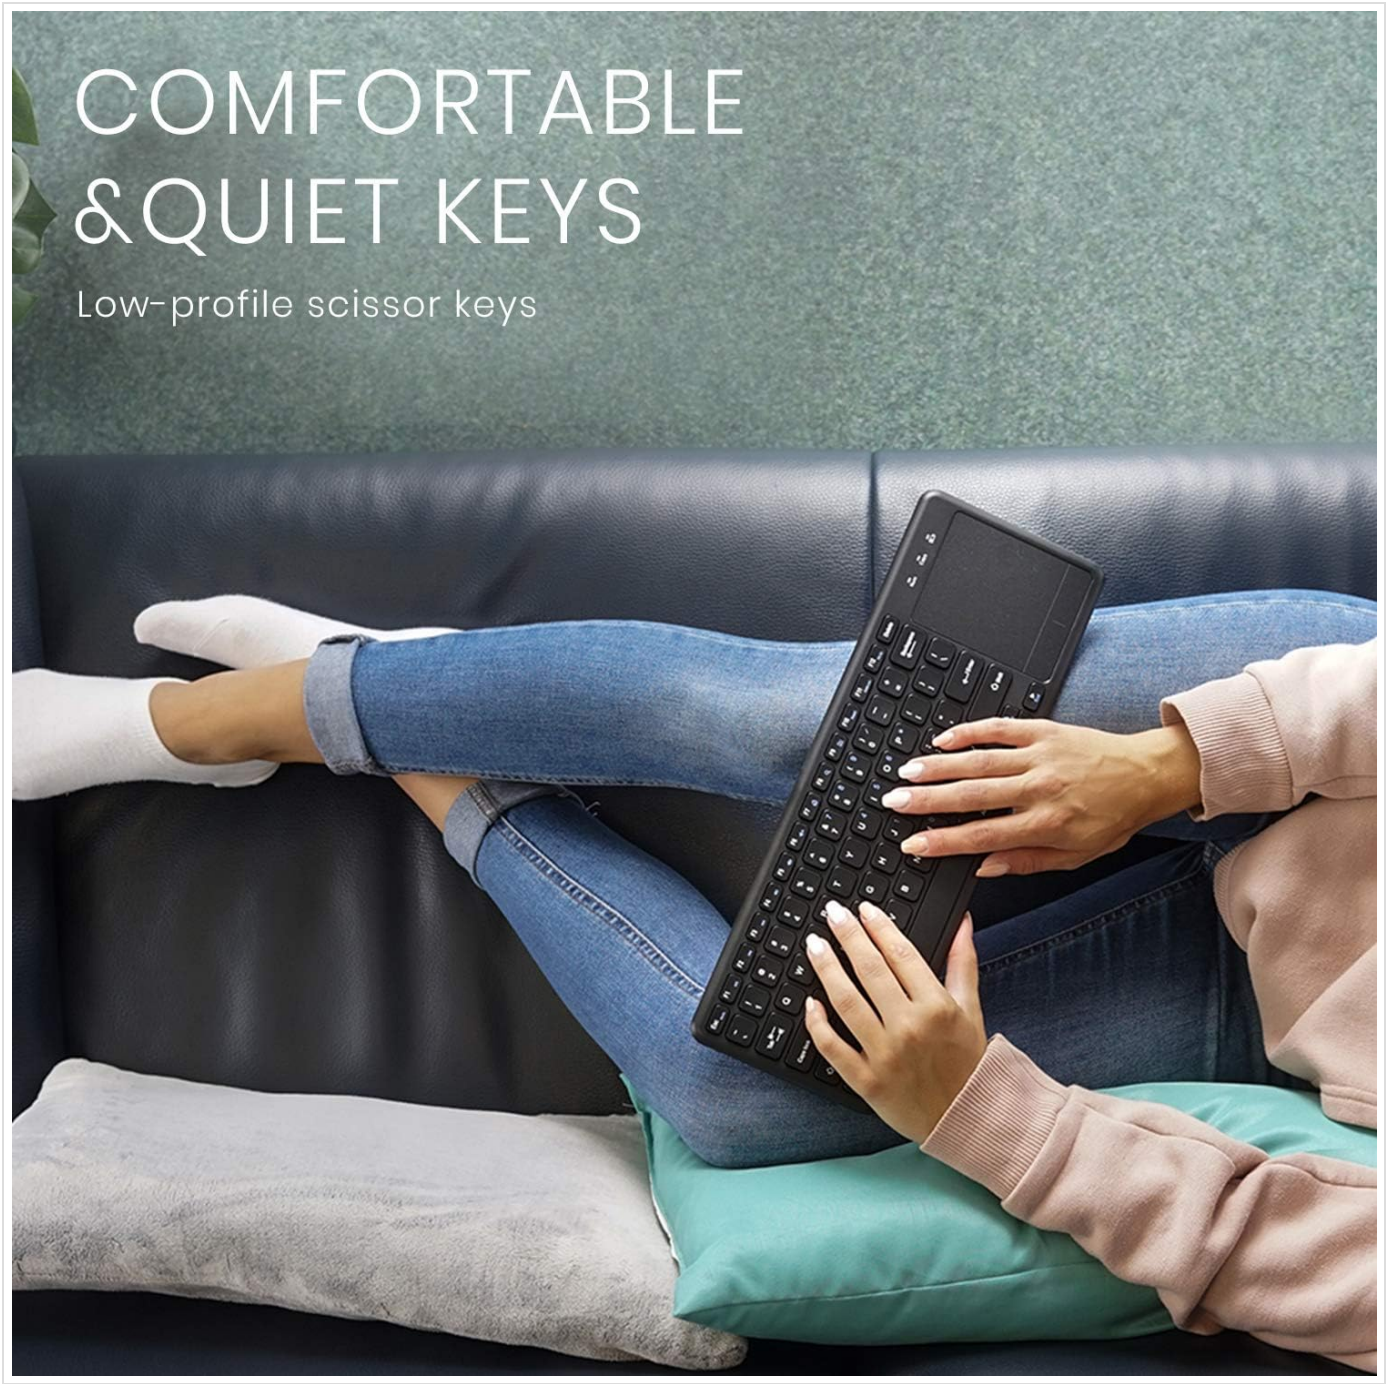


Image: Contents of the Perixx PERIBOARD-716 package, including the keyboard, USB Nano receiver, and user manual.

4. Setup Guide

4.1. Battery Installation

1. Locate the battery compartment on the underside of the keyboard.
2. Open the battery compartment cover.
3. Insert two AAA batteries (not included) into the compartment, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

4.2. Connecting the Keyboard

1. Locate the USB Nano receiver, typically stored within the battery compartment or a dedicated slot on the keyboard.
2. Plug the USB Nano receiver into an available USB port on your computer, Smart TV, or compatible device.
3. Turn on the keyboard using the On/Off switch, usually located on the top edge of the keyboard.
4. The keyboard should automatically connect to the receiver. No additional drivers are typically required for basic

functionality.



Image: Step-by-step guide for easy setup, showing battery slot, Nano receiver, on/off switch, and connection process.

5. Operating Instructions

5.1. Basic Keyboard Functions

The PERIBOARD-716 functions as a standard QWERTY keyboard. Simply type as you would on any other keyboard.

5.2. Touchpad Gestures

The integrated touchpad supports various multi-touch gestures for efficient navigation:

- **One Finger Slide:** Moves the cursor.
- **One Finger Touch:** Acts as a left-click.
- **Two Finger Tap:** Acts as a right-click.
- **Two Finger Swipe (Vertical):** Scrolls content up or down.

- **Two Finger Swipe (Horizontal):** Scrolls content left or right (if applicable).
- **Pinch to Zoom:** Use two fingers to pinch in or out to zoom.
- **Tag and Drop:** Drag an item by holding one finger down and moving with another.



Image: Visual guide to multi-touch trackpad gestures, including one-finger slide, two-finger tap, two-finger swipe, and zoom in/out.

5.3. Multimedia Hotkeys

The keyboard includes dedicated Fn keys for quick access to multimedia and system functions. To activate these functions, press and hold the **Fn** key and then press the corresponding function key (F1-F12).

Multimedia Hotkey Functions

Key Combination	Function
Fn + Esc	Media Player
Fn + F1	Play / Pause

Key Combination	Function
Fn + F2	Last Track
Fn + F3	Next Track
Fn + F4	Increase Volume
Fn + F5	Decrease Volume
Fn + F6	Switch on/off connected loudspeaker
Fn + F7	Open default homepage
Fn + F8	Search
Fn + F9	Favorite
Fn + F10	Insert
Fn + F11	Turn On/Off Num Lock function
Fn + F12	Print Screen function



Image: Detailed illustration of Fn key multimedia shortcuts and their corresponding functions.

6. Maintenance

To ensure the longevity and optimal performance of your PERIBOARD-716, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the keyboard and touchpad surfaces. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid excessive moisture.
- **Battery Replacement:** Replace batteries when the keyboard's performance degrades or it stops responding. Always use fresh AAA batteries.
- **Storage:** When not in use for extended periods, turn off the keyboard to conserve battery life. Store it in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Liquids:** Do not expose the keyboard to liquids. In case of accidental spills, immediately turn off the keyboard, remove batteries, and allow it to dry completely before re-use.
- **Handle with Care:** Avoid dropping the keyboard or subjecting it to strong impacts, which can damage internal components.

7. Troubleshooting

If you encounter issues with your PERIBOARD-716, refer to the following common problems and solutions:

Troubleshooting Guide

Problem	Possible Cause / Solution
Keyboard not responding.	◦ Ensure the keyboard is turned On. ◦ Check battery level and replace if necessary. ◦ Ensure the USB Nano receiver is securely plugged into a working USB port. ◦ Try plugging the receiver into a different USB port. ◦ Move the keyboard closer to the receiver to reduce interference.
Keys typing numbers instead of letters (e.g., J, K, L).	◦ The Num Lock function is active. Press **Fn + F11** to toggle Num Lock On/Off.
Touchpad erratic or unresponsive.	◦ Ensure the touchpad surface is clean and free of debris. ◦ Check for any physical obstructions or damage to the touchpad. ◦ Ensure your fingers are dry and clean when using the touchpad. ◦ Try restarting the keyboard (turn off, then on).
Wireless connection issues / Short range.	◦ Reduce the distance between the keyboard and the USB receiver. ◦ Avoid placing the receiver near other wireless devices (e.g., Wi-Fi routers, cordless phones) that may cause interference. ◦ Ensure there are no large metal objects between the keyboard and receiver.

8. Product Specifications

Feature	Detail
Brand	Perixx
Model Name	PERIBOARD-716
Item Model Number	11593
Connectivity Technology	RF (2.4 GHz Wireless)
Operating System Compatibility	Windows 7, 8, 10; Smart TVs; HID compatible devices
Keyboard Description	QWERTY
Special Feature	Integrated Trackpad
Color	Black
Power Source	Battery Powered (2x AAA, not included)

Feature	Detail
Item Weight	11.2 ounces (approx. 317.5 grams)
Product Dimensions (LxWxH)	14.31 x 4.72 x 0.7 inches (approx. 36.35 x 11.99 x 1.78 cm)
Operating Range	Up to 33 feet (10 meters)
Manufacturer	Perixx Computer GmbH
Date First Available	September 18, 2018



Image: Technical drawing showing the dimensions of the Perixx PERIBOARD-716 keyboard.

9. Warranty and Support

For warranty information, technical support, or further assistance, please visit the official Perixx website or contact their customer service. Details can typically be found on the product packaging or the Perixx official website.
Perixx is a German-based company specializing in innovative computer peripherals. Their mission is to engineer suitable solutions for daily tasks.

Image: The official Perixx company logo.

© 2024 Perixx. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07HG5Q851

More documents and user manuals: **https://manuals.plus/**