Bajaj MX 16

Bajaj MX 16 1400-Watt Steam Iron User Manual

Model: MX 16

1. Introduction

Thank you for choosing the Bajaj MX 16 1400-Watt Steam Iron. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new steam iron. Please read these instructions carefully before first use and keep them for future reference.

2. Important Safety Instructions

- Always ensure the voltage indicated on the rating plate corresponds to your mains voltage.
- Do not immerse the iron, cord, or plug in water or other liquids.
- Unplug the iron from the electrical outlet when filling with water, emptying, or when not in use.
- Do not leave the iron unattended while it is switched on or connected to the power supply.
- Keep the iron and its cord out of reach of children.
- Do not operate the iron with a damaged cord or plug, or if the iron has been dropped or damaged.
- Use the iron only for its intended household use.
- Avoid ironing over metal parts like zippers, rivets, or buttons, as this can scratch the soleplate.
- Do not iron on highly flammable surfaces. Always use an ironing board.

3. Product Overview

The Bajaj MX 16 Steam Iron features a non-stick coated soleplate, variable steam output, and a 360-degree swivel cord for ease of use. It is designed for efficient ironing of various fabric types.

Components:

- Water Tank
- Water Filling Inlet with Cover
- Spray Nozzle
- Steam Control Knob
- Temperature Control Dial

- Indicator Light
- Soleplate (Non-stick coated)
- 360-degree Swivel Cord
- Self-cleaning Button

4. Setup and First Use

1. **Unpacking:** Carefully remove the iron from its packaging. Remove any plastic covers or protective films from the soleplate.
2. **First Use Preparation:** Before using for the first time, or after prolonged storage, iron a damp cloth for a few minutes to remove any manufacturing residues from the soleplate.
3. **Filling the Water Tank:**
    - Ensure the iron is unplugged.
    - Set the steam control to the 'Dry Ironing' position (minimum steam).
    - Open the water filling inlet cover.
    - Using the provided measuring cup, fill the water tank with clean tap water up to the 'MAX' mark. Do not overfill.
    - Close the water filling inlet cover securely.

5. Operating Instructions

5.1 General Ironing

1. Ensure the water tank is filled (for steam ironing) and the iron is plugged into a suitable power outlet.
2. Set the temperature control dial according to the fabric type you are ironing. Refer to the fabric care label on your garment.
3. The indicator light will illuminate, indicating the iron is heating up. It will turn off when the desired temperature is reached.
4. For steam ironing, set the steam control knob to the desired steam level. For dry ironing, set it to the 'Dry Ironing' position.
5. Begin ironing your garment. The 360-degree swivel cord provides flexibility during use.

5.2 Steam Burst and Vertical Ironing

- **Steam Burst:** For stubborn creases, press the steam burst button. This releases a powerful jet of steam. Wait a few seconds between bursts to allow the iron to reheat. Use only when the iron is at a high temperature setting.
- **Vertical Ironing:** The iron is suitable for vertical ironing. Hold the iron vertically a few centimeters away from the fabric (e.g., hanging curtains or clothes). Press the steam burst button to remove wrinkles. Ensure the iron is at a high temperature setting for effective vertical steaming.

5.3 Usage Directions Overview

The following image illustrates key usage directions for your Bajaj MX 16 Steam Iron:

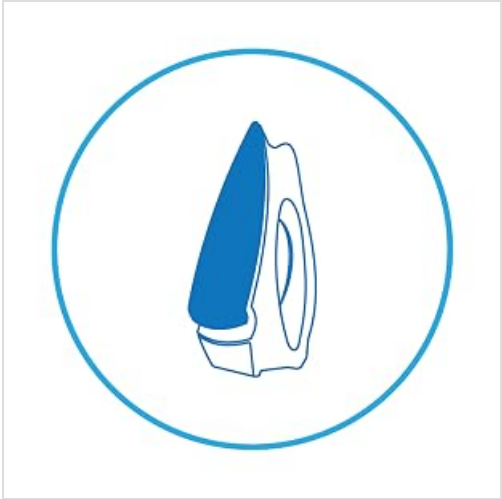


Image: Usage Directions for Bajaj MX 16 Steam Iron. This diagram outlines essential steps for safe and effective ironing.

1. **Open Plastic Cover From The Sole Plate:** Remove any protective plastic film from the soleplate before first use.
2. **Choose Right Heat Setting As Per Your Fabric:** Adjust the temperature control dial to match the fabric type of your garment.
3. **Heat The Iron To Required Temperature:** Allow the iron to heat up until the indicator light turns off, signaling it has reached the set temperature.
4. **Use An Ironing Board For Flawless Ironing:** Always iron on a stable, heat-resistant ironing board.
5. **Do Not Iron On Highly Flammable Surface:** Never place or operate the hot iron on flammable materials or surfaces.

6. Maintenance and Care

6.1 Self-Cleaning Function

The self-cleaning function helps remove scale and mineral deposits from the steam vents. Perform this function regularly, especially if you notice steam output decreasing or white flakes appearing.

1. Fill the water tank to the 'MAX' level.
2. Set the steam control to 'Dry Ironing' and the temperature control to 'MAX'.
3. Plug in the iron and wait for the indicator light to turn off.
4. Unplug the iron.
5. Hold the iron horizontally over a sink.
6. Press and hold the self-cleaning button. Hot water and steam will be expelled from the soleplate, carrying impurities.
7. Gently shake the iron back and forth until the water tank is empty.
8. Release the self-cleaning button.
9. Plug the iron back in and let it heat up to dry the soleplate. Unplug once dry.

6.2 Cleaning the Soleplate

- Allow the iron to cool completely.
- Wipe the soleplate with a damp cloth and a non-abrasive cleaner if necessary. Do not use harsh scouring pads or metallic cleaners.

6.3 Storage

- After use, unplug the iron and allow it to cool completely.
- Empty any remaining water from the tank.

- Store the iron upright on its heel rest in a safe, dry place.

7. Troubleshooting

Problem	Possible Cause	Solution
Iron does not heat up.	Not plugged in; power outlet faulty; temperature dial set to minimum.	Check plug and outlet; adjust temperature dial.
No steam or insufficient steam.	Water tank empty; steam control set to 'Dry Ironing'; temperature too low; steam vents clogged.	Fill water tank; adjust steam control; set higher temperature; perform self-cleaning.
Water leaks from soleplate.	Temperature too low for steam; water tank overfilled; steam control not fully closed for dry ironing.	Increase temperature; do not overfill; ensure steam control is off for dry ironing.
White flakes or residue on clothes.	Mineral deposits in the water tank/steam vents.	Perform self-cleaning function.

8. Specifications

- **Model:** Bajaj MX 16
- **Power:** 1400 Watts
- **Voltage:** Standard household voltage
- **Water Tank Capacity:** 28 ml
- **Steam Rate:** 16 grams/minute
- **Soleplate:** Non-stick coated
- **Cord:** 360-degree swivel cord
- **Dimensions:** 27.8L x 11.6W Centimeters
- **Item Weight:** 915 g
- **Manufacturer:** M/s Innovative
- **Item Model Number:** 440202

9. Warranty and Support

Your Bajaj MX 16 Steam Iron comes with a **2-year warranty** on the product from the date of purchase. Please retain your purchase receipt for warranty claims.
For service, support, or warranty inquiries, please contact Bajaj customer service. Contact details can typically be found on the Bajaj official website or on the warranty card included with your product.
Included Components: Iron, Water measurable cup, Warranty card.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question