Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Secura TM021

Secura 60-Minute Visual Timer User Manual

Model: TM021

Introduction

The Secura 60-Minute Visual Timer is a time management tool designed for various environments, including classrooms, homes, and offices. It helps individuals, especially children, visually understand the passage of time, promoting focus and efficient task completion. This manual provides instructions for setup, operation, maintenance, and troubleshooting.



Image: The Secura 60-Minute Visual Timer, featuring a blue visual disk and a white dial, set to approximately 10 minutes remaining.

Product Features

- **Time Management:** Facilitates efficient task completion and improves focus by providing a clear visual representation of time.
- **Easy to Use:** Simple clockwise dial rotation for setting time and counter-clockwise rotation to turn off.
- **Kids Friendly:** A blue visual disk helps children, including those with autism or ADHD, understand time progression.
- **Adjustable Volume & Ring Duration:** Offers two volume settings (low 50 dB, loud 70 dB) and two alarm durations (3 or 60 seconds).
- **Versatile Applications:** Suitable for use as a classroom timer, study timer, kitchen timer, or toddler timer.

Setup

Before using your Secura Visual Timer, you will need to install batteries and adjust the alarm settings.

1. **Battery Installation:** The timer requires 2 "AAA" batteries (not included). Open the battery compartment on the back of the timer and insert the batteries, ensuring correct polarity. Do not mix old and new batteries.
2. **Adjust Alarm Settings:** On the back of the timer, locate the switches for "Ring Duration" and "Volume Level."
    - **Ring Duration:** Select between 3 seconds or 60 seconds for the alarm sound.
    - **Volume Level:** Choose between Low (approximately 50 dB) or Loud (approximately 70 dB).



Image: The back of the Secura Visual Timer, illustrating the battery compartment for two AAA batteries and the adjustable switches for ring duration and volume level.

Operating Instructions

Follow these steps to operate your Secura Visual Timer:

1. **Setting the Timer:** Turn the center dial clockwise to the desired time. The blue disk will appear, indicating the set duration. The maximum setting is 60 minutes.
2. **Time Elapse:** As time passes, the blue disk will gradually disappear in a counter-clockwise direction.
3. **Alarm Notification:** When the blue disk is completely gone and the timer reaches zero, the alarm will sound according to your selected volume and duration settings.
4. **Stopping the Timer/Ringer:** To turn off the timer before it reaches zero, rotate the dial back to the "0" position. To turn off the ringer if it's sounding, quickly rotate the dial clockwise to "5" and then back to "0".

Note: Rotating the dial counter-clockwise beyond the "0" position may cause damage to the timer mechanism.



Image: A hand demonstrating how to set the Secura Visual Timer by turning the central white dial clockwise.

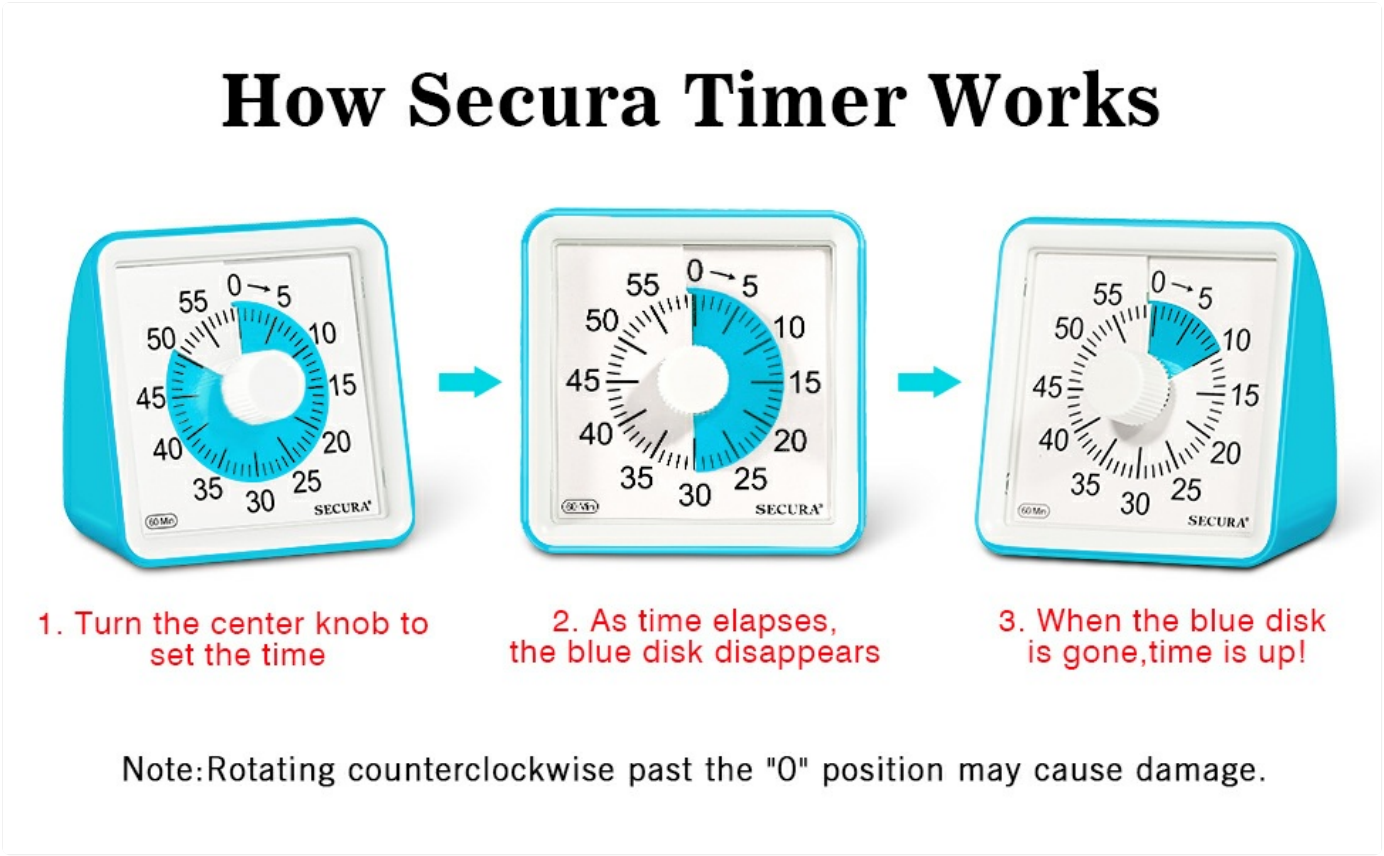


Image: A visual guide illustrating the three operational steps of the Secura Timer: 1. Turn the center knob to set the time. 2. As time elapses, the blue disk disappears. 3. When the blue disk is gone, time is up!

Maintenance

To ensure the longevity and proper functioning of your Secura Visual Timer, follow these maintenance guidelines:

- **Cleaning:** Wipe the timer with a soft, dry cloth. Do not use abrasive cleaners or immerse the timer in water.
- **Battery Replacement:** Replace batteries when the timer's performance diminishes or if the alarm sound becomes weak. Always use new "AAA" batteries.
- **Storage:** Store the timer in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Avoid dropping the timer or subjecting it to strong impacts, as this can damage the internal mechanism.

Troubleshooting

If you encounter issues with your Secura Visual Timer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Timer does not start or blue disk does not appear.	No batteries, dead batteries, or incorrect battery installation.	Ensure 2 new "AAA" batteries are installed correctly with proper polarity.
Alarm does not sound.	Volume set to low, dead batteries, or alarm duration set to 3 seconds and missed.	Check volume level switch on the back. Replace batteries. Consider setting alarm duration to 60 seconds.
Alarm continues to beep indefinitely.	Timer mechanism stuck or not reset properly.	Quickly rotate the dial clockwise to "5" and then back to "0" to reset the ringer. If the issue persists, remove batteries for a few minutes and reinsert.

Problem	Possible Cause	Solution
Ticking sound is too loud.	This model is designed for quiet operation, but a faint mechanical sound may be present.	The timer is designed to be quiet, but some minimal mechanical sound is normal. If it's excessively loud, contact support.

Specifications

Feature	Detail
Brand	Secura
Model Number	TM021
Color	Blue & Blue
Material	Plastic
Product Dimensions	3.1"D x 1.7"W x 3.1"H (7.8 cm D x 4.3 cm W x 7.8 cm H)
Item Weight	0.24 Pounds (3.84 ounces)
Power Source	2 x AAA Batteries (Not Included)
Max Time Setting	60 Minutes
Alarm Volume Levels	Low (approx. 50 dB), Loud (approx. 70 dB)
Alarm Duration Options	3 seconds, 60 seconds



Image: The Secura Visual Timer with its product dimensions clearly marked: 3.1 inches (7.8 cm) in height and depth, and 1.8 inches (4.6 cm) in width.

Warranty and Support

For warranty information or technical support, please refer to the official Secura website or contact their customer service. Details are typically provided with your product packaging or on the manufacturer's website.
You can visit the Secura Store on Amazon for more information and product details.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07HR13WFZ

More documents and user manuals: **https://manuals.plus/**