**Philips LED 538249**

# Philips LED A19 Green Party Bulbs User Manual

Model: 538249

## 1. Introduction

Thank you for choosing Philips LED A19 Green Party Bulbs. These energy-efficient LED bulbs are designed to provide a vibrant green light, ideal for special occasions and festive home lighting. This manual provides essential information for the safe and effective use of your new bulbs.




*This image displays a pack of six Philips LED A19 green light bulbs, showcasing their vibrant color and standard bulb shape.*


## 2. Safety Information

- **Indoor Use Only:** These bulbs are designed for indoor use. Do not use them in outdoor fixtures unless specifically rated for outdoor use.
- **Power Off Before Installation:** Always turn off the power to the fixture before installing or removing the bulb.
- **Proper Voltage:** Ensure the fixture's voltage matches the bulb's voltage (120 Volts).
- **Avoid Over-tightening:** Do not over-tighten the bulb into the socket, as this can damage the bulb or fixture.
- **Not Dimmable:** These bulbs are generally not designed for use with dimmer switches unless explicitly stated on the packaging. Using them with a dimmer may cause flickering or damage.
- **Mercury-Free:** Philips LED bulbs are mercury-free, making them a safer choice for your home and the environment.

## 3. Setup and Installation

Installing your Philips LED A19 Green Party Bulb is a straightforward process. Follow these steps:

1. **Ensure Power is Off:** Locate the light fixture where you intend to install the bulb. Turn off the power to the fixture at the wall switch and, if necessary, at the circuit breaker to prevent electrical shock.
2. **Remove Old Bulb (if applicable):** If replacing an existing bulb, allow it to cool completely before carefully unscrewing it counter-clockwise from the socket.
3. **Insert New Bulb:** Gently screw the Philips LED A19 Green Party Bulb clockwise into the E26 medium screw base socket until it is snug. Do not overtighten.
4. **Restore Power:** Turn the power back on at the circuit breaker (if turned off) and then at the wall switch.
5. **Test:** Verify that the bulb illuminates correctly.

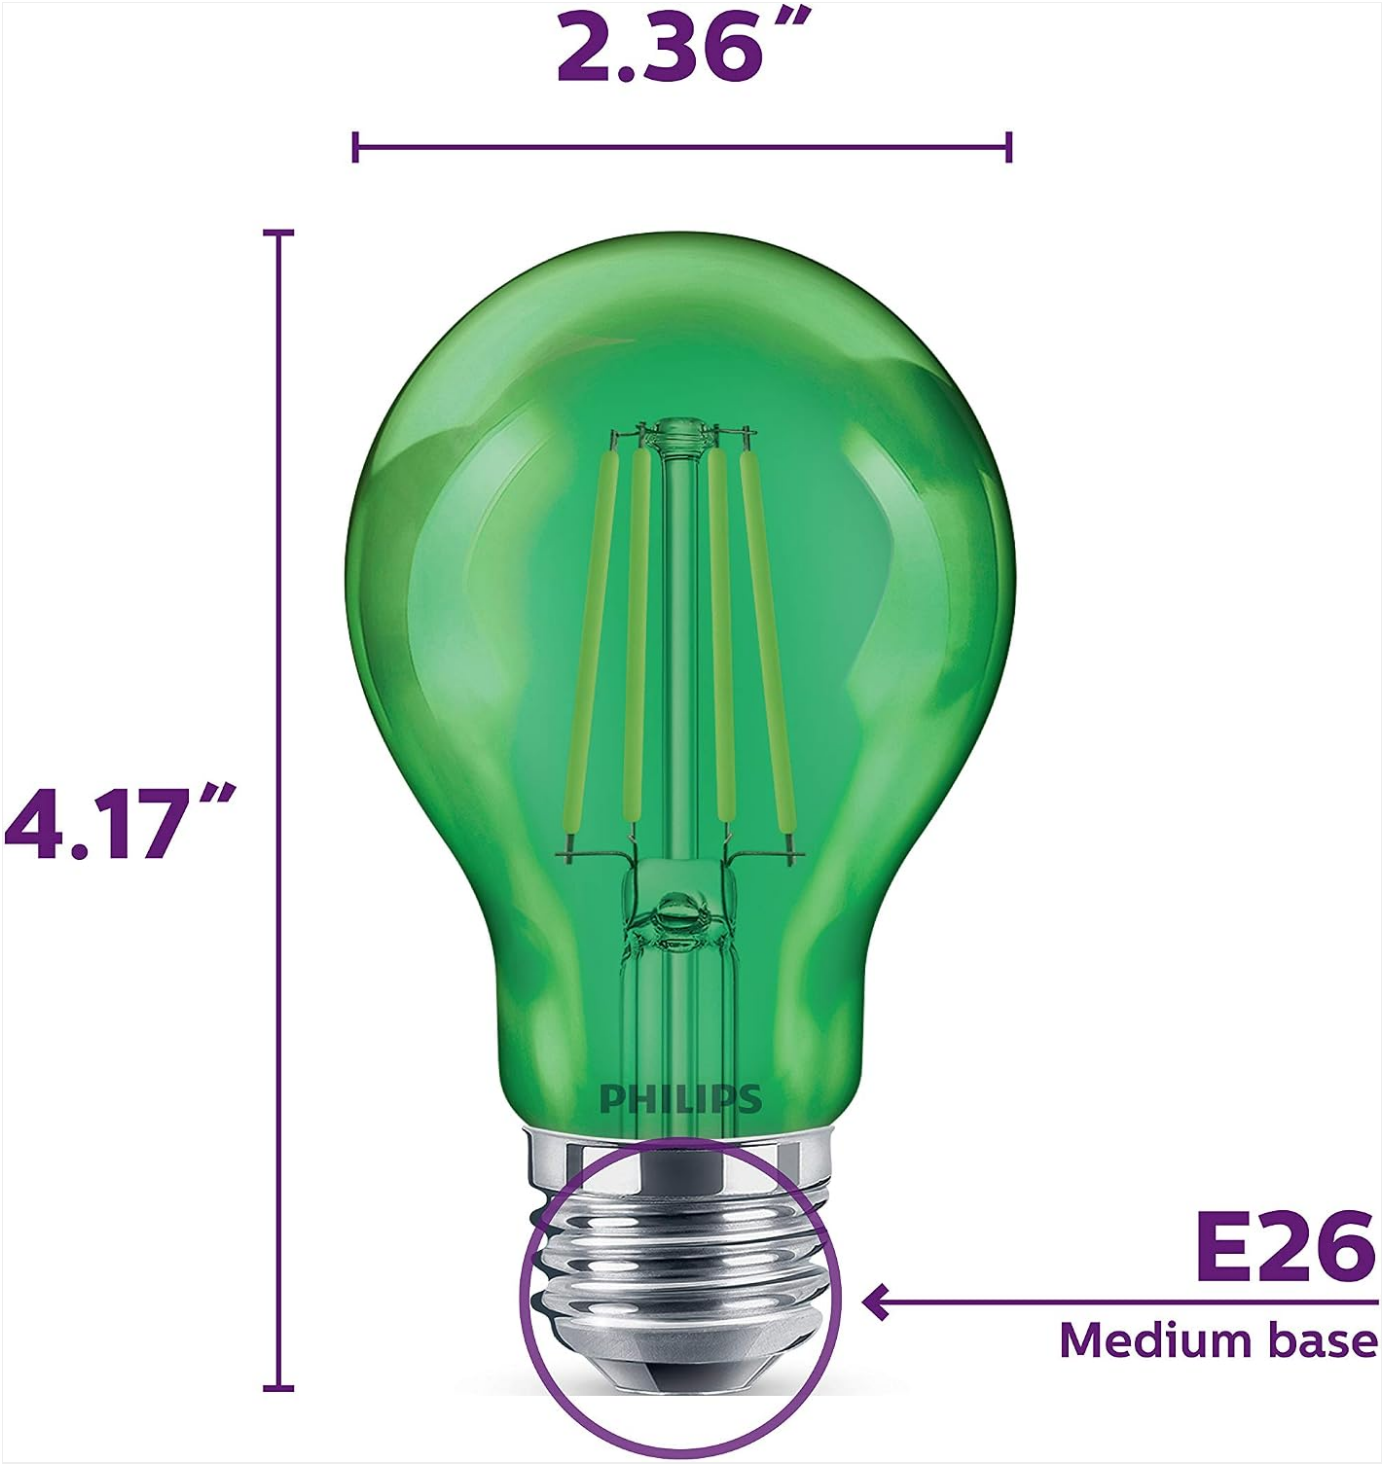


*A diagram illustrating the dimensions of the Philips LED A19 bulb, measuring 4.17 inches in height and 2.36 inches in width, with a clear indication of its E26 medium screw base.*

## 4. Operating Instructions

Operating your Philips LED A19 Green Party Bulb is simple:

- **Turning On/Off:** Use the standard wall switch connected to the light fixture to turn the bulb on or off.
- **Instant On:** These LED bulbs provide instant full brightness without any warm-up time.
- **Energy Efficiency:** The 4-Watt LED bulb provides light equivalent to a 40-Watt incandescent bulb, consuming significantly less energy.




*This image features a young girl comfortably reading on a couch, highlighting the 'EyeComfort' feature of Philips LED bulbs, designed to provide light that is gentle on the eyes.*

## 5. Maintenance

Philips LED bulbs are designed for long-lasting performance and require minimal maintenance.

- **Cleaning:** Before cleaning, ensure the power to the fixture is off and the bulb is cool. Wipe the bulb with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.

- **Replacement:** With an average life of 15,000 hours, frequent replacement is not typically necessary. When replacement is needed, follow the installation steps in Section 3.
- **Disposal:** Dispose of old LED bulbs according to local regulations for electronic waste.





*A Philips LED A19 green bulb is shown installed within a stylish, modern geometric pendant light fixture, demonstrating its aesthetic integration into home decor.*

## 6. Troubleshooting

If your Philips LED A19 Green Party Bulb is not functioning as expected, consider the following common issues and solutions:

| Problem | Possible Cause | Solution |
|---|---|---|
| Bulb does not light up. | ◦ Power is off.<br>◦ Bulb not screwed in properly.<br>◦ Fixture or switch malfunction.<br>◦ Bulb has reached end of life. | ◦ Check wall switch and circuit breaker.<br>◦ Turn off power, then re-screw the bulb firmly.<br>◦ Test with a known working bulb or consult an electrician.<br>◦ Replace the bulb. |
| Bulb flickers. | ◦ Incompatible dimmer switch.<br>◦ Loose connection. | ◦ These bulbs are not dimmable. Remove from dimmer circuit.<br>◦ Turn off power, then re-screw the bulb firmly. |




*An infographic showcasing key benefits of Philips LED bulbs, including high quality light, EyeComfort, energy saving, instant-on capability, and long-lasting performance.*

## 7. Specifications

Technical details for the Philips LED A19 Green Party Bulb (Model 538249):

| Feature | Detail |
|---|---|
| Brand | Philips LED |
| Model Name | 538249 |
| Light Type | LED |
| Bulb Shape Size | A19 |

| Feature | Detail |
| --- | --- |
| Bulb Base | E26 Medium Screw Base |
| Wattage | 4 Watts |
| Incandescent Equivalent | 40 Watts |
| Voltage | 120 Volts |
| Light Color | Green |
| Material | Glass |
| Indoor/Outdoor Usage | Indoor |
| Average Life | 15,000 Hours |
| Special Feature | Energy Efficient, EyeComfort |
| Dimmable | No (unless specified on packaging) |




*This image depicts a family in a well-lit room, reinforcing the 'EyeComfort' benefit of Philips LED lighting, which aims to reduce eye strain.*

## 8. Warranty Information

This Philips LED A19 Green Party Bulb comes with a **3-year manufacturer warranty**. For warranty claims or detailed terms and conditions, please refer to the official Philips LED website or contact customer support.

## 9. Customer Support

For further assistance, technical support, or inquiries regarding your Philips LED A19 Green Party Bulbs, please visit the official Philips Lighting website or contact their customer service department. Contact details can typically be found on the product packaging or the official Philips website.

*Please have your model number (538249) and purchase information ready when contacting support.*

© 2025 Philips LED. All rights reserved.

## Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**