HOMCOM 370-056RD

HOMCOM Vespa 6V Electric Ride-On Scooter User Manual

Model: 370-056RD

Introduction

This manual provides detailed instructions for the assembly, operation, and maintenance of the HOMCOM Vespa 6V Electric Ride-On Scooter, model 370-056RD. Please read this manual thoroughly before assembly and use to ensure safe operation and to maximize the product's lifespan. Keep this manual for future reference.



Image: A child wearing a helmet and glasses, happily riding the red HOMCOM Vespa electric scooter outdoors on a paved path.

Safety Information

WARNING: Adult supervision is required at all times. This product is not a toy for children under 18 months. Recommended age range: 18 months to 6 years.

- Always ensure the child wears appropriate safety gear, including a helmet and protective pads.
- Do not operate the scooter near stairs, on public roads, or in areas with heavy traffic.
- Ensure the riding surface is flat, dry, and free from obstacles.
- Do not exceed the maximum weight capacity (not explicitly stated, but implied by age range).
- Keep hands, hair, and clothing away from moving parts.
- This product complies with safety standards EN71-1-2-3, EN62115, and EMC.

Package Contents

Before assembly, verify that all components are present and undamaged. If any parts are missing or damaged, contact customer support immediately.

- Vespa Electric Scooter main body
- Handlebar assembly
- Auxiliary stabilizer wheels (2)
- Charger
- User Manual
- Assembly hardware (screws, washers, etc.)

Setup and Assembly

Assembly is required. It is recommended that two adults perform the assembly process.

1. **Attach the Handlebar:** Carefully align the handlebar with the steering column and secure it using the provided screws. Ensure it is firmly attached and does not wobble.
2. **Install Stabilizer Wheels:** Attach the two auxiliary stabilizer wheels to the designated slots on the rear of the scooter. These wheels provide stability for younger riders.
3. **Initial Charge:** Before first use, fully charge the scooter's 6V battery. Locate the charging port, typically on the side of the scooter. Connect the charger and plug it into a standard wall outlet. The charging indicator light will show the charging status.

DESIGN DE ROUE AUXILIAIRE





Sûr et ne basculera pas pour assurer la sécurité de la conduite du bébé

Image: A detailed view of the auxiliary stabilizer wheel, designed to prevent tipping and enhance safety for young riders.



Image: A close-up showing the charging port labeled "CHARGE" and the rear light assembly, along with a side mirror.

Operating Instructions

Familiarize your child with the controls before allowing them to ride independently.

1. **Power On/Off:** Press the "On/Off" button located on the dashboard to power the scooter on or off.
2. **Forward/Reverse:** Use the forward/reverse switch to select the desired direction of travel.
3. **Acceleration:** Press the foot pedal accelerator to move the scooter forward. Release the pedal to brake.
4. **Sound and Lights:**
    - **Music Buttons:** Press the music buttons on the dashboard to play pre-loaded tunes.
    - **MP3/USB Port:** Connect an external device via the MP3 port or insert a USB drive to play custom audio.
    - **Horn:** Press the horn button for sound effects.
    - **Headlights/Tail Lights:** The scooter features working headlights and tail lights for a realistic experience and improved visibility.

EXPÉRIENCE DE CONDUITE RÉALISTE

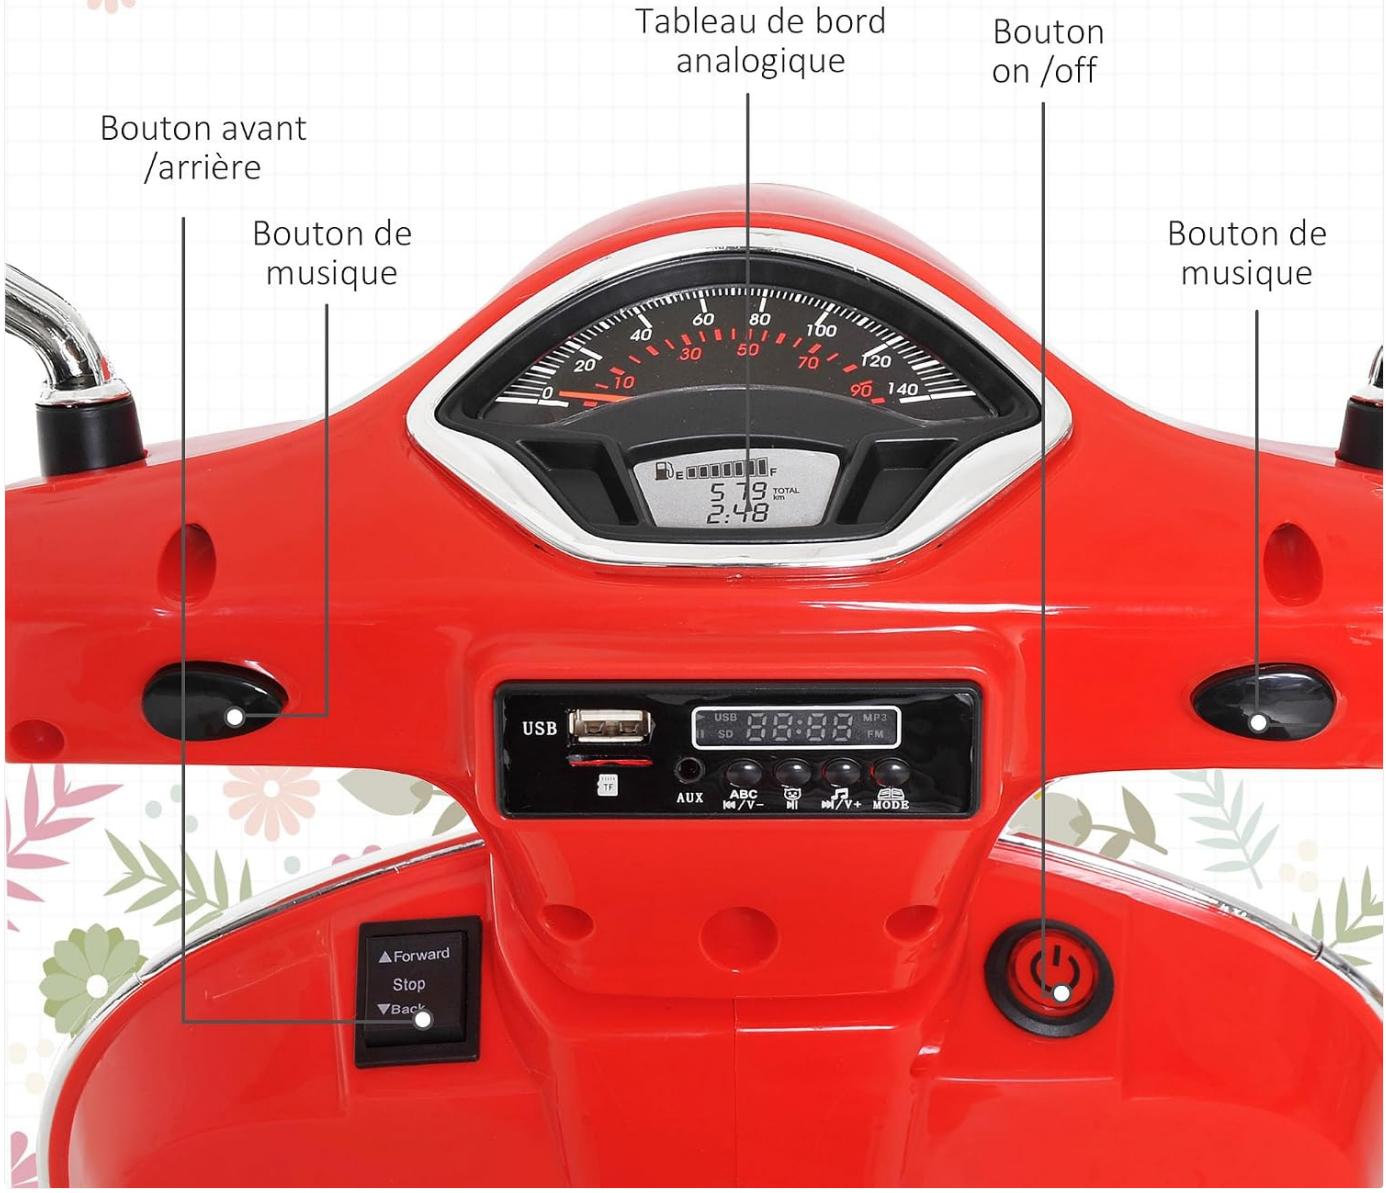


Image: A close-up of the scooter's dashboard, highlighting the analog speedometer, on/off button, forward/reverse button, music buttons, and USB/MP3 port for audio playback.



Image: The front of the scooter with its headlight illuminated, demonstrating the lighting function for safer and more engaging rides.

Maintenance

- **Cleaning:** Wipe the scooter with a damp cloth. Do not use abrasive cleaners or solvents. Avoid direct water spray.
- **Battery Care:**
  - Recharge the battery after each use.
  - Do not overcharge the battery. Disconnect the charger once fully charged.
  - If storing for extended periods, charge the battery every 30 days to maintain its lifespan.
  - Only use the charger supplied with the product.
- **Tires and Wheels:** Regularly inspect tires and wheels for wear and tear. Ensure the auxiliary wheels are securely attached.
- **General Inspection:** Periodically check all screws, nuts, and fasteners to ensure they are tight.



Image: A collage showing key features: a non-slip handlebar grip, a comfortable and wide seat, the foot accelerator pedal, and durable, wear-resistant wheels.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Scooter does not move.	Battery is low or discharged. Power switch is off. Loose connection.	Charge the battery. Turn the power switch on. Check all electrical connections.
Short operating time.	Battery not fully charged. Old battery. Overloaded scooter.	Ensure battery is fully charged (up to 45 minutes run time). Replace battery if necessary. Reduce load on the scooter.
Lights/Sounds not working.	Loose wiring. Component malfunction.	Check wiring connections. Contact customer support.

SPECIFICATIONS

Model Number	370-056RD
Brand	HOMCOM
Sub-brand	Vespa
Color	Red
Material	Plastic
Dimensions (L x W x H)	102 cm x 50.5 cm x 75.5 cm (40.2" x 19.9" x 29.7")
Weight	9 kg (19.8 lbs)
Recommended Age	18 months - 6 years
Battery	6V (Type: Non-standard battery, requires batteries)
Run Time	Up to 45 minutes (on a full charge)
Assembly Required	Yes
Safety Certifications	EN71-1-2-3, EN62115, EMC



Image: A visual representation of the scooter's dimensions, indicating its length, width, and height for reference.

Warranty Information

HOMCOM products typically come with a limited warranty. Please refer to the warranty card included in your package or visit the official HOMCOM website for detailed warranty terms and conditions. Keep your proof of purchase for warranty claims.

Customer Support

For any questions, missing parts, or technical assistance, please contact HOMCOM customer service. You can usually find contact information on the product packaging, the official HOMCOM website, or through your retailer.
Online Support: Visit the official HOMCOM website for FAQs and support resources.
Contact Number: Refer to your product documentation for regional contact numbers.

© 2026 HOMCOM. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question