JOYACCESS M1B

JOYACCESS Wireless Mouse

INSTRUCTION MANUAL

1. Introduction

Thank you for choosing the JOYACCESS Wireless Mouse. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your new wireless mouse. Designed for comfort and efficiency, this mouse offers silent clicks, adjustable DPI, and broad compatibility, making it an ideal companion for your notebook, laptop, or PC.

Key features include:

- **Wireless Connectivity:** 2.4G wireless with USB Nano receiver for a stable connection up to 10 meters (33 ft).
- **Silent Operation:** Smooth surface and quiet clicks ensure a disturbance-free working environment.
- **Energy Efficiency:** Automatic sleep mode after 8 minutes of inactivity, waking up with any button click. Requires 1 AA battery (not included).
- **Slim & Portable Design:** Compact dimensions (4.3 x 2.3 x 0.9 inches; 0.23lb) for easy portability.
- **Adjustable DPI:** 5 levels (800/1200/1600/2000/2400) for customizable cursor speed.
- **Wide Compatibility:** Supports Windows 7/8/10/XP, Vista 7/8, Linux, and more.

2. Product Overview

Familiarize yourself with the components of your JOYACCESS Wireless Mouse:

Image: The JOYACCESS Wireless Mouse in black, shown alongside its compact USB Nano Receiver.

LED Optical Engine

The use of laser as the lighting source (laser wavelength of 850nm, in the infrared region, we can not see with the naked eye) to replace the traditional red LED light source, so that the mouse life longer.

4.3 in

0.9 in

2.3 in

Battery Compartment

LED Optical Engine

ON/OFF Switch

Image: Underside of the mouse highlighting the battery compartment, LED Optical Engine, and ON/OFF switch.

Package Contents:

- JOYACCESS Wireless Mouse (Black)
- USB Nano Receiver (stored inside the mouse)
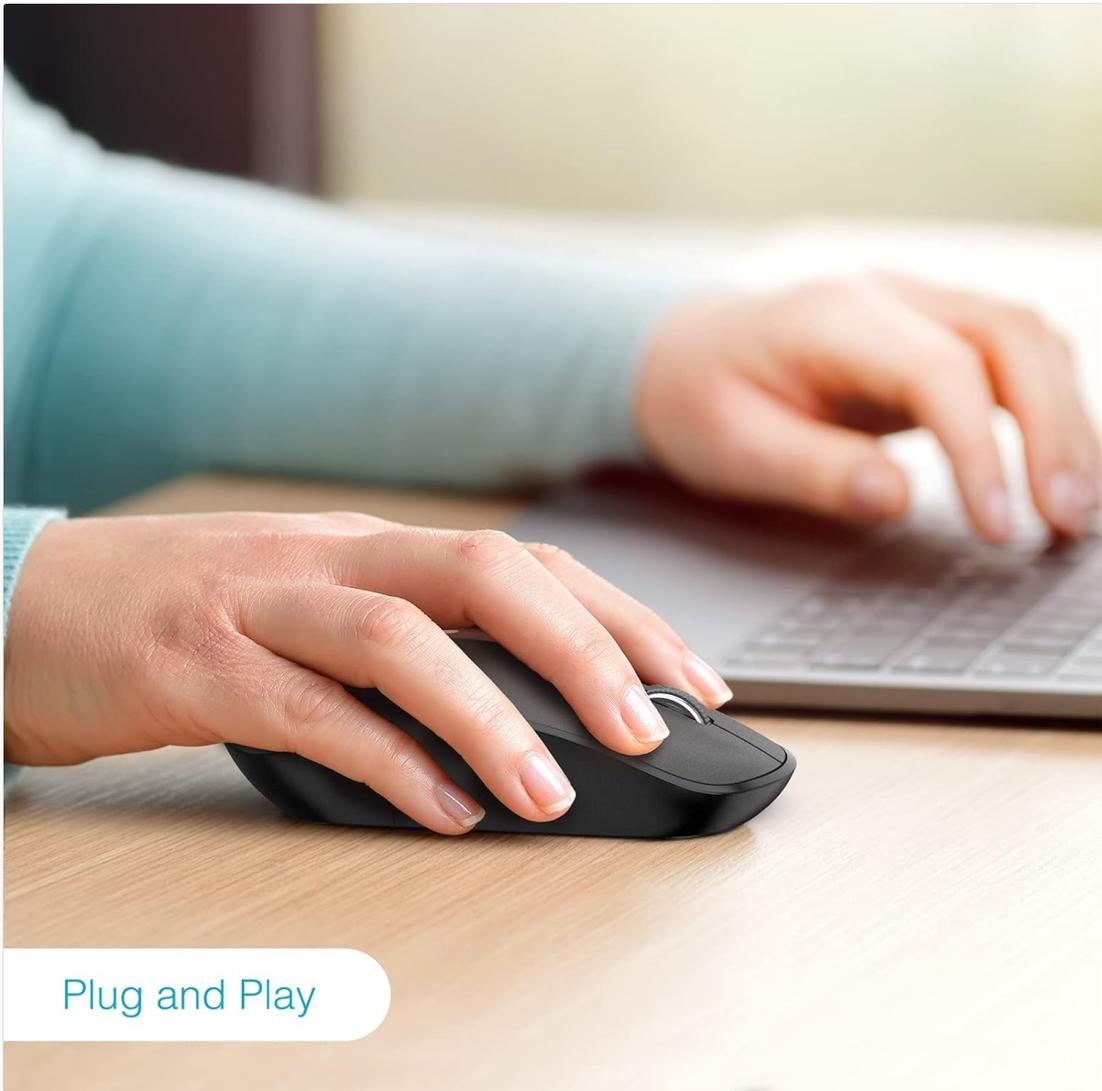- User Manual (this document)

3. Setup

Follow these steps to set up your wireless mouse:

1. **Install Battery:** Open the battery compartment cover on the underside of the mouse. Insert one AA battery (not included), ensuring correct polarity (+/-). Close the cover securely.

UP to 18 Months of Battery Life

Take out USB Nano Receiver

Image: The underside of the mouse with the battery compartment open, showing where to insert the AA battery and the storage slot for the USB Nano Receiver.

2. **Retrieve USB Nano Receiver:** The USB Nano Receiver is conveniently stored within the mouse itself. Gently pull it out from its dedicated slot next to the battery compartment.

3. **Connect Receiver:** Plug the USB Nano Receiver into an available USB port on your computer (laptop, desktop, etc.).

Plug and Play

Image: A hand demonstrating plugging the USB Nano Receiver into a laptop's USB port, illustrating the plug-and-play setup.

4. **Power On:** Locate the ON/OFF switch on the underside of the mouse and slide it to the 'ON' position.

5. **Automatic Connection:** Your computer should automatically detect and install the necessary drivers. No additional software installation is required. Your mouse is now ready for use.

Official Product Video: Setup and Features

Video: This official video from JOYACCESS (Winsoft-tech) demonstrates the unboxing, battery installation, USB receiver connection, and basic usage of the wireless mouse, highlighting its plug-and-play functionality and silent clicks.

4. Operating Instructions

Your JOYACCESS Wireless Mouse is designed for intuitive use:

- **Basic Functions:** Use the left and right click buttons for standard operations. The scroll wheel allows for smooth vertical scrolling.

NOISELESS CLICK

Offers Extremely Comfort Which Can Make you Focus on What you do Without Disturbing Others

Image: The mouse is shown next to a sleeping child, emphasizing its noiseless click feature for a quiet environment.

- **DPI Adjustment:** The mouse features a DPI adjustment button (usually located near the scroll wheel). Press this button to cycle through 5 adjustable DPI levels (800/1200/1600/2000/2400). Choose the sensitivity that best suits your needs for precise control.

Image: A visual representation of the 5 adjustable DPI levels (800, 1200, 1600, 2000, 2400) available on the mouse, allowing users to customize cursor speed.

- **Energy Saving Mode:** To conserve battery life, the mouse will automatically enter sleep mode after 8 minutes of inactivity. To wake it up, simply click any button on the mouse.

- **Compatibility:** The mouse is widely compatible with various operating systems, including Windows 7/8/10/XP, Vista 7/8, Linux, and macOS.
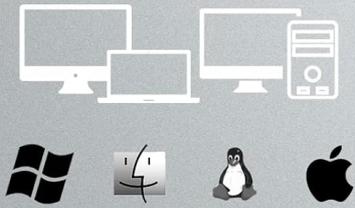
Image: The mouse is displayed with icons representing its wide compatibility with Windows, Mac, and Linux operating systems.

5. Maintenance

To ensure optimal performance and longevity of your mouse:

- **Cleaning:** Use a soft, dry cloth to clean the surface of the mouse. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the internal components.

- **Battery Replacement:** When the mouse performance degrades or it stops responding, it's likely time to replace the AA battery. Follow the battery installation steps in Section 3.

- **Storage:** When not in use for extended periods, turn off the mouse using the ON/OFF switch to further conserve battery life. Store the USB Nano Receiver inside the mouse to prevent loss.

6. Troubleshooting

If you encounter issues with your JOYACCESS Wireless Mouse, try the following common solutions:

- **Mouse Not Responding:**

  - Ensure the mouse is turned 'ON' using the switch on the bottom.

- Check if the battery is correctly installed and has sufficient charge. Replace if necessary.
- Verify that the USB Nano Receiver is securely plugged into a working USB port on your computer. Try a different USB port.
- Move the mouse closer to the USB Nano Receiver to ensure it's within the effective 10-meter range.

- **Erratic Cursor Movement:**

  - Clean the optical sensor on the underside of the mouse.
  - Ensure you are using the mouse on a suitable surface. Avoid highly reflective or transparent surfaces like glass.
  - Adjust the DPI setting using the DPI button to see if a different sensitivity improves performance.

- **Connection Issues:**

  - Unplug the USB Nano Receiver, wait a few seconds, and then plug it back in.
  - Restart your computer.

For more detailed troubleshooting and support, please refer to the official Troubleshooting Guide PDF available at: Troubleshooting Guide (PDF)

7. Specifications

Feature	Detail
Product Dimensions	5.51 x 3.54 x 1.57 inches
Item Weight	2.26 ounces
Item Model Number	M1B
Batteries Required	1 AA battery (not included)
Connectivity Technology	2.4G Wireless (USB)
Movement Detection Technology	Optical
DPI Levels	800/1200/1600/2000/2400
Special Features	Wireless, Lightweight, Ergonomic Design, Soundless
Compatibility	Windows 7/8/10/XP, Vista 7/8, Linux, macOS
Manufacturer	J JOYACCESS
Country of Origin	China

8. Warranty & Support

JOYACCESS provides an 18-month warranty for this product. For any warranty claims, technical support, or product inquiries, please contact JOYACCESS customer service through their official

channels or the retailer where you purchased the product.

You can visit the JOYACCESS store on Amazon for more information: JOYACCESS Store