**Saved from manuals.plus.**
**Open the live page for links to other documents and user manuals.**



**YING RAY 2018111110**

# YING RAY Replacement Remote Control for Lennox Air Conditioners (Celsius Display) - User Manual

Compatible with Lennox Models: LM012CI, LM012HI, LM018CI, LM018HI, LM024CI, LM024HI, LM036CI, LM036HI Series

## 1. Introduction

This manual provides detailed instructions for the proper setup, operation, and maintenance of your YING RAY replacement remote control for Lennox Air Conditioners. Please read this manual thoroughly before using the remote control to ensure optimal performance and longevity.

## 2. Setup

### 2.1 Battery Installation

The remote control requires two (2) AAA 1.5V ordinary batteries (not included). Follow these steps to install the batteries:

1. Open the battery compartment cover located on the back of the remote control.
2. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
3. Close the battery compartment cover securely.

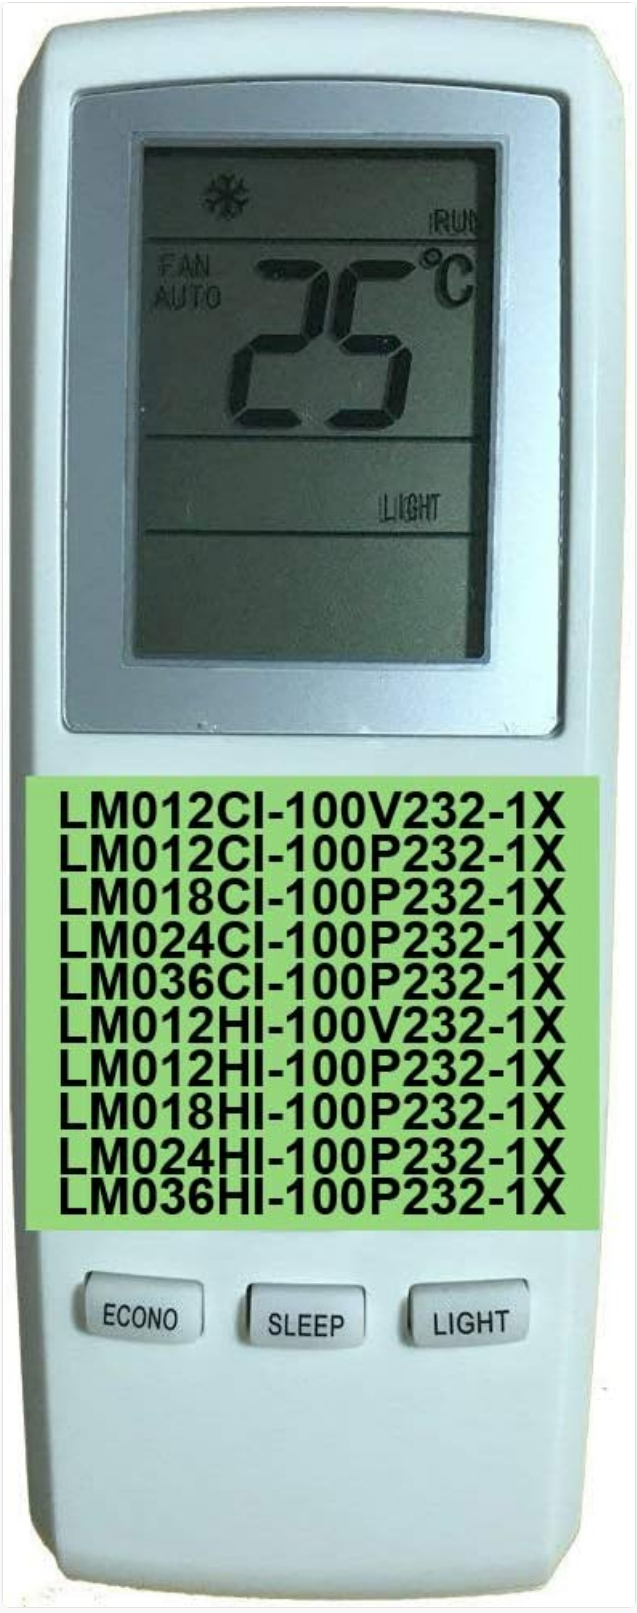



**Figure 1:** YING RAY Replacement Remote Control. The display shows 'FAN AUTO' and '25°C'. Buttons labeled 'ECONO', 'SLEEP', and 'LIGHT' are visible at the bottom. A green label on the remote lists compatible Lennox AC models.

## 3. Operating Instructions

### 3.1 General Operation

Point the remote control directly at the indoor unit of your Lennox Air Conditioner. Ensure there are no obstructions between the remote and the unit. The remote control displays temperature in Celsius.

## 3.2 Button Functions

- **Power Button:** Turns the air conditioner ON or OFF.
- **Temperature Adjustment Buttons (Up/Down Arrows):** Adjusts the desired temperature setting. The display shows the temperature in Celsius.
- **FAN Button:** Cycles through fan speed settings (e.g., Low, Medium, High, Auto).
- **MODE Button:** Selects the operating mode (e.g., Cool, Heat, Dry, Fan, Auto). The display may show 'FAN AUTO' when in auto fan mode.
- **ECONO Button:** Activates or deactivates economy mode for energy saving.
- **SLEEP Button:** Activates or deactivates sleep mode, which adjusts temperature gradually for comfortable sleep.
- **LIGHT Button:** Controls the display light on the remote or the indoor unit's panel light.

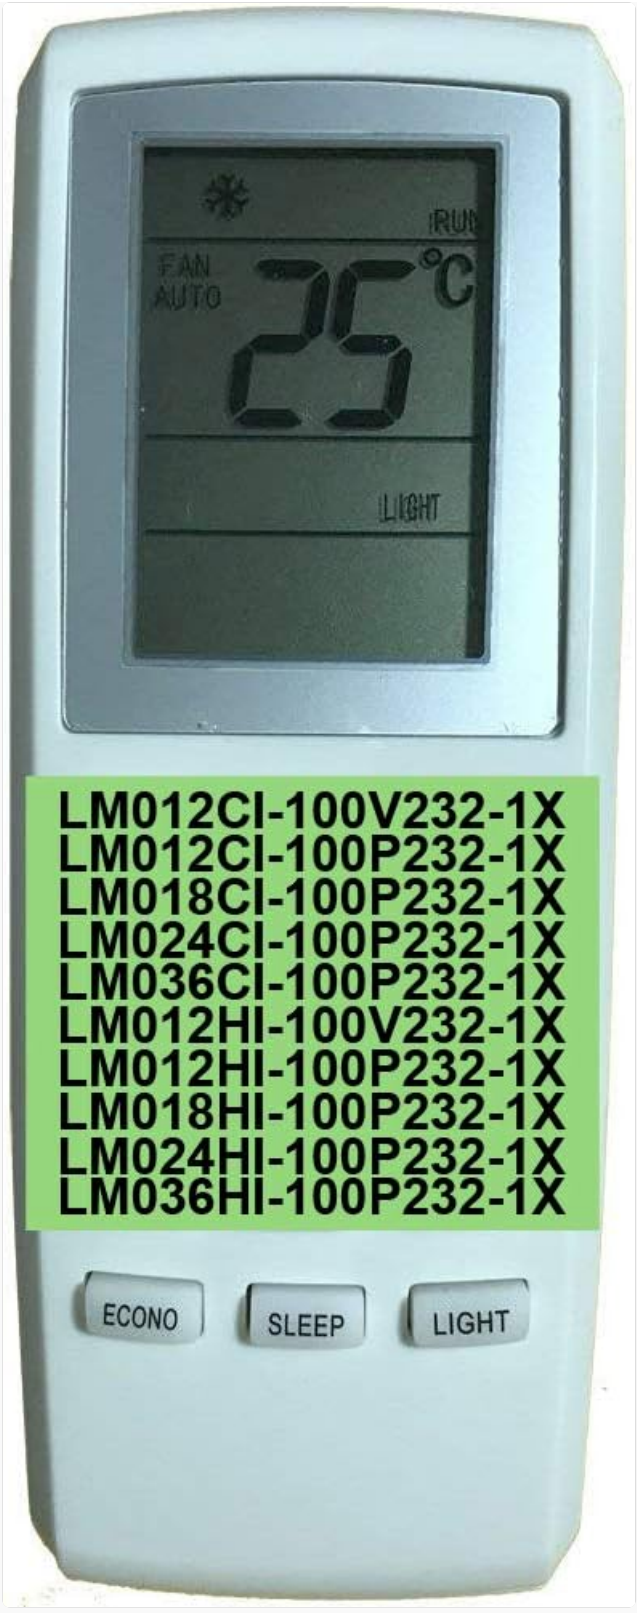



**Figure 2:** Close-up of the remote control display showing 'FAN AUTO' and a set temperature of '25°C'.

## 4. Maintenance

### 4.1 Cleaning

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these can damage the surface or internal components.

### 4.2 Battery Replacement

Replace batteries when the remote control's display becomes dim or its range decreases. Always replace both batteries simultaneously with new AAA batteries. Remove batteries if the remote will not be used for an extended period to prevent leakage.

## 5. Troubleshooting

If you encounter issues with your remote control, refer to the table below for common problems and solutions:

| Problem | Possible Cause | Solution |
|---|---|---|
| Remote control not responding | Dead or incorrectly installed batteries. Obstruction between remote and AC unit. Remote out of range. | Replace batteries with new ones, ensuring correct polarity. Remove any obstructions. Move closer to the AC unit. |
| Display is dim or blank | Low battery power. | Replace batteries. |
| AC unit not responding to commands | Remote control not compatible with AC unit. Infrared sensor on AC unit is blocked or faulty. | Verify compatibility with your specific Lennox AC model. Ensure AC unit's sensor is clear. Consult AC unit's manual for sensor location. |

## 6. Specifications

| Feature | Detail |
|---|---|
| Brand | YING RAY |
| Model Number | 2018111110 |
| Compatible AC Brands | Lennox |
| Compatible AC Models | LM012CI-100V232-1X, LM012CI-100P232-1X, LM018CI-100P232-1X, LM024CI-100P232-1X, LM036CI-100P232-1X, LM012HI-100V232-1X, LM012HI-100P232-1X, LM018HI-100P232-1X, LM024HI-100P232-1X, LM036HI-100P232-1X |
| Temperature Display | Celsius |
| Battery Type | 2 x AAA 1.5V (not included) |
| Controller Type | Button Control |
| Special Feature | Ergonomic design |

## 7. Warranty and Support

Specific warranty information for this replacement remote control is not provided in the product details. For any support inquiries or further assistance, please refer to the seller or the point of purchase.


### Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**

---

**Open the live page**

**https://manuals.plus/asin/B07KDSS5PL**

More documents and user manuals: **https://manuals.plus/**