Camp Chef PG14

Camp Chef Sidekick 14-inch Grill Accessory with Flat Top Griddle Instruction Manual

Model: PG14

Introduction

Thank you for choosing the Camp Chef Sidekick 14-inch Grill Accessory with Flat Top Griddle. This versatile outdoor cooking system is designed to enhance your grilling experience, offering a powerful propane-powered burner and a convenient flat top griddle for a variety of cooking methods. This manual provides essential information for the safe and efficient use of your Sidekick.



Image: The Camp Chef Sidekick Grill Accessory with its included flat top griddle, showcasing its compact design.

Safety Information

WARNING: This product can expose you to chemicals including carbon monoxide, which is known to the State of California to cause birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

- Always operate the Sidekick outdoors in a well-ventilated area.
- Keep children and pets away from the grill during operation.
- Ensure all connections are secure and leak-free before lighting.
- Do not store propane cylinders indoors.
- Use heat-resistant gloves when handling hot surfaces.
- Allow the unit to cool completely before cleaning or storage.

Package Contents

- Camp Chef Sidekick Grill Accessory (Model PG14)
- Professional Flat Top Griddle (True Seasoned Surface)
- Propane Tank Holder
- Grease Cup



Image: Components of the Sidekick, including the flat top griddle and the removable grease cup.

Setup

1. **Attachment to Pellet Grill:** The Sidekick is designed to attach to all full-sized Camp Chef 24 and 36-inch pellet grills. Consult your pellet grill's manual for specific attachment points and instructions.
2. **Propane Connection:** Securely attach a 1 lb propane cylinder to the Sidekick using the integrated propane tank holder. Ensure a tight connection to prevent leaks.
3. **Griddle Placement:** Place the Professional Flat Top Griddle onto the burner system. The griddle is pre-seasoned and ready for immediate use.
4. **Grease Cup Installation:** Attach the grease cup to the designated slot on the front of the Sidekick to collect drippings during cooking.



Image: The Camp Chef Sidekick Grill Accessory securely attached to a larger Camp Chef pellet grill, demonstrating its integrated design.

Operating Instructions

1. **Lighting:** The Sidekick features matchless ignition. Turn the heat-control knob to the "Ignite" position and

press the igniter button. If the burner does not light within 5 seconds, turn the knob to "Off", wait 5 minutes, and repeat the lighting procedure.

2. **Heat Control:** Use the fully adjustable heat-control knob to achieve your desired cooking temperature. The 28,000 BTU cast-aluminum burner provides powerful and consistent heat.
3. **Cooking Versatility:** The 14-inch cooking system is compatible with various Camp Chef accessories (sold separately), allowing you to bake, sear, boil, sauté, braise, or grill. The included flat top griddle is ideal for cooking items like bacon, eggs, pancakes, and smash burgers.
4. **Wind Baffled Technology:** The integrated Wind Baffled Technology helps maintain consistent heat even in windy conditions.

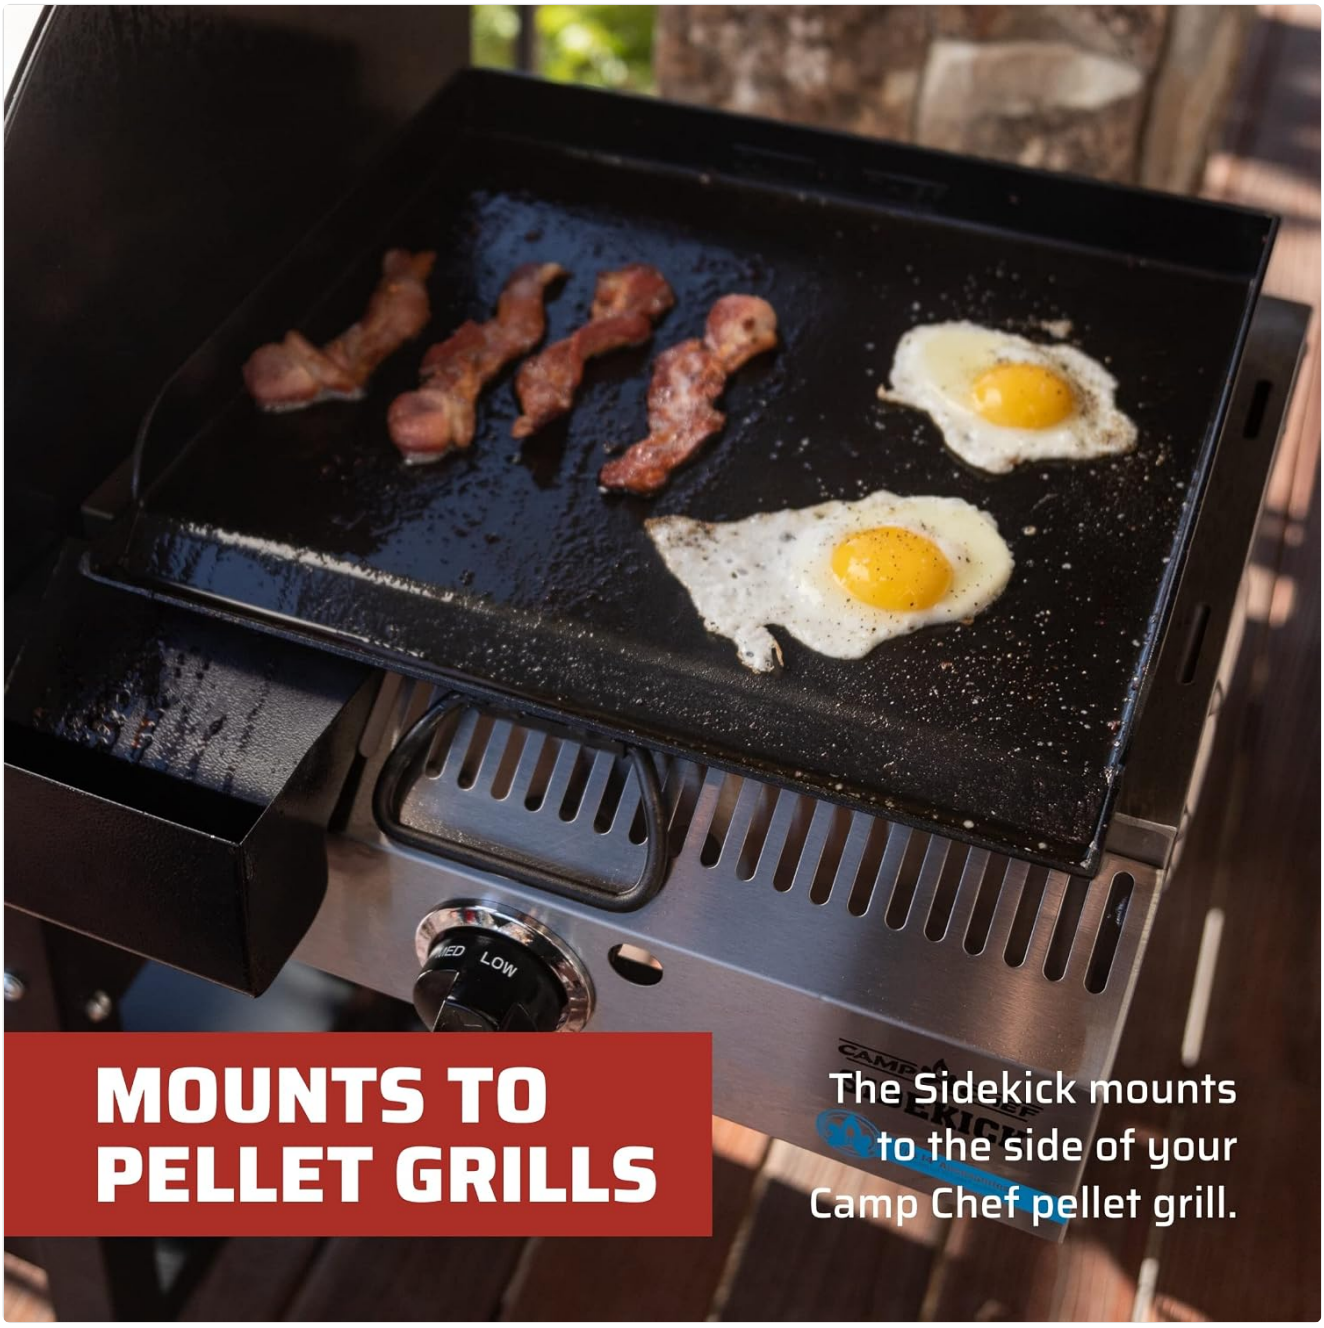


Image: Bacon and eggs being cooked on the flat top griddle, demonstrating its use for breakfast items.



Image: A close-up view of the Camp Chef Sidekick's adjustable heat-control knob and matchless igniter button.



Image: Salmon being cooked on a different accessory placed on the Sidekick, highlighting its versatility.

Official Product Video: Camp Chef Gridiron Game Day

Your browser does not support the video tag.

Video: This video demonstrates the Camp Chef Gridiron Flat Top in action, showcasing its use for tailgating and preparing various foods like burgers, sausages, and vegetables. It highlights the ease of cooking and the flavor achieved with Camp Chef products.

Maintenance and Care

- **Cleaning the Griddle:** The flat top griddle features a True Seasoned Surface. After each use, scrape off any food particles and wipe down the surface. For stubborn residue, use warm water and a griddle scraper. Avoid harsh detergents that can strip the seasoning.
- **Grease Management:** Regularly empty and clean the grease cup. The built-in grease drain efficiently collects drippings, making cleanup easier.
- **General Cleaning:** Wipe down the exterior of the Sidekick with a damp cloth. Ensure all components are dry before storage.

- **Storage:** Store the Sidekick in a dry, protected area when not in use.

Troubleshooting

Problem	Possible Cause	Solution
Burner does not light	No propane, loose connection, igniter issue.	Check propane cylinder, ensure connections are tight, wait 5 minutes and retry ignition. If issues persist, contact support.
Flame goes out on low setting	Low gas pressure, wind interference, burner orifice obstruction.	Ensure adequate propane supply. Check for wind. Clean burner orifice if necessary.
Uneven heating on griddle	Griddle not properly seated, excessive wind.	Ensure griddle is flat and centered over the burner. Utilize Wind Baffled Technology.

For further assistance, please refer to the support section or contact Camp Chef customer service.

Specifications

- **Brand:** Camp Chef
- **Model Number:** PG14
- **Product Dimensions:** 20.5" (D) x 18" (W) x 6" (H)
- **Cooking Area Dimensions:** 14" x 16.5"
- **Total Surface Area:** 231 sq. in.
- **Item Weight:** 7.04 pounds (3.2 Kilograms)
- **Color:** Black
- **Fuel Type:** Gas (Propane)
- **Burner BTU:** 28,000 BTU (cast-aluminum burner)
- **Material:** Stainless Steel (frame, handle), Aluminum (burner)
- **Special Features:** Matchless ignition, Fully adjustable heat-control knob, Wind Baffled Technology, Grease Management System, True Seasoned Surface Griddle.



Image: Diagram showing the overall dimensions of the Camp Chef Sidekick Grill Accessory.

Warranty Information

For detailed warranty information regarding your Camp Chef Sidekick Grill Accessory, please refer to the official Camp Chef website or contact their customer service directly. Keep your proof of purchase for any warranty claims.

Support

If you require further assistance, have questions about your product, or need to order replacement parts, please visit the official Camp Chef website or contact their customer support team. Contact information can typically be found on the manufacturer's website or on the product packaging.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question