Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

DEWENWILS SP-060A

DEWENWILS Outdoor Power Stake Timer User Manual

MODEL: SP-060A

Thank you for choosing DEWENWILS. Please read this manual thoroughly before operation and retain it for future reference.

Product Overview

The DEWENWILS Outdoor Power Stake Timer is a versatile and robust solution for automating your outdoor lighting and appliances. Featuring 6 grounded outlets, a 6-foot power cord, and a durable stake for ground installation, this timer is designed for outdoor use. It includes a remote control with a 100FT RF signal range, allowing convenient operation from indoors. Multiple timer choices, including dusk-to-dawn and timed countdowns, provide flexible control for various applications.



Image: The DEWENWILS Outdoor Power Stake Timer, showcasing the main unit with 6 outlets, the remote control, and the 6-foot power cord.

Key Features

- **Multi-Timer Choices:** Offers flexible scheduling options including Dusk to Dawn, ON at Dusk and OFF after 2/4/6/8 hours, ON immediately and OFF after 2/4/6/8 hours, and always ON/OFF modes.
- **100FT RF Signal Remote Control:** The strong radio frequency signal allows you to control the timer from up to 100 feet away, even through walls, doors, and windows, eliminating the need to go outside in inclement weather.
- **Weatherproof Design:** Constructed with durable, weatherproof materials. Each of the 6 grounded outlets has an individual waterproof cover to protect against water, dust, and damage. The elevated stake design keeps outlets above ground level.
- **6 Grounded Outlets & 6 FT Cord:** Provides ample connectivity for multiple devices with 6 grounded outlets. The 6-foot SJTW 14/3C extension cord offers flexibility in placement and blends into outdoor landscapes.
- **Overload Protection:** Equipped with an overload protection switch (15A/1875W) for enhanced safety.



Image: Illustration of the 100FT RF signal range, showing control from inside a house to outdoor lights.

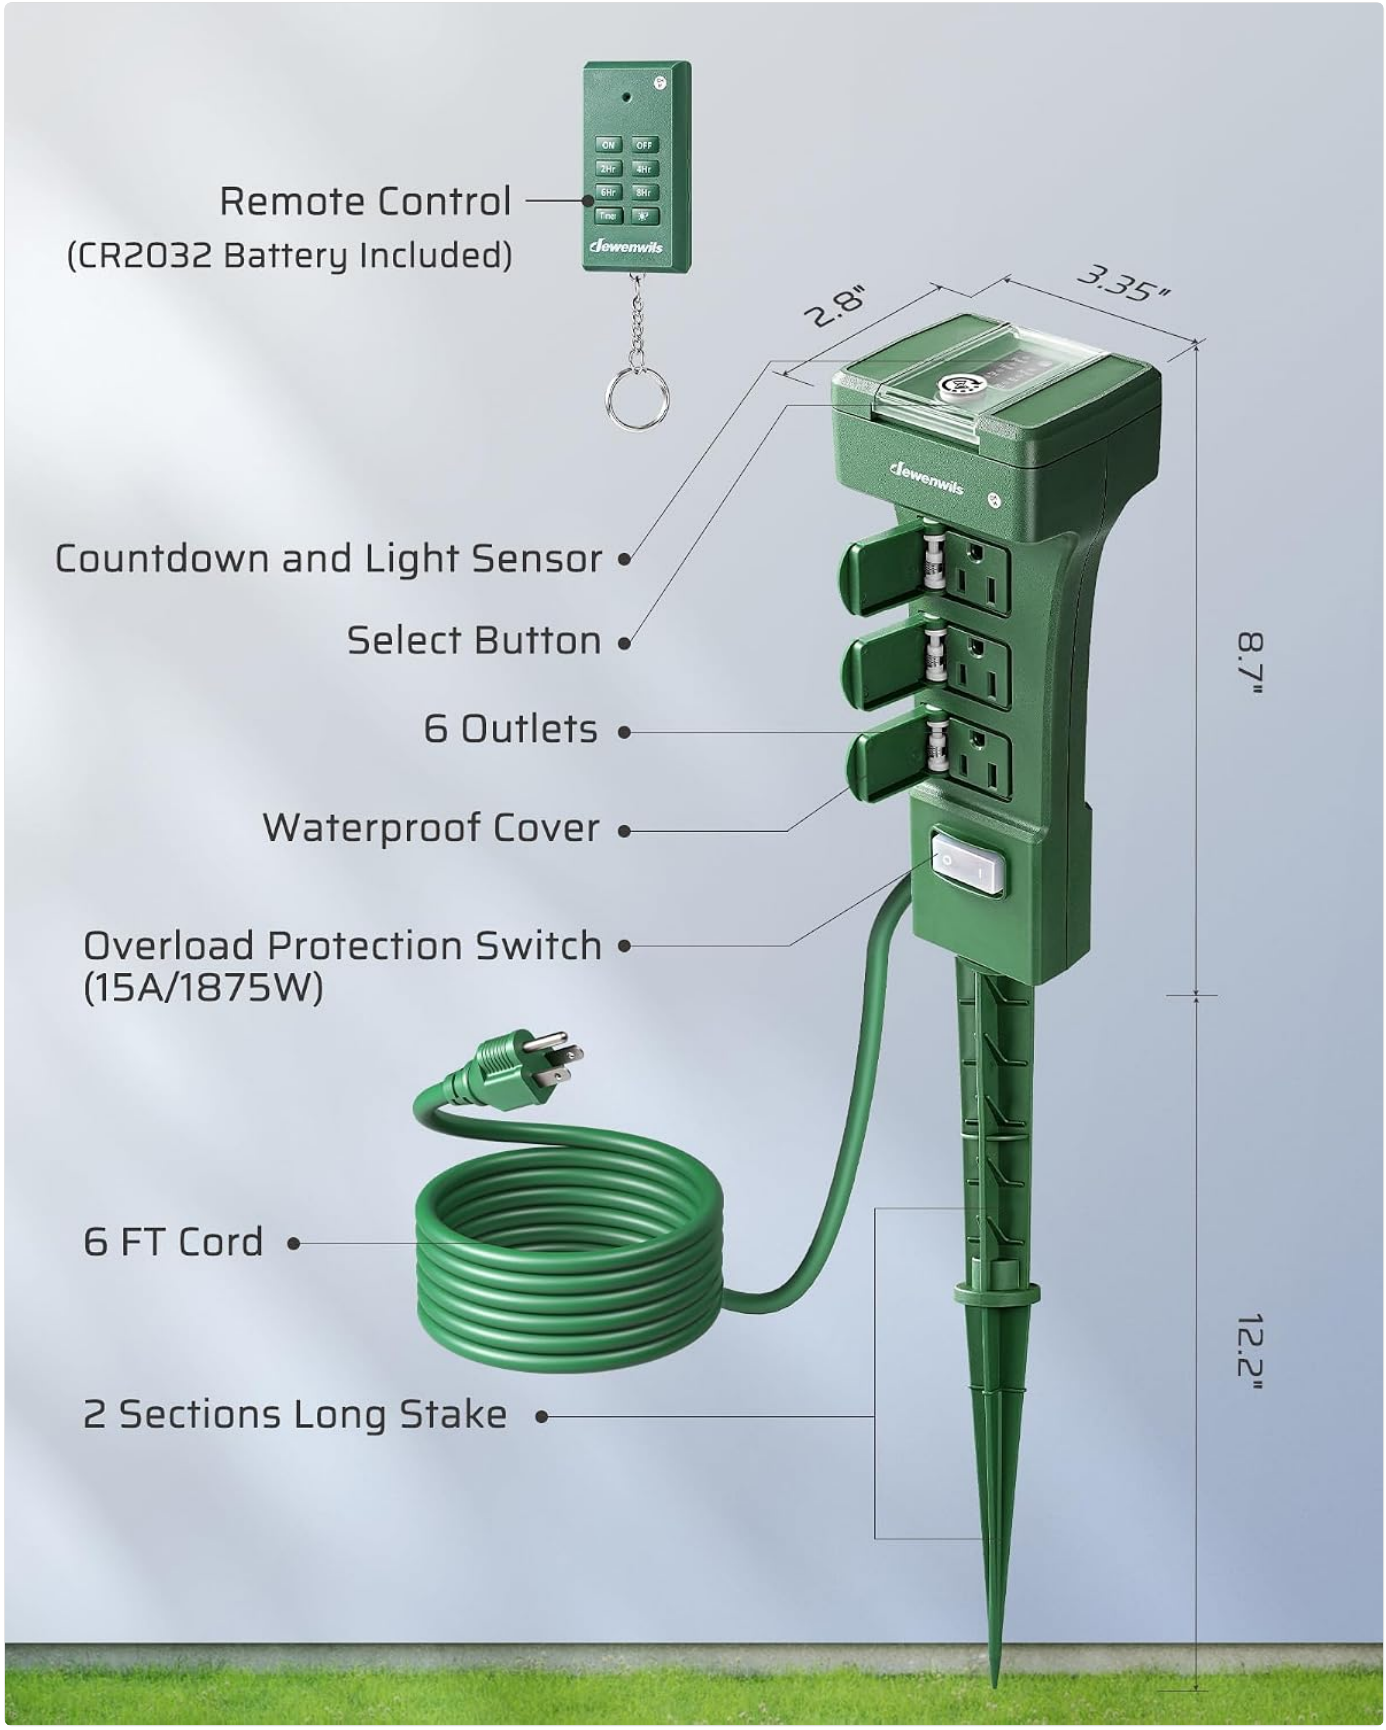


Image: Close-up of the weatherproof design, highlighting waterproof covers for outlets and the elevated stake.

Setup and Installation

1. **Assemble the Stake:** The product comes with a two-section long stake. Screw the two sections together firmly.

2. **Attach the Main Unit:** Securely attach the main timer unit to the assembled stake.
3. **Position the Stake:** Wedge the stake firmly into the ground in your desired outdoor location. Ensure the unit is at least 1 foot above ground level to prevent waterlogging.
4. **Connect to Power:** Plug the 6-foot power cord into a grounded outdoor wall socket.
5. **Plug in Devices:** Connect up to 6 outdoor lights or appliances into the grounded outlets on the timer unit. Ensure all unused outlets have their waterproof covers securely closed.

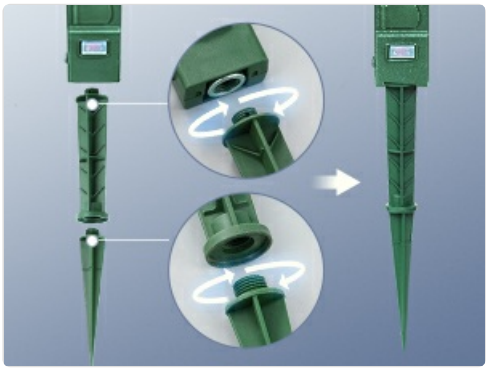


Image: Diagram showing the simple assembly process of the two-section ground stake.



Image: Detailed diagram with dimensions and labeled components, including the remote control, countdown and light sensor, outlets, waterproof cover, overload protection switch, 6 FT cord, and 2 sections long stake.

Operating Instructions

The DEWENWILS Outdoor Power Stake Timer can be operated using either the remote control or the select button on

the unit itself.

Using the Remote Control:

The remote control allows for convenient operation from a distance. Ensure the included AAA battery is installed correctly.

- **ON Button:** Turns all connected devices ON immediately.
- **OFF Button:** Turns all connected devices OFF immediately.
- **2HR/4HR/6HR/8HR Buttons:** Activates the countdown timer. The devices will turn ON immediately and automatically turn OFF after the selected duration (2, 4, 6, or 8 hours).
- **Timer Button:** Cycles through the timer modes (Dusk to Dawn, 2H, 4H, 6H, 8H). Press this button to select the desired mode.
- **Sensor Button:** Activates the Dusk to Dawn mode. The devices will turn ON at dusk and remain ON until dawn.

Using the Select Button on the Unit:

The select button on the main unit allows for direct control and mode selection.

- Press the select button repeatedly to cycle through the available modes: Always ON, Always OFF, Dusk to Dawn, 2H, 4H, 6H, 8H.
- The indicator lights on the unit's display will show the currently selected mode.



Image: Visual representation of the different timer modes: Always ON/OFF, Light Sensor (Dusk to Dawn), Timer (2/4/6/8 hours), and Countdown (ON at Dusk, OFF after 2/4/6/8 hours).



Image: Close-up of the timer's display panel and the remote control, showing buttons for various functions.



Image: Detailed view of the photocell sensor, illustrating its function in detecting light levels for dusk-to-dawn operation.

Maintenance

To ensure optimal performance and longevity of your DEWENWILS Outdoor Power Stake Timer, follow these maintenance guidelines:

- **Regular Cleaning:** Periodically wipe down the unit with a damp cloth to remove dirt, dust, and debris. Ensure the photocell sensor is clean and unobstructed for proper dusk-to-dawn operation.
- **Check Outlets:** Ensure all waterproof covers on unused outlets are securely closed to prevent moisture and debris from entering.
- **Inspect Cord and Plug:** Regularly check the power cord and plug for any signs of damage, fraying, or corrosion. Do not use the unit if any damage is found.
- **Fuse Replacement:** The unit is equipped with a replaceable fuse for overload protection. If the unit stops working due to an overload, unplug it, open the fuse compartment, and replace the fuse with one of the same rating (15A).
- **Winter Storage:** If not in use during winter months, store the unit in a dry, protected area to prevent damage from extreme cold or prolonged exposure to snow and ice.



Image: Illustration showing how to access and replace the fuse for overload protection.



Image: Visual representation of the overload protection mechanism, ensuring safety during operation.

Troubleshooting

If you encounter issues with your DEWENWILS Outdoor Power Stake Timer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Unit does not power on.	No power from wall outlet; Overload protection tripped; Damaged cord/plug.	Check wall outlet with another device. Reset overload protection by pressing the switch. Inspect cord and plug for damage; replace if necessary.
Remote control not working.	Remote battery low or dead; Remote out of range; Signal obstruction.	Replace the AAA battery in the remote. Move closer to the timer unit. Ensure no major obstructions (e.g., thick walls) are blocking the signal.
Timer mode not activating.	Incorrect mode selected; Photocell sensor obstructed (for Dusk to Dawn).	Verify the correct timer mode is selected on the unit or remote. Clean the photocell sensor and ensure it is not covered.
Outlets not providing power.	Timer is OFF; Overload protection tripped; Individual outlet cover not fully open.	Ensure the timer is set to an ON mode. Reset overload protection. Ensure the outlet cover is fully open and the plug is inserted correctly.

If the problem persists after attempting these solutions, please contact DEWENWILS customer support.

Specifications

Attribute	Specification
Brand	DEWENWILS
Model Number	SP-060A
Color	Green
Product Dimensions	10.53"D x 5.51"W x 5.74"H
Item Weight	1.67 pounds
Number of Outlets	6 Grounded Outlets
Cord Length	6 FT (SJTWA 14/3C)
Max Power Rating	1875W / 15A
Remote Control Range	Up to 100FT (RF Signal)

Attribute	Specification
Timer Functions	Dusk to Dawn, 2/4/6/8 Hour Countdown, Always ON/OFF
Certifications	UL Listed
Remote Battery	1 AAA battery (included)
UPC	611901252513

Warranty and Support

DEWENWILS products are designed for reliability and performance. While specific warranty details are not provided in this manual, most DEWENWILS products come with a standard manufacturer's warranty covering defects in materials and workmanship.

For warranty claims, technical support, or any questions regarding your DEWENWILS Outdoor Power Stake Timer, please contact DEWENWILS customer service directly. You can typically find contact information on the DEWENWILS official website or through the retailer where you purchased the product.

Please have your model number (SP-060A) and purchase information ready when contacting support.

For more information, visit the official DEWENWILS Store:DEWENWILS Store on Amazon

© 2025 DEWENWILS. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07KT4LJBZ

More documents and user manuals: **https://manuals.plus/**