Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Holiday Living B07KYYGWYT

Holiday Living Pre-Lit Tree with Constant White LED Lights on Wood Base User Manual

Model: B07KYYGWYT

1. Introduction

Thank you for choosing the Holiday Living Pre-Lit Tree with Constant White LED Lights on Wood Base. This tabletop decoration is designed to provide ambient lighting and a festive atmosphere. This manual provides essential information for the safe and effective use of your product.

The tree stands approximately 19 inches tall, including its 4-inch diameter wood base, and features constant white LED lights. It is powered by 3 AA batteries (included).



Figure 1: Overall view of the Holiday Living Pre-Lit Tree, showcasing its white LED lights and natural wood base.

2. Setup

1. **Unpacking:** Carefully remove the pre-lit tree from its packaging. Inspect for any damage.
2. **Battery Installation:**

- Locate the battery compartment on the underside of the wood base.
- Open the battery compartment cover.
- Insert 3 AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
- Close the battery compartment cover securely.

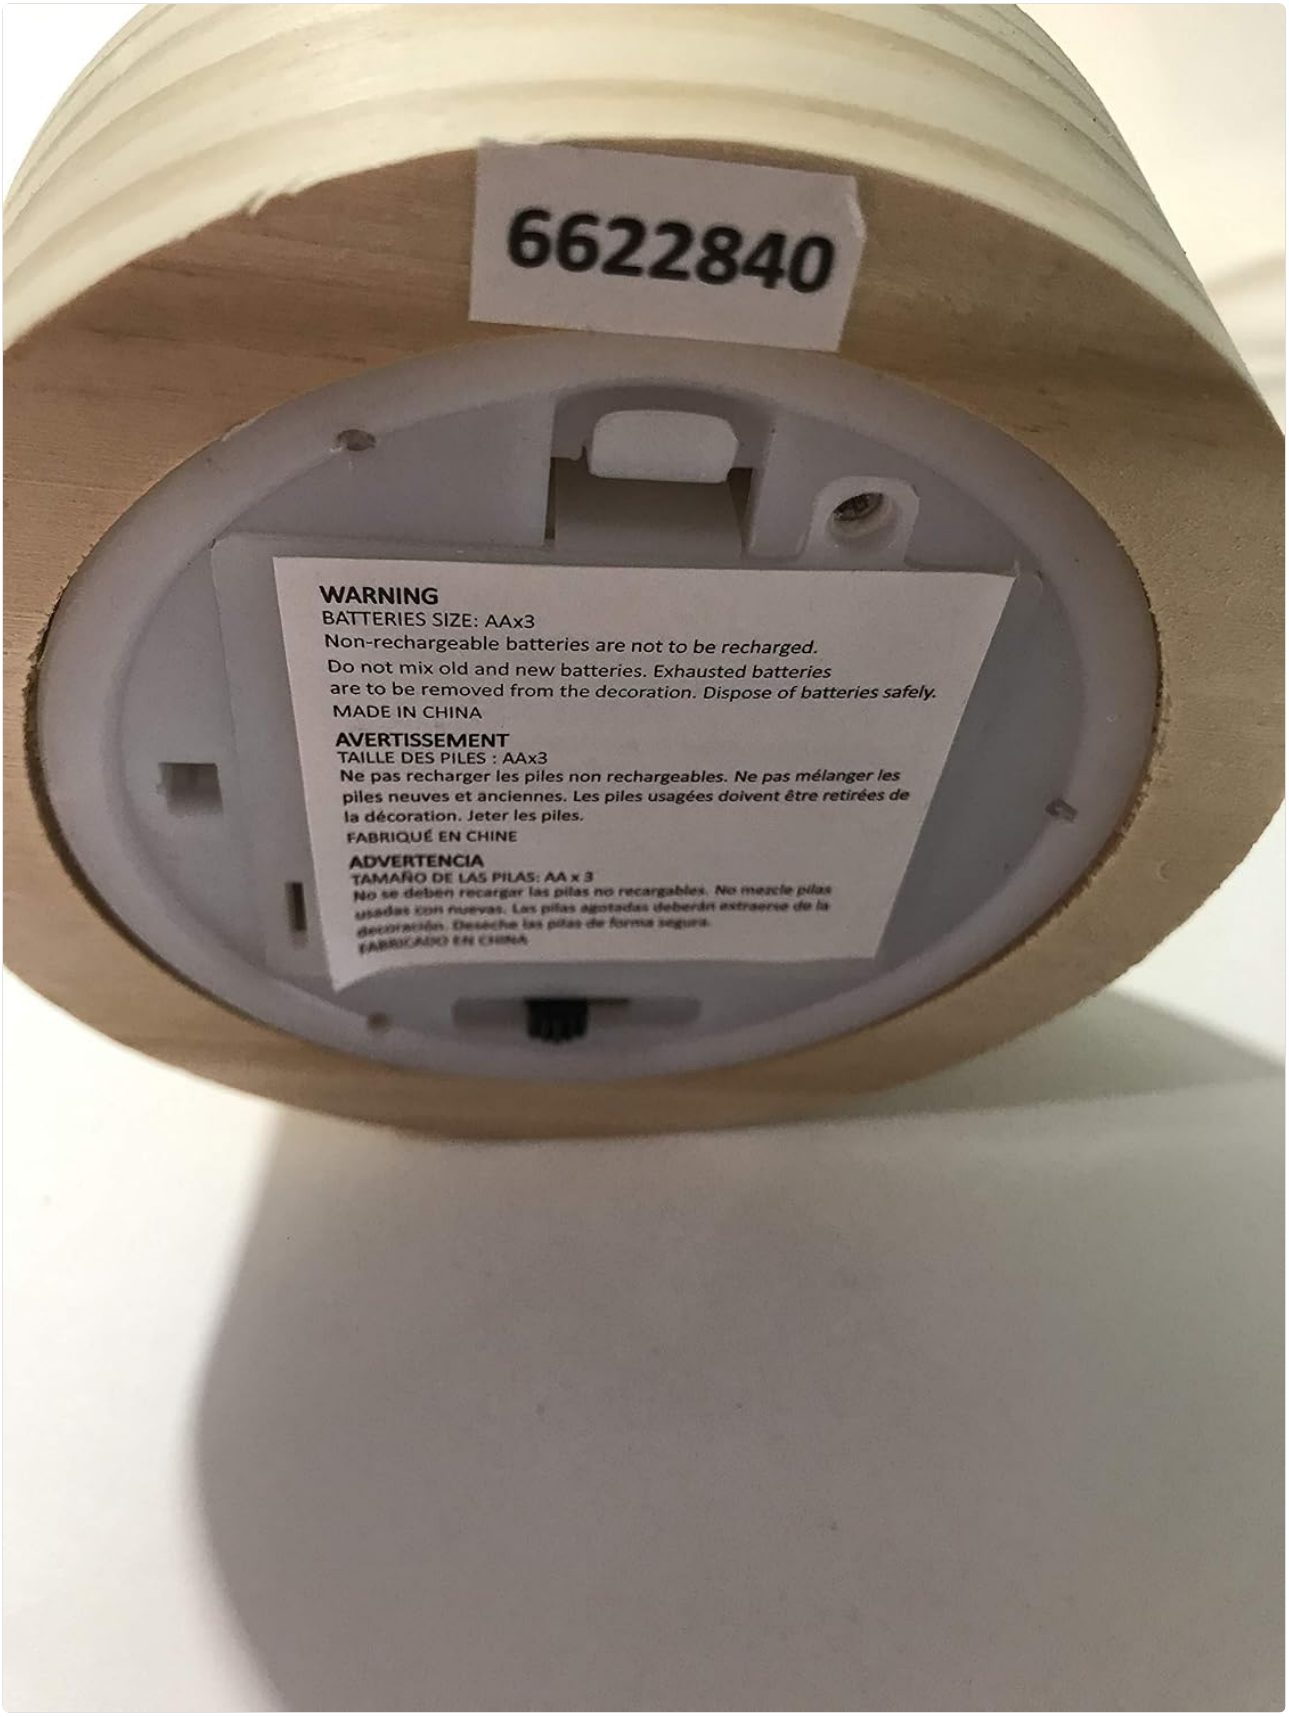


Figure 2: View of the battery compartment located on the bottom of the wood base. Ensure batteries are inserted with correct polarity.

3. **Placement:** Place the tree on a stable, flat surface indoors. Ensure it is away from direct heat sources or

moisture.

3. Operating Instructions

To operate your pre-lit tree:

1. **Power On/Off:** Locate the ON/OFF switch on the underside of the wood base, near the battery compartment.
2. Slide the switch to the 'ON' position to illuminate the white LED lights.
3. Slide the switch to the 'OFF' position to turn off the lights.



Figure 3: Close-up of the tree's branches with the constant white LED lights illuminated.

4. Maintenance

- **Cleaning:** Dust the tree gently with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** When the lights dim or stop working, replace all 3 AA batteries with new ones. Do not mix

old and new batteries.

- **Storage:** When not in use, store the tree in its original packaging or a protective container in a cool, dry place. Remove batteries before extended storage to prevent leakage.

5. Troubleshooting

- **Lights Not Turning On:**
  - Ensure the ON/OFF switch is in the 'ON' position.
  - Check that the batteries are inserted correctly with the proper polarity.
  - Replace old or depleted batteries with new ones.
- **Lights Are Dim:**
  - This typically indicates low battery power. Replace all 3 AA batteries.

6. Specifications

Brand	Holiday Living
Model Number (ASIN)	B07KYYGWYT
Product Dimensions	4"D x 4"W x 19"H (including base)
Color	White
Material	Wood (base)
Item Weight	16 Ounces (approx. 1 pound)
Light Type	LED
Light Color	White
Power Source	3 x AA Batteries
Recommended Use	Indoor Decor
UPC	805780339728
Manufacturer	L G Sourcing, Inc

7. Warranty and Support

Information regarding product warranty and customer support is not provided within this manual. Please refer to the product packaging or the retailer's website for details on warranty coverage and how to contact customer service for assistance.

© 2023 Holiday Living. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07KYYGWYT

More documents and user manuals: **https://manuals.plus/**