K KASONIC DB201

Kasonic DB201 Wireless Doorbell

INSTRUCTION MANUAL

Introduction

This manual provides detailed instructions for the installation, operation, and maintenance of your Kasonic DB201 Wireless Doorbell. Please read this manual thoroughly before use to ensure proper functionality and longevity of the product.



Figure 1: Kasonic DB201 Wireless Doorbell Kit, featuring the plug-in receiver and the push button transmitter.

Safety Information

To ensure safe operation, please observe the following:

- Do not expose the receiver to water or excessive humidity. The push button is IP44 rated for outdoor use, but the receiver is for indoor use only.
- Do not attempt to disassemble or repair the device yourself. Contact customer support for assistance.
- Keep the device away from extreme temperatures and direct sunlight.
- Ensure the power outlet for the receiver is easily accessible.

Package Contents

- 1 x Wireless Doorbell Receiver
- 1 x Wireless Doorbell Push Button (Transmitter)
- 1 x A23 12V Alkaline Battery (pre-installed in transmitter)
- Mounting Hardware (screws, anchors, double-sided adhesive tape)
- User Manual

Setup

1. Install the Push Button (Transmitter)

The push button can be installed using either the provided double-sided adhesive tape or screws and anchors.

1. **Adhesive Installation:** Clean the desired mounting surface thoroughly. Peel off one side of the double-sided adhesive tape and apply it to the back of the push button. Peel off the other side and firmly press the push button onto the wall.
2. **Screw Installation:** Open the push button casing using a small screwdriver or the provided tool. Mark the screw holes on the wall. Drill pilot holes if necessary, insert the anchors, and then secure the push button base with the screws. Close the casing.

2. Install the Receiver

Simply plug the receiver into any standard electrical outlet indoors. Ensure it is within the operating range of the push button.

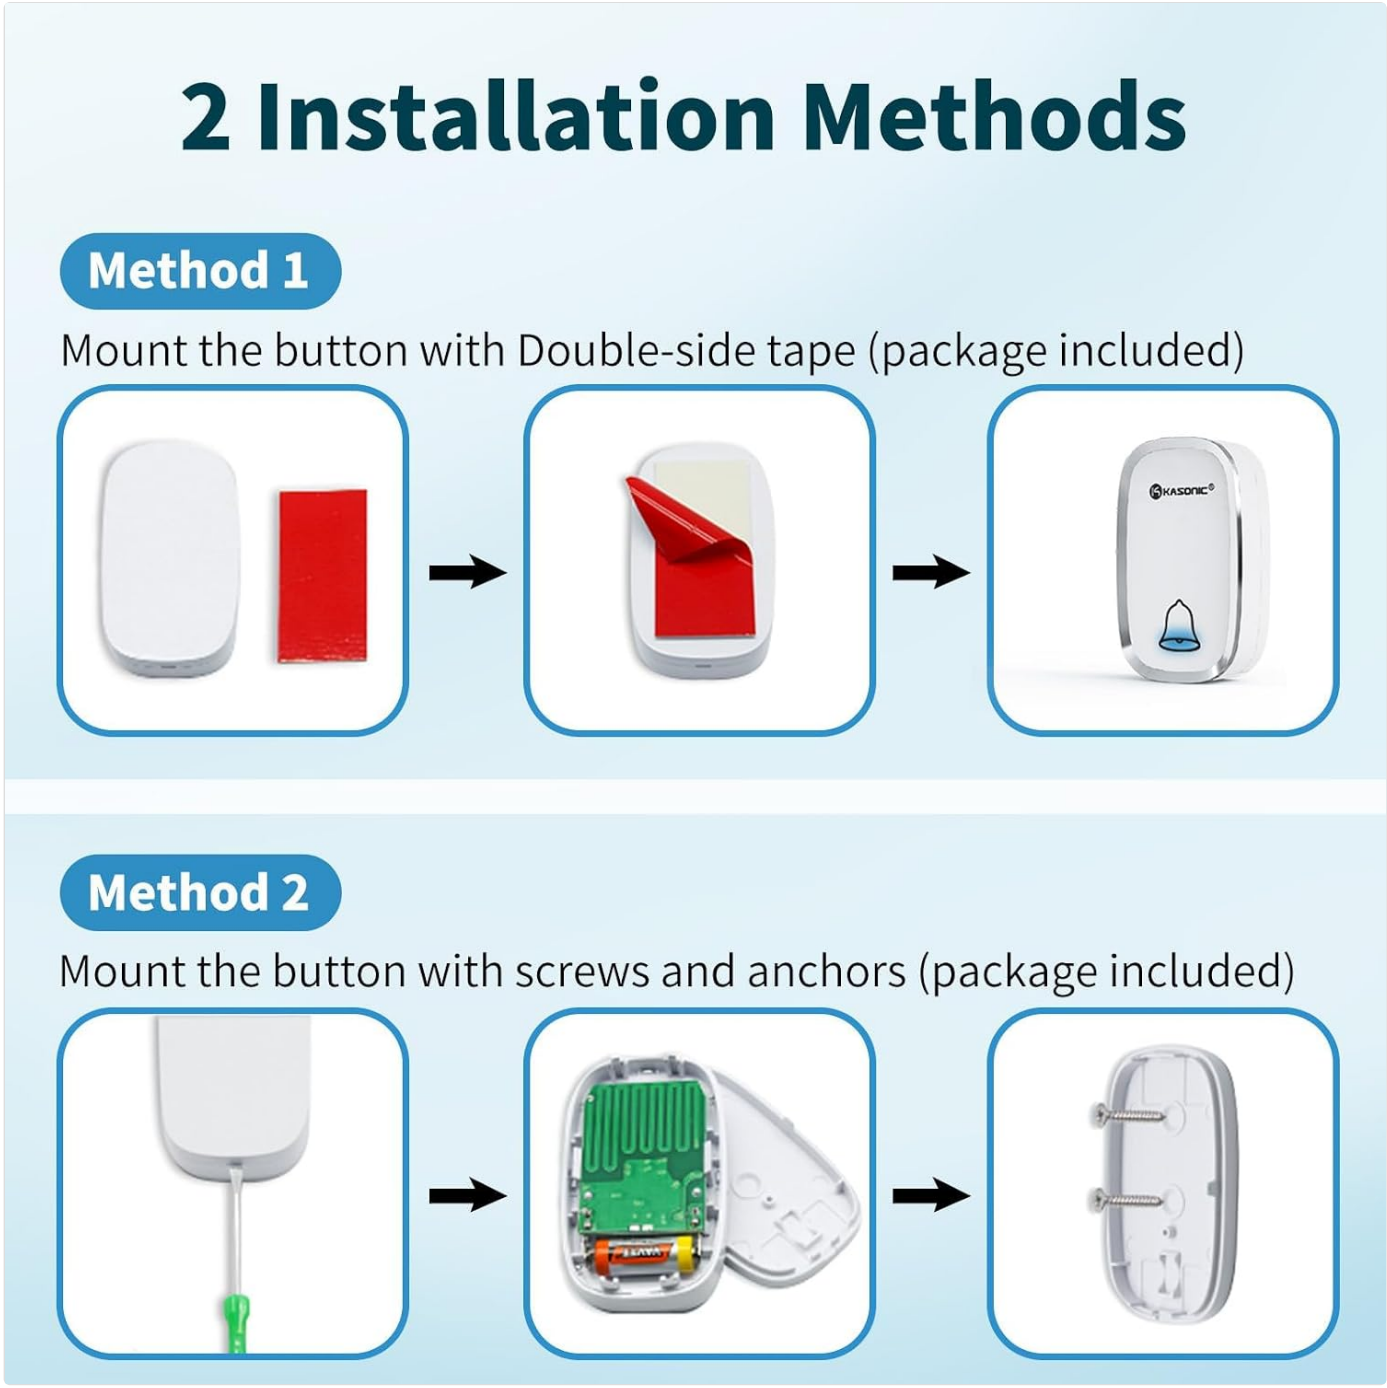


Figure 2: Visual guide for mounting the push button using either adhesive tape or screws.

Setup Overview Video

Video 1: A seller-provided video demonstrating the setup process of the Kasonic Wireless Doorbell, including unboxing and initial installation steps.

Operating

1. Changing Melodies

The receiver offers 36 different chimes. To change the melody:

- Press the 'Music' button (usually indicated by a music note icon) on the side of the receiver to cycle through the

available melodies.

- Once you find your desired melody, it will be saved automatically. The doorbell has a memory function that retains your last selected melody even after a power outage.

2. Adjusting Volume

The doorbell features 4 adjustable volume levels (0 dB to 110 dB). To adjust the volume:

- Press the 'Volume' button (usually indicated by a speaker icon) on the side of the receiver to cycle through the volume levels.
- The selected volume level will be saved automatically.

3. LED Flash Indicator

The receiver includes an LED flash indicator that illuminates when the doorbell is pressed. This feature is particularly useful for individuals with hearing impairments or in noisy environments.



Figure 3: Illustration of the 36 music options and 4 adjustable volume levels (25dB, 45dB, 65dB, 85dB) of the receiver.

4. Operating Range

The Kasonic DB201 Wireless Doorbell boasts an operating range of up to 1000 feet (300 meters) in open areas, ensuring you hear the chime throughout your home or property.



Figure 4: Depiction of the doorbell's extensive 1000ft (300m) operating range in an open environment.

Changing Ringtone and Re-pairing Video

Video 2: A seller-provided video demonstrating how to change the ringtone and re-pair the doorbell components.

Setting Up Ringtones and Adjusting Volume Video

Video 3: A seller-provided video illustrating the steps to set up ringtones and adjust the sound volume on the doorbell receiver.

Maintenance

1. Battery Replacement (Push Button)

The push button (transmitter) is powered by an A23 12V alkaline battery. When the LED indicator on the push button no longer lights up or the signal weakens, it's time to replace the battery.

1. Open the push button casing using the provided tool or a small screwdriver.
2. Remove the old A23 12V battery.
3. Insert a new A23 12V battery, ensuring correct polarity.
4. Close the casing securely.

2. Cleaning

- Wipe the doorbell receiver and push button with a soft, dry cloth.
- Do not use abrasive cleaners or solvents, as these may damage the finish.

3. Weather Resistance

The push button is IP44 waterproof and weatherproof, designed to withstand temperatures from -4°F to 140°F. This ensures reliable operation in various outdoor conditions.



Figure 5: Details on the IP44 waterproof and dustproof rating, indicating suitability for outdoor use and long battery life.

Troubleshooting

- **Doorbell not ringing:** Ensure the receiver is plugged into a working outlet and the push button battery is not depleted. Check if the receiver is in mute mode.
- **Short operating range:** Obstacles like thick walls or metal structures can reduce the wireless range. Try relocating the receiver or push button to minimize interference.
- **Interference with other devices:** The Kasonic DB201 is designed to avoid interference. If issues occur, try changing the melody or re-pairing the devices.
- **No LED flash:** Check the push button battery. If the battery is new and the LED still doesn't flash, the unit may require service.

Specifications

Feature	Specification
Model Number	DB201
Brand	K KASONIC
Operating Range	Up to 1000 feet (300 meters) in open area
Melodies	36 Chimes
Volume Levels	4 Levels (0 dB to 110 dB)
Waterproof Rating (Transmitter)	IP44
Operating Temperature	-4°F to 140°F (-20°C to 60°C)
Power Source (Receiver)	AC Plug-in
Power Source (Transmitter)	1 x A23 12V Alkaline Battery (included)
Material	ABS
Dimensions	3.2 x 7.9 x 7.59 cm; 117.93 g

Warranty and Support

K KASONIC products are designed for reliability and performance. For warranty information, technical support, or any questions regarding your DB201 Wireless Doorbell, please refer to the contact information provided with your purchase or visit the official K KASONIC website.

© 2025 K KASONIC. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question