Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Noma 411

Noma Outdoor Lamp Post User Manual

Model: 411 | Brand: Noma

1. Introduction

This manual provides essential information for the safe and effective installation, operation, and maintenance of your Noma Outdoor Lamp Post. Please read all instructions carefully before beginning installation or use. Retain this manual for future reference.





Image 1.1: The Noma Outdoor Lamp Post, a 7-foot tall fixture with three lamp heads, designed for outdoor illumination.

2. Safety Information

Always follow basic safety precautions when installing and operating electrical equipment to reduce the risk of fire, electric shock, and personal injury.

- **Disconnect Power:** Always turn off power at the circuit breaker or fuse box before installation, servicing, or changing bulbs.
- **Qualified Electrician:** If you are unsure about wiring or installation, consult a qualified electrician.
- **Grounding:** Ensure the lamp post is properly grounded according to local electrical codes.
- **Bulb Requirements:** Use only bulbs that meet the specified wattage and type (3 x 60-watt A19-shaped E26 base bulbs, sold separately). Do not exceed the maximum wattage.
- **Outdoor Use:** This product is designed for outdoor use and is waterproof. However, ensure all connections are sealed and protected from moisture.
- **Stable Mounting:** The lamp post must be securely mounted to a stable surface to prevent tipping.

3. Package Contents

Verify that all components are present before beginning assembly. If any parts are missing or damaged, contact Noma customer support.

- Lamp Post Sections (Base, Middle, Top)
- Triple-Head Fixture with Glass Panels
- Mounting Hardware (bolts, nuts, washers)
- Instruction Manual

4. Setup and Installation

The Noma Outdoor Lamp Post is designed for straightforward installation. Follow these steps carefully.

4.1 Site Preparation

- Choose a suitable location for the lamp post, ensuring it is level and has access to the necessary electrical wiring.
- Dig a trench for electrical conduit if running new wiring underground. Ensure compliance with local electrical codes for burial depth and conduit type.
- Prepare a stable concrete base for mounting. The base of the lamp post is approximately 9.06 inches wide.



Image 4.1: Product dimensions, showing a height of 85.4 inches (approx. 7 feet) and a fixture width of 22.56 inches.

4.2 Assembly Steps

1. **Assemble Post Sections:** Carefully connect the lamp post sections (base, middle, top) as per the included diagrams. Ensure all connections are secure.
2. **Attach Triple-Head Fixture:** Secure the triple-head fixture to the top post section.
3. **Wiring:** Route the electrical wiring through the lamp post. Connect the wiring to the fixture according to standard electrical practices (live to live, neutral to neutral, ground to ground). Ensure all connections are tight and insulated.
4. **Install Bulbs:** Insert three 60-watt A19-shaped E26 base bulbs (not included) into the sockets.
5. **Secure Glass Panels:** Ensure all clear glass panels are properly seated and secured in the lamp heads.
6. **Mounting:** Position the assembled lamp post onto your prepared concrete base. Use the provided mounting hardware to securely bolt the lamp post to the base. Ensure the lamp post is plumb and stable.



Image 4.2: The Noma lamp post installed in an outdoor garden setting, demonstrating its aesthetic integration.

5. Operating Instructions

The Noma Outdoor Lamp Post operates on a standard 120-volt electrical supply. Once installed and wired, the lamp post can be controlled via a wall switch or an external timer (not included).

- **Power On/Off:** Use the connected wall switch to turn the lamp post on or off.
- **Timer Compatibility:** For automated operation, connect the lamp post to a compatible outdoor timer. This allows for scheduled illumination.



Image 5.1: The lamp post providing illumination to a residential driveway and front yard at night.

6. Maintenance

Regular maintenance will ensure the longevity and optimal performance of your Noma Outdoor Lamp Post.

- **Cleaning:** Periodically clean the glass panels and aluminum finish with a soft, damp cloth. Avoid abrasive cleaners that could damage the finish.
- **Bulb Replacement:** Turn off power before replacing bulbs. Allow bulbs to cool completely before handling. Replace with the specified E26 base bulbs (max 60W per light).
- **Inspect Wiring:** Annually inspect visible wiring and connections for any signs of wear, fraying, or corrosion.
- **Check Mounting:** Periodically check the mounting bolts to ensure they remain tight and secure, especially after severe weather.

7. Troubleshooting

Refer to the following common issues and their solutions. If the problem persists, contact Noma customer support.

Problem	Possible Cause	Solution
Lamp post does not light up.	No power, faulty bulb, loose wiring.	Check circuit breaker/fuse. Ensure wall switch is ON. Replace bulbs. Check wiring connections.
Lights flicker or dim.	Loose bulb, incorrect bulb wattage, wiring issue.	Tighten bulbs. Ensure bulbs are 60W max. Inspect wiring for loose connections.
Difficulty with mounting screws/nuts.	Screws too long, metric anchors, tight spaces.	If screws for top covers are too long, they may need slight shortening (e.g., 1/8 inch). Anchor holes may need widening if not perfectly flat. For bottom nuts, a specialized tool or careful manipulation may be required due to limited access.
Lamp post is wobbly after installation.	Mounting bolts not tight, uneven base.	Ensure all mounting bolts are securely tightened. Verify the concrete base is level and stable.

8. Specifications

Feature	Detail
Brand	Noma
Model Number	411
Color	Black
Material	Aluminum (Fixture), Glass (Shade)
Product Dimensions (L x W x H)	82.5" x 22.56" x 85.43" (approx. 7 ft tall)
Item Weight	14.96 pounds
Indoor/Outdoor Usage	Outdoor
Power Source	Hardwired
Voltage	120 Volts
Number of Light Sources	3
Bulb Base	E26 Medium
Max Wattage per Bulb	60 watts (A19-shaped bulbs recommended)

Feature	Detail
Special Feature	Waterproof
Assembly Required	Yes

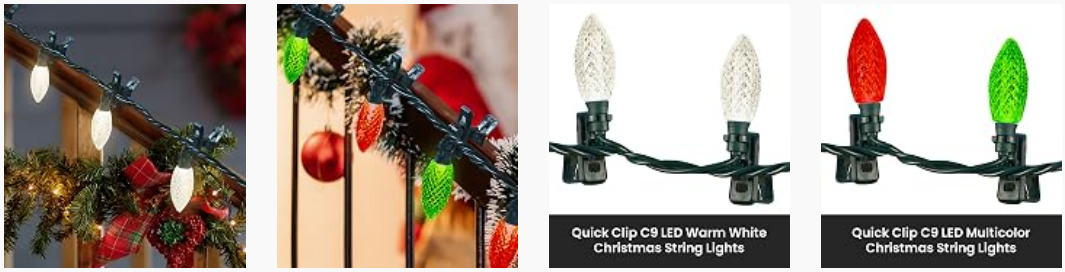


Image 8.1: Key specifications including height, voltage, wattage, and weight.

9. Warranty and Support

The Noma Outdoor Lamp Post comes with a **Limited (1 year)** warranty from the date of purchase. This warranty covers defects in materials and workmanship under normal use.
For warranty claims, technical support, or replacement parts, please contact Noma customer service. Keep your proof of purchase for warranty validation.
For more information, visit the official Noma store:Noma Store on Amazon

© 2024 Noma. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07N17GXDY

More documents and user manuals: **https://manuals.plus/**