OLDE MIDWAY POP-600-BLK

Olde Midway Bar Style Popcorn Machine Instruction Manual

Model: POP-600-BLK

Introduction

Thank you for choosing the Olde Midway Bar Style Popcorn Machine. This machine is designed to bring the classic movie theater popcorn experience to your home or event. Featuring a 6-ounce kettle, durable construction, and convenient operation, it's perfect for producing delicious popcorn batches. Please read this manual thoroughly before operation to ensure safe and efficient use.



Figure 1: The Olde Midway Bar Style Popcorn Machine in black, showcasing its classic design and clear viewing panels.

Safety Information

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.

- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- The kettle gets very hot. Keep machine attended and door closed during popping.
- Keep machine on stable, dry surface with cord secured.
- Turn kettle off when not in use. Keep away from children.

Setup

Your Olde Midway Popcorn Machine requires minor assembly before its first use. Ensure all packaging materials are removed and components are accounted for. Place the machine on a stable, flat, and dry surface. The machine's dimensions are approximately 14.25"L x 17.25"W x 20"H, so ensure adequate space and ventilation.

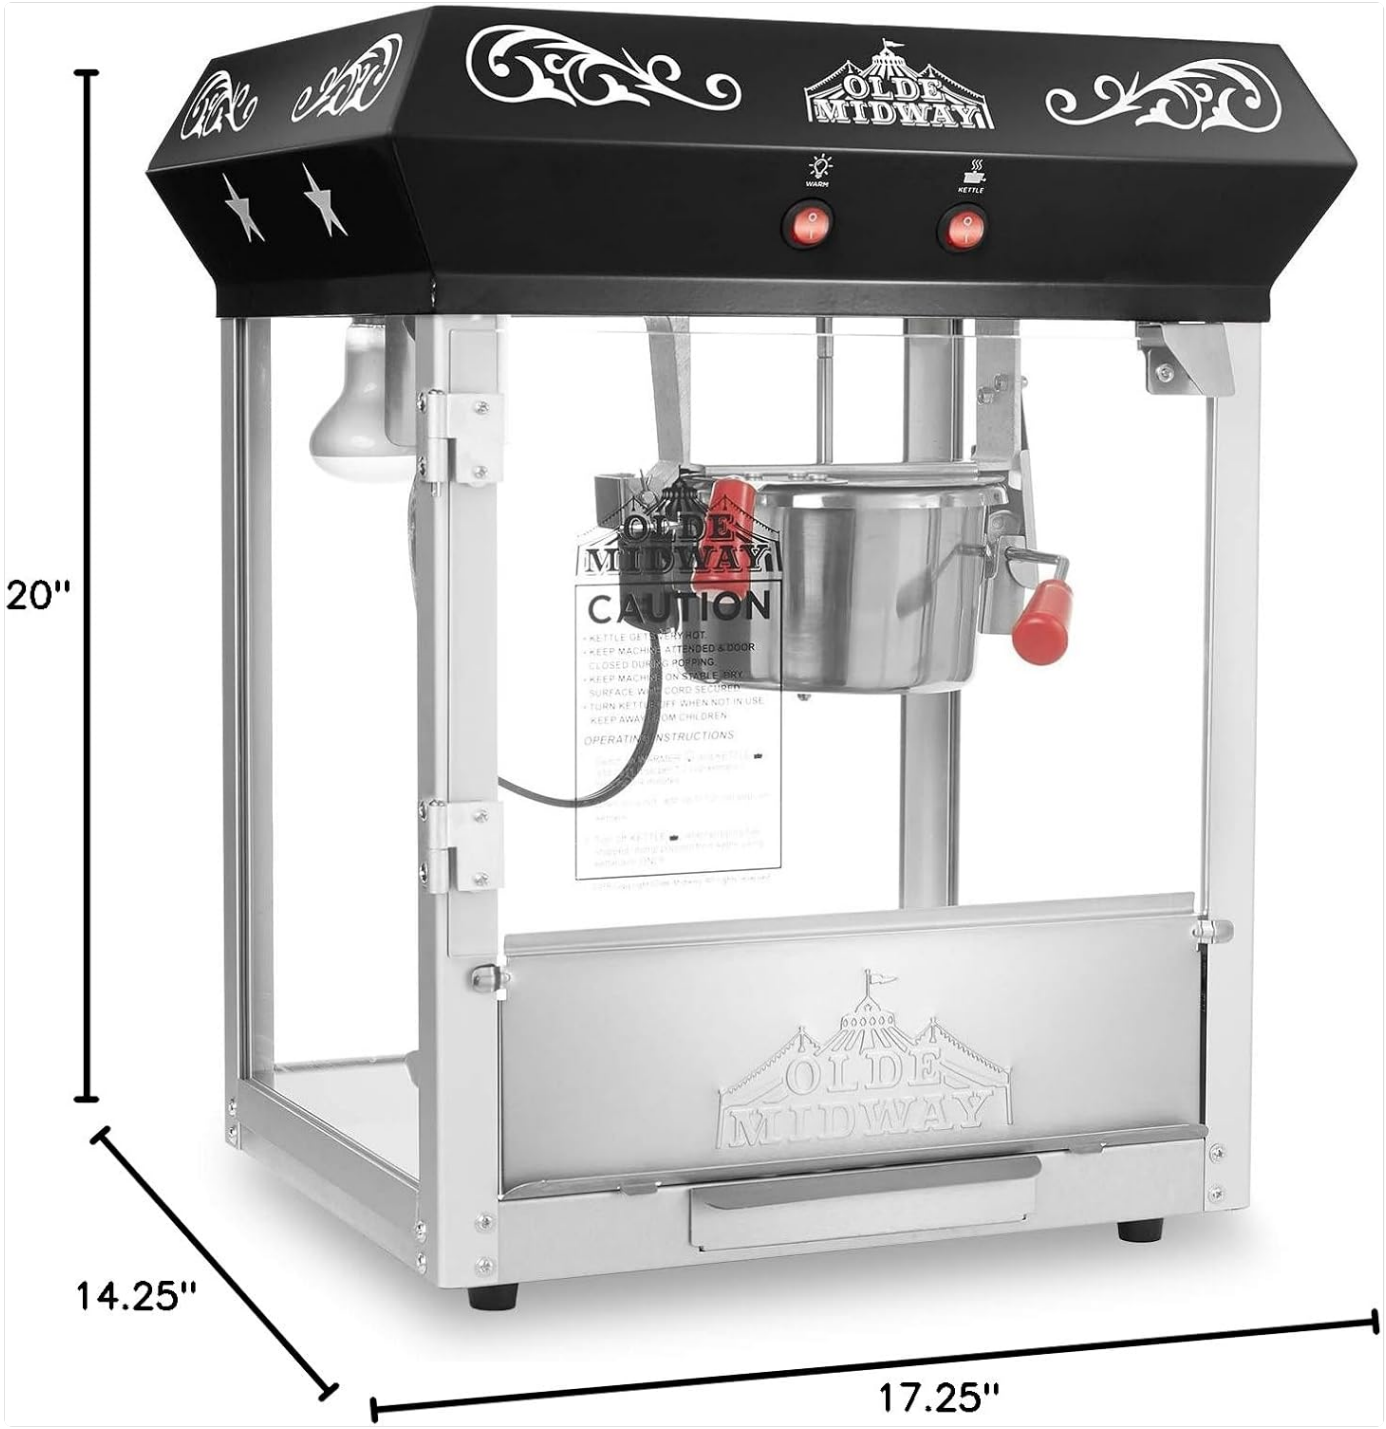


Figure 2: Product dimensions, useful for planning placement on a countertop or table.

Ensure the kettle is securely attached within the machine. The tempered safety glass door can be opened for access during setup and cleaning.



Figure 3: The popcorn machine with its front door open, showing access to the interior for setup and maintenance.

Operating Instructions

The popcorn machine features a convenient 2-switch design for easy operation. These switches control the spot light warmer, stirrer, and pot heater.

1. Switch on the **WARM** (spot light warmer) and **KETTLE** (pot heater) switches.
2. Add oil (1 tbsp per 1/2 cup kernels) to the kettle. Allow the kettle to heat for 3-4 minutes.
3. When the oil is hot, turn on the **STIRRER** switch. Add up to 1 cup of popcorn kernels to the kettle.
4. Turn off the **STIRRER** and **KETTLE** switches when popping has stopped.
5. Carefully tip the kettle to release the popped popcorn into the warming deck below.



Figure 4: Detailed view of the control panel with WARM and KETTLE switches, and the kettle mechanism.



Figure 5: A close-up of the caution and operating instructions label found on the machine's interior glass.

The built-in warming deck and heat light will keep your popcorn warm and fresh after popping. The machine also features a reject kernel tray to collect any un-popped kernels, ensuring a perfect batch every time.

Maintenance and Cleaning

Regular cleaning will ensure the longevity and optimal performance of your popcorn machine. The machine cleans easily with water.

- Always unplug the machine and allow it to cool completely before cleaning.
- The stainless steel food zones and tempered safety glass walls can be wiped down with a damp cloth and mild detergent.
- The reject kernel tray is removable for easy disposal of un-popped kernels and cleaning. Simply slide it out from the bottom of the machine.
- The kettle can be detached for thorough cleaning. Refer to the assembly instructions for reattachment.



Figure 6: The removable reject kernel tray at the bottom of the popcorn machine, designed for easy cleaning.

Troubleshooting

If you encounter issues with your popcorn machine, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Machine does not turn on	Not plugged in; power switch off; circuit breaker tripped	Ensure power cord is securely plugged in. Check that switches are in the 'ON' position. Check household circuit breaker.
Popcorn not popping or small kernels	Insufficient heat; old kernels; incorrect oil/kernel ratio	Ensure KETTLE switch is on and kettle is preheated. Use fresh popcorn kernels. Adjust oil and kernel measurements as per instructions.
Kettle not stirring	STIRRER switch off; motor issue	Ensure STIRRER switch is on. If problem persists, contact customer support.

If the issue is not resolved by the above steps, please contact Olde Midway customer support.

Specifications

Feature	Detail
Brand	OLDE MIDWAY
Model Number	POP-600-BLK
Color	Black
Capacity	6 ounces (kettle)
Material	Metal (Powder Coated Steel, Stainless Steel), Tempered Safety Glass
Product Dimensions (L x W x H)	14.25" x 17.25" x 20"
Item Weight	29 Pounds
Power	640 Watts
Included Components	Popcorn Machine, 1/2 cup measuring cup, tablespoon, popcorn scoop, salt shaker

Included Accessories

Your Olde Midway Popcorn Machine comes with a set of stainless steel accessories to enhance your popcorn making experience:

- 1/2 cup measuring cup
- Tablespoon
- Popcorn scoop

- Salt shaker



Figure 7: The complete set of stainless steel accessories provided with the popcorn machine, including measuring tools and a serving scoop.

Warranty and Support

For information regarding product warranty, please refer to the documentation included with your purchase or visit the official Olde Midway website. Extended protection plans may also be available for purchase through authorized retailers. For technical support or service inquiries, please contact Olde Midway customer service directly.

Contact information can typically be found on the product packaging or the manufacturer's official website: Olde Midway Store

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question