Whirlpool WSFO 3T223 PC X

Whirlpool WSFO 3T223 PC X Dishwasher User Manual

Model: WSFO 3T223 PC X

Introduction

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Whirlpool WSFO 3T223 PC X freestanding dishwasher. Please read these instructions carefully before using the appliance and keep them for future reference.



Image: Front-side view of the Whirlpool WSFO 3T223 PC X freestanding dishwasher.

Setup and Installation

Unpacking

- Remove all packaging materials from the dishwasher.
- Inspect the appliance for any damage incurred during transport. If damage is found, do not install or operate the dishwasher. Contact your retailer.

Positioning

The Whirlpool WSFO 3T223 PC X is a freestanding dishwasher designed for flexible placement. Ensure the installation area is level and stable.

- **Dimensions:** The dishwasher measures 85 cm (height) x 45 cm (width) x 59 cm (depth).
- **Leveling:** Use the adjustable feet to ensure the appliance is perfectly level. This prevents vibrations and ensures proper door closure.

Image: Dimensions of the Whirlpool WSFO 3T223 PC X dishwasher (Height: 85cm, Width: 45cm, Depth: 59cm).

Water and Electrical Connections

- Connect the water inlet hose to a cold water supply tap. Ensure the connection is secure to prevent leaks.
- Connect the drain hose to a suitable drain pipe or sink trap. Ensure the hose is not kinked or obstructed.
- Plug the power cord into a grounded electrical outlet. The appliance operates on 230 Volts.

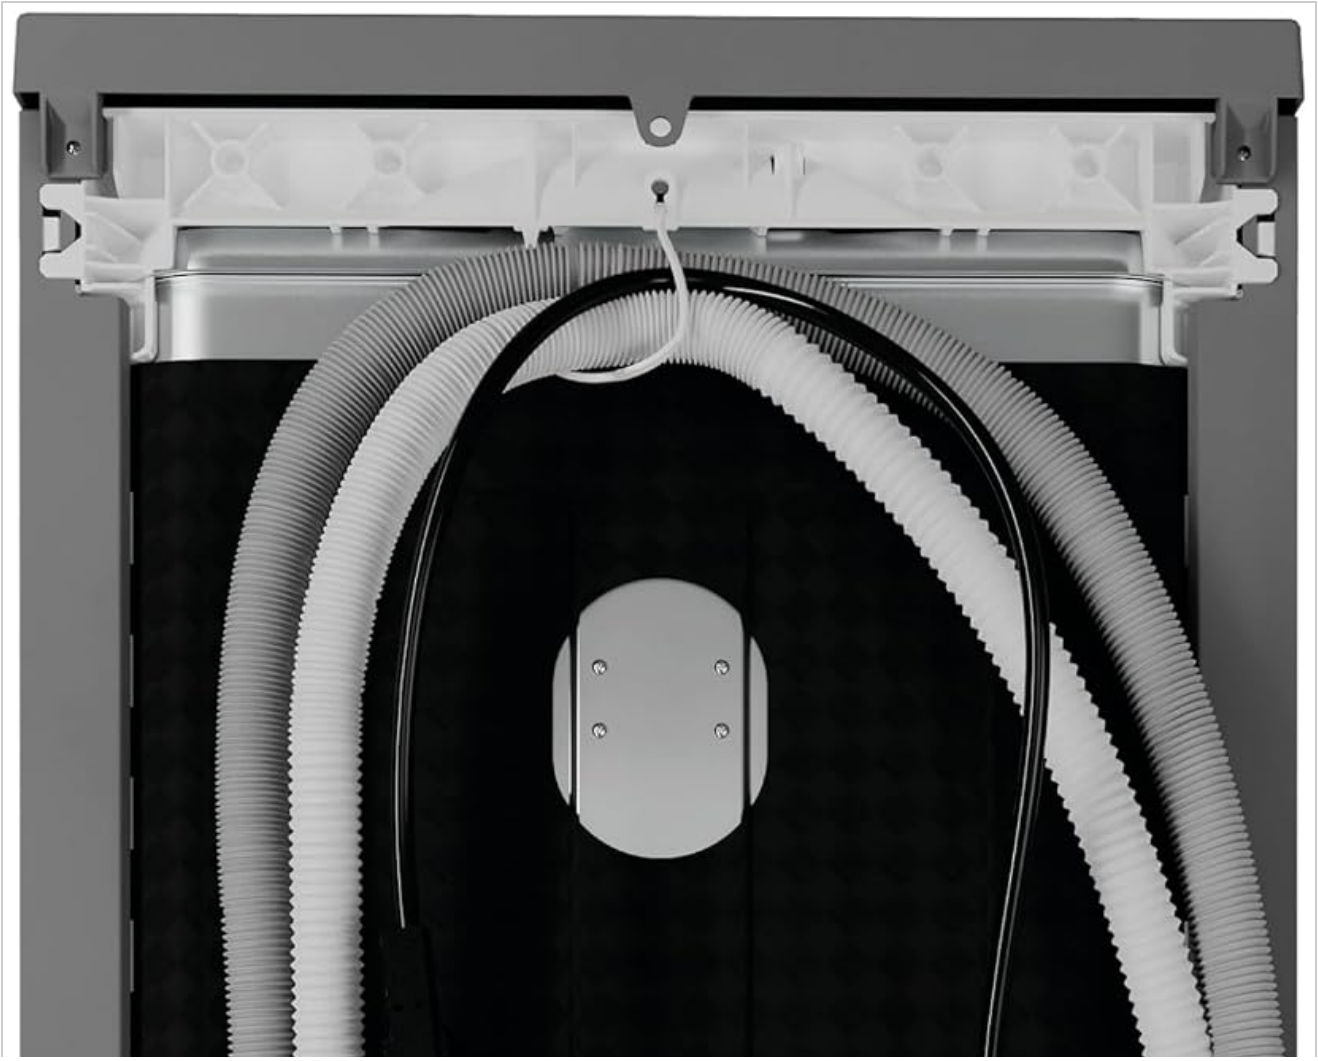




Image: Rear view of the dishwasher, illustrating the water inlet and drain hose connections.

Operating Instructions

Control Panel Overview

The dishwasher features a digital display and push-button controls for easy program selection and function activation.



Image: Close-up of the digital control panel with program selection buttons and display.

Loading the Dishwasher

This dishwasher is designed to accommodate up to 10 place settings. Ensure dishes are loaded correctly for optimal cleaning performance.

- Scrape off large food particles before loading.
- Place larger items in the lower rack and smaller items, glasses, and cups in the upper rack.
- Utilize the dedicated cutlery basket for forks, knives, and spoons.
- Ensure spray arms can rotate freely and are not blocked by dishes.



Image: Interior view of the dishwasher showing dishes arranged in the upper and lower racks.



Image: Lower rack of the dishwasher, highlighting the cutlery basket for organized loading.

Program Selection

Select the appropriate wash program based on the type and soil level of your dishes:

- **6th Sense:** Intelligent sensors automatically adjust water, temperature (50-65°C), and time for optimal cleaning based on actual soil level.
- **Glass:** Gentle program for delicate glassware.
- **Eco:** Energy-efficient program for normally soiled dishes.
- **Intensive 65°C:** For heavily soiled pots, pans, and dishes.
- **Pre-wash:** Short rinse cycle for dishes that will be washed later.
- **Rapid 30°:** Quick wash for lightly soiled dishes.
- **Self-clean:** Program for cleaning the dishwasher itself.

Optional Functions

- **PowerClean Pro:** Activates powerful jets at the rear for stubborn dirt, providing 30% extra space and eliminating the need for pre-treatment.
- **Multizone:** Allows you to select specific racks for washing, optimizing water and energy consumption for smaller loads.
- **Delay Start (1-24h):** Postpones the start of the wash cycle.
- **Tablet:** Optimizes wash cycle for all-in-one detergent tablets.
- **Child Safety:** Locks the control panel to prevent accidental program changes.

Maintenance and Care

Cleaning the Dishwasher

- **Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners.
- **Interior:** The dishwasher features a stainless steel interior. Run the 'Self-clean' program periodically to maintain hygiene and prevent odors.
- **Filters:** Regularly check and clean the filter assembly at the bottom of the dishwasher to ensure efficient drainage and prevent blockages.
- **Spray Arms:** Ensure the holes in the spray arms are not clogged. If necessary, remove and rinse them under running water.

Salt and Rinse Aid

Check the salt and rinse aid indicators on the control panel. Refill as needed to ensure optimal washing and drying results.

Troubleshooting

Before contacting customer service, please refer to the following common issues and solutions:

- **Dishwasher does not start:** Ensure the door is fully closed, the power cord is securely plugged in, and the circuit breaker has not tripped.
- **Dishes are not clean:** Check that dishes are loaded correctly, spray arms are not blocked, filters are clean, and sufficient detergent is used. Verify the selected program is appropriate for the soil level.
- **Water remains in the dishwasher:** Check for clogged filters or a kinked drain hose.

- **Unusual noises:** Ensure dishes are not interfering with spray arms or other internal components. Check for foreign objects in the filter area.
- **Error codes:** If an error code appears on the digital display, consult the full user manual (available online) for specific instructions related to that code.

Specifications

Feature	Specification
Model Name	WSFO 3T223 PC X
Brand	Whirlpool
Form Factor	Freestanding
Dimensions (HxWxD)	85 x 45 x 59 cm
Product Weight	39.5 kg
Voltage	230 Volts
Place Settings	10
Noise Level	43 dB
Energy Efficiency Class	E
Water Consumption (Eco)	9.0 Liters/cycle
Energy Consumption (Eco)	0.755 kWh/cycle
Program Duration (Eco)	4:00 (h:min)
Interior Material	Stainless Steel
Control Type	Push Button, Digital Display
Special Features	6th Sense Wash, PowerClean Pro, Multizone



Image: EU Energy Label for the Whirlpool WSFO 3T223 PC X dishwasher, showing energy class E, 10 place settings, 9.0L water, 43dB noise, and 4:00h program duration.



Image: Product data sheet providing detailed technical specifications and compliance information for the Whirlpool WSFO 3T223 PC X dishwasher.

Warranty Information

The Whirlpool WSFO 3T223 PC X dishwasher comes with a minimum manufacturer's warranty of **24 months**. Warranty terms and conditions may vary by country. Please retain your proof of purchase for warranty claims.

Customer Support

For further assistance, technical support, or to register your product, please use the following resources:

- **Whirlpool Official Website:** For comprehensive product information and support documents, visit docs.whirlpool.eu.
- **EPREL Database:** Access detailed product information and the EU energy label via the EPREL database using the QR code or link: eprel.ec.europa.eu/qr/304221.
- **Email Support:** For general inquiries, you can contact customer support at public_inquiry@europeanappliances.com.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question