Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Blissun 9 ft Solar Umbrella

Blissun 9 ft Solar LED Patio Umbrella Instruction Manual

Model: 9 ft Solar Umbrella (B07NSLZQSV)

Introduction

Thank you for choosing the Blissun 9 ft Solar LED Patio Umbrella. This manual provides essential information for the safe assembly, operation, and maintenance of your new umbrella. Please read these instructions carefully before use and retain them for future reference.

Product Features

- **Energy-Efficient Lighting:** Features 32 solar-powered LED lights, with 4 lights on each of the 8 iron ribs, providing ambient lighting for evening use.
- **Durable Construction:** Built with 8 sturdy iron ribs and a 1.50-inch (38 mm) diameter pole for enhanced support.
- **Easy Operation:** Equipped with a hand-crank lift system for effortless opening and closing, and a push-button tilt mechanism for adjustable shade.
- **Weather Resistant Fabric:** Canopy made from breathable fabric designed to block harmful UV rays and resist water.
- **Versatile Use:** Ideal for various outdoor settings including gardens, decks, backyards, pools, and beaches.

Parts List

Before assembly, ensure all parts are present and undamaged. If any parts are missing or damaged, do not proceed with assembly and contact customer support.

- Umbrella Canopy with Solar Panel and LED Lights
- Upper Pole Section (with crank mechanism)
- Lower Pole Section
- Umbrella Base (*Note: Umbrella base is NOT included and must be purchased separately. A base weighing over 26.5 lbs (12 kg) is recommended for freestanding use.*)

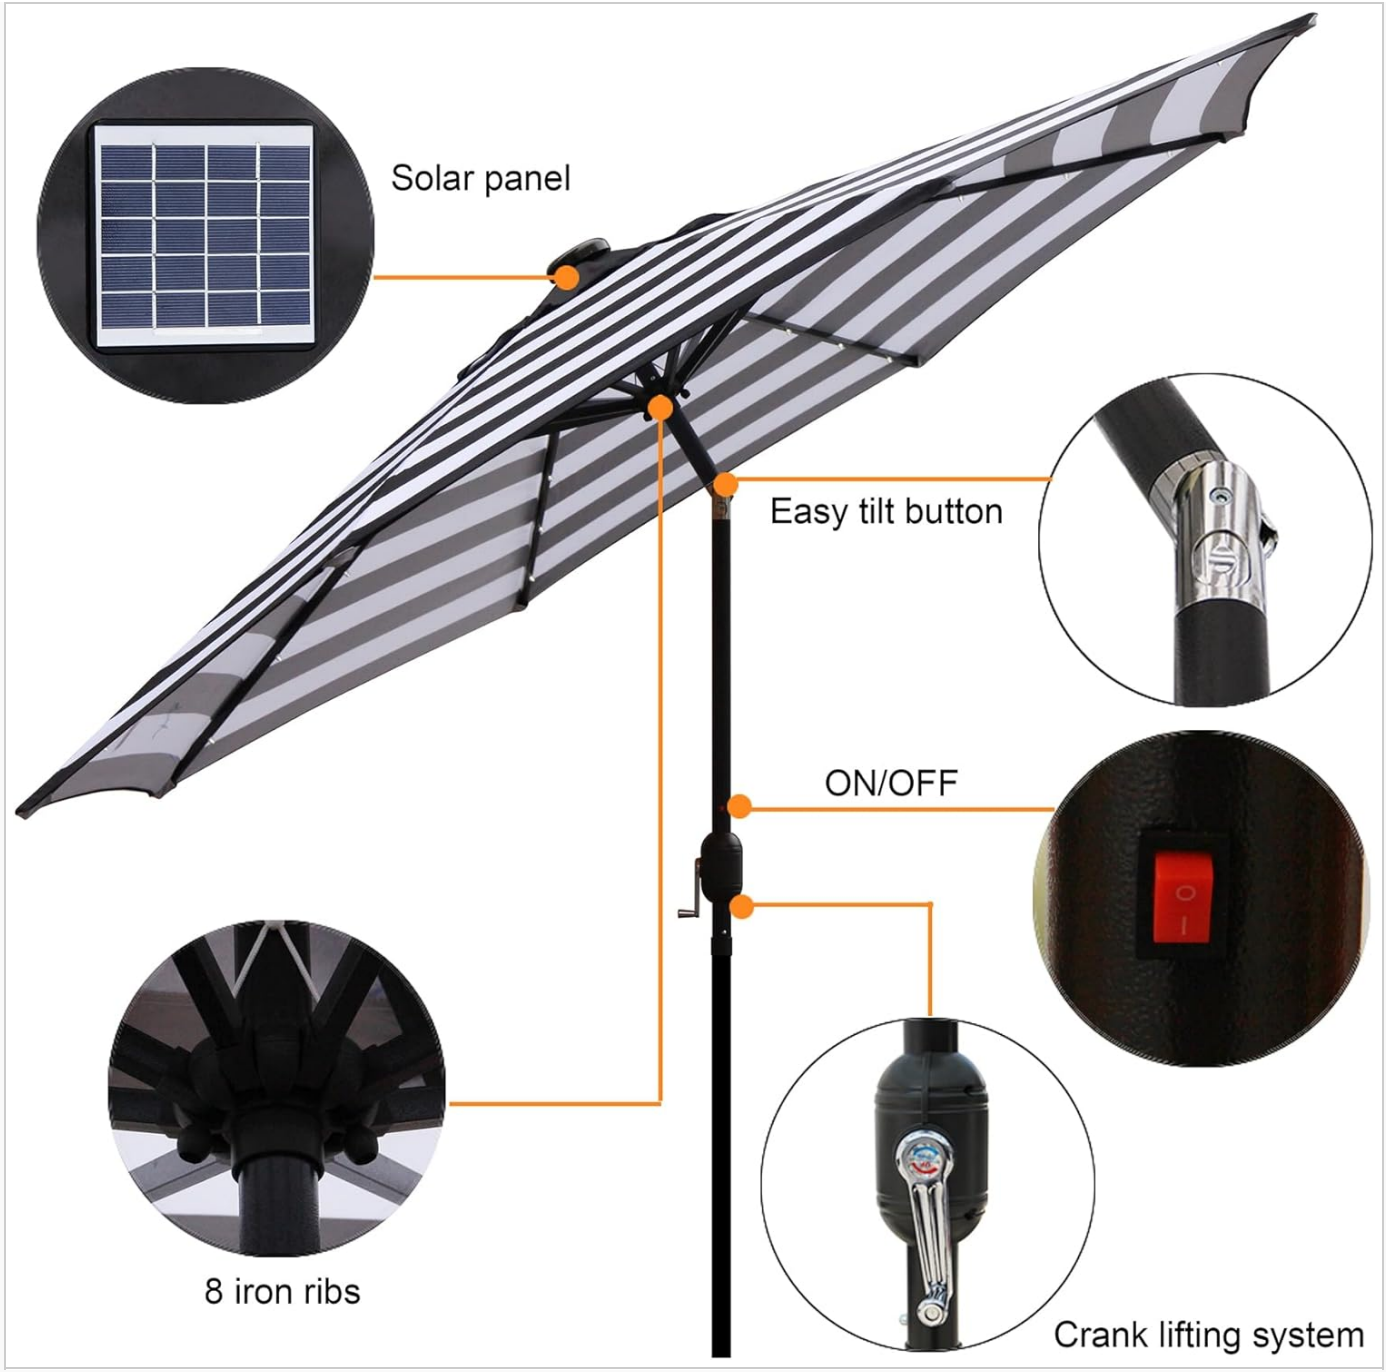


Figure 1: Key components of the Blissun Solar LED Patio Umbrella.

Setup Instructions

1. **Prepare the Base:** Place your umbrella base (not included) in the desired location. Ensure the base is stable and heavy enough to support the umbrella, especially in windy conditions.
2. **Assemble the Pole:** Insert the lower pole section into the umbrella base. Tighten any securing knobs on the base to hold the pole firmly in place.
3. **Attach Umbrella to Pole:** Carefully insert the upper pole section (with the umbrella canopy attached) into the lower pole section. Ensure the connection is secure.
4. **Open the Umbrella:** Turn the hand-crank clockwise to open the umbrella canopy until it is fully extended. Do not force the crank past its stopping point.
5. **Solar Panel Placement:** Ensure the solar panel located at the top of the umbrella is exposed to direct sunlight for optimal charging.

Operating Instructions

Opening and Closing the Umbrella

- To **open** the umbrella, turn the hand-crank clockwise until the canopy is fully extended.
- To **close** the umbrella, turn the hand-crank counter-clockwise until the canopy is fully retracted.

Tilting the Umbrella

- To **tilt** the umbrella, locate the push-button on the pole. Press the button and gently push the canopy to the desired angle. Release the button to lock the tilt position.
- To return to the upright position, press the tilt button and gently push the canopy back into place.

Using the LED Lights

- The LED lights are powered by a solar panel located on top of the umbrella.
- For the lights to function, the solar panel requires 6-7 hours of direct sunlight to charge sufficiently.
- Locate the ON/OFF switch on the umbrella pole. Flip the switch to the 'ON' position to activate the lights when it is dark.
- Ensure the ON/OFF switch is in the 'OFF' position during the daytime to allow the solar panel to charge effectively.



Figure 2: ON/OFF switch for LED lights.



Figure 3: Solar panel for LED lights.

Maintenance

- **Cleaning:** Clean the umbrella canopy with mild soap and water. Rinse thoroughly and allow to air dry completely before closing or storing. Do not use harsh chemicals or abrasive cleaners.
- **Solar Panel:** Periodically wipe the solar panel with a soft, damp cloth to remove dust and debris, ensuring efficient charging.
- **Storage:** When not in use for extended periods or during inclement weather, close the umbrella and secure it. For long-term storage, it is recommended to remove the umbrella from its base and store it in a dry, protected area.
- **Wind Advisory:** Always close the umbrella during strong winds or storms to prevent damage.

Troubleshooting

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
LED lights do not turn on.	1. Insufficient solar charge. 2. ON/OFF switch is in 'OFF' position. 3. Solar panel is dirty or obstructed.	1. Ensure solar panel receives 6-7 hours of direct sunlight. 2. Flip the ON/OFF switch to 'ON'. 3. Clean the solar panel and remove any obstructions.
Umbrella does not open or close smoothly.	1. Crank mechanism is stiff. 2. Obstruction in the canopy or ribs.	1. Apply a silicone-based lubricant to moving parts if necessary. 2. Check for any fabric or debris caught in the ribs or mechanism.
Umbrella does not tilt.	Tilt button not fully pressed or mechanism is stiff.	Ensure the tilt button is fully depressed while adjusting the angle. Check for obstructions.
Umbrella is unstable.	Umbrella base is too light or not properly secured.	Use a heavier umbrella base (over 26.5 lbs / 12 kg recommended) and ensure all securing knobs are tightened.

Specifications

- **Overall Dimensions:** 108" (Diameter) x 98.4" (Height)
- **Pole Diameter:** 1.50 inches (38 mm)
- **Canopy Shape:** Round
- **Canopy Material:** Fabric (UV and water-resistant)
- **Ribs:** 8 iron ribs
- **Lights:** 32 LED lights (4 per rib)
- **Power Source:** Solar Powered
- **Features:** Tilt mechanism, Hand-crank lift, ON/OFF switch for lights
- **Color:** Black and White

Safety Information

- Always ensure the umbrella is securely anchored in a suitable base.
- Do not use the umbrella in high winds, heavy rain, or other severe weather conditions. Close and secure it immediately.
- Keep children and pets away from the umbrella during opening and closing operations.
- Do not hang objects from the umbrella ribs or pole.
- Avoid placing the umbrella near open flames or heat sources.

Warranty and Support

For warranty information or customer support, please refer to the product packaging or contact Blissun directly through their official website or the retailer where the product was purchased. Keep your purchase receipt as proof of purchase.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07NSLZQSV

More documents and user manuals: **https://manuals.plus/**