Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Kärcher KB 5 Yellow

Kärcher KB 5 Electric Floor Sweeper Broom User Manual

Model: KB 5 Yellow

Brand: Kärcher

1. Introduction

The Kärcher KB 5 Cordless Sweeper is designed as a quick and efficient cleaning solution for everyday dirt, dust, and debris in your home. It is suitable for both hard floors and low-pile carpets, offering effortless operation by simply tilting the handle to activate. Its compact design and swivel steering allow for easy maneuverability around and under furniture.





Image: The Kärcher KB 5 Electric Floor Sweeper Broom, a lightweight and cordless cleaning device.

2. Product Features

- **Powerful Rollerbrush:** An electric-propelled rollerbrush rotates at high speed to efficiently sweep up dirt, debris, and pet hair from a variety of hard floor surfaces and low-pile carpets. This electric sweeper design provides a spotless clean without relying on suction like standard household vacuums.
- **Whisper-Quiet Operation:** Quiet Mark Certified as a high performance product that is engineered to operate with less noise than other products in its category.
- **Simple Maintenance:** With an easy-to-clean brush roll and an easy-empty debris cup, maintaining the KB 5 is nearly effortless; Quick and easy emptying without coming into contact with dirt.
- **Flexible Double Joint:** Easy to maneuver, with a handle that can be moved effortlessly in all directions, the KB 5 can easily navigate between and underneath furniture and chairs.
- **Lightweight, Transportable, and Storable:** Weighing in at less than 3 lbs, the KB 5 is easy to transport and maneuver to any room in the house; It's small footprint takes up little space, even in small closets.

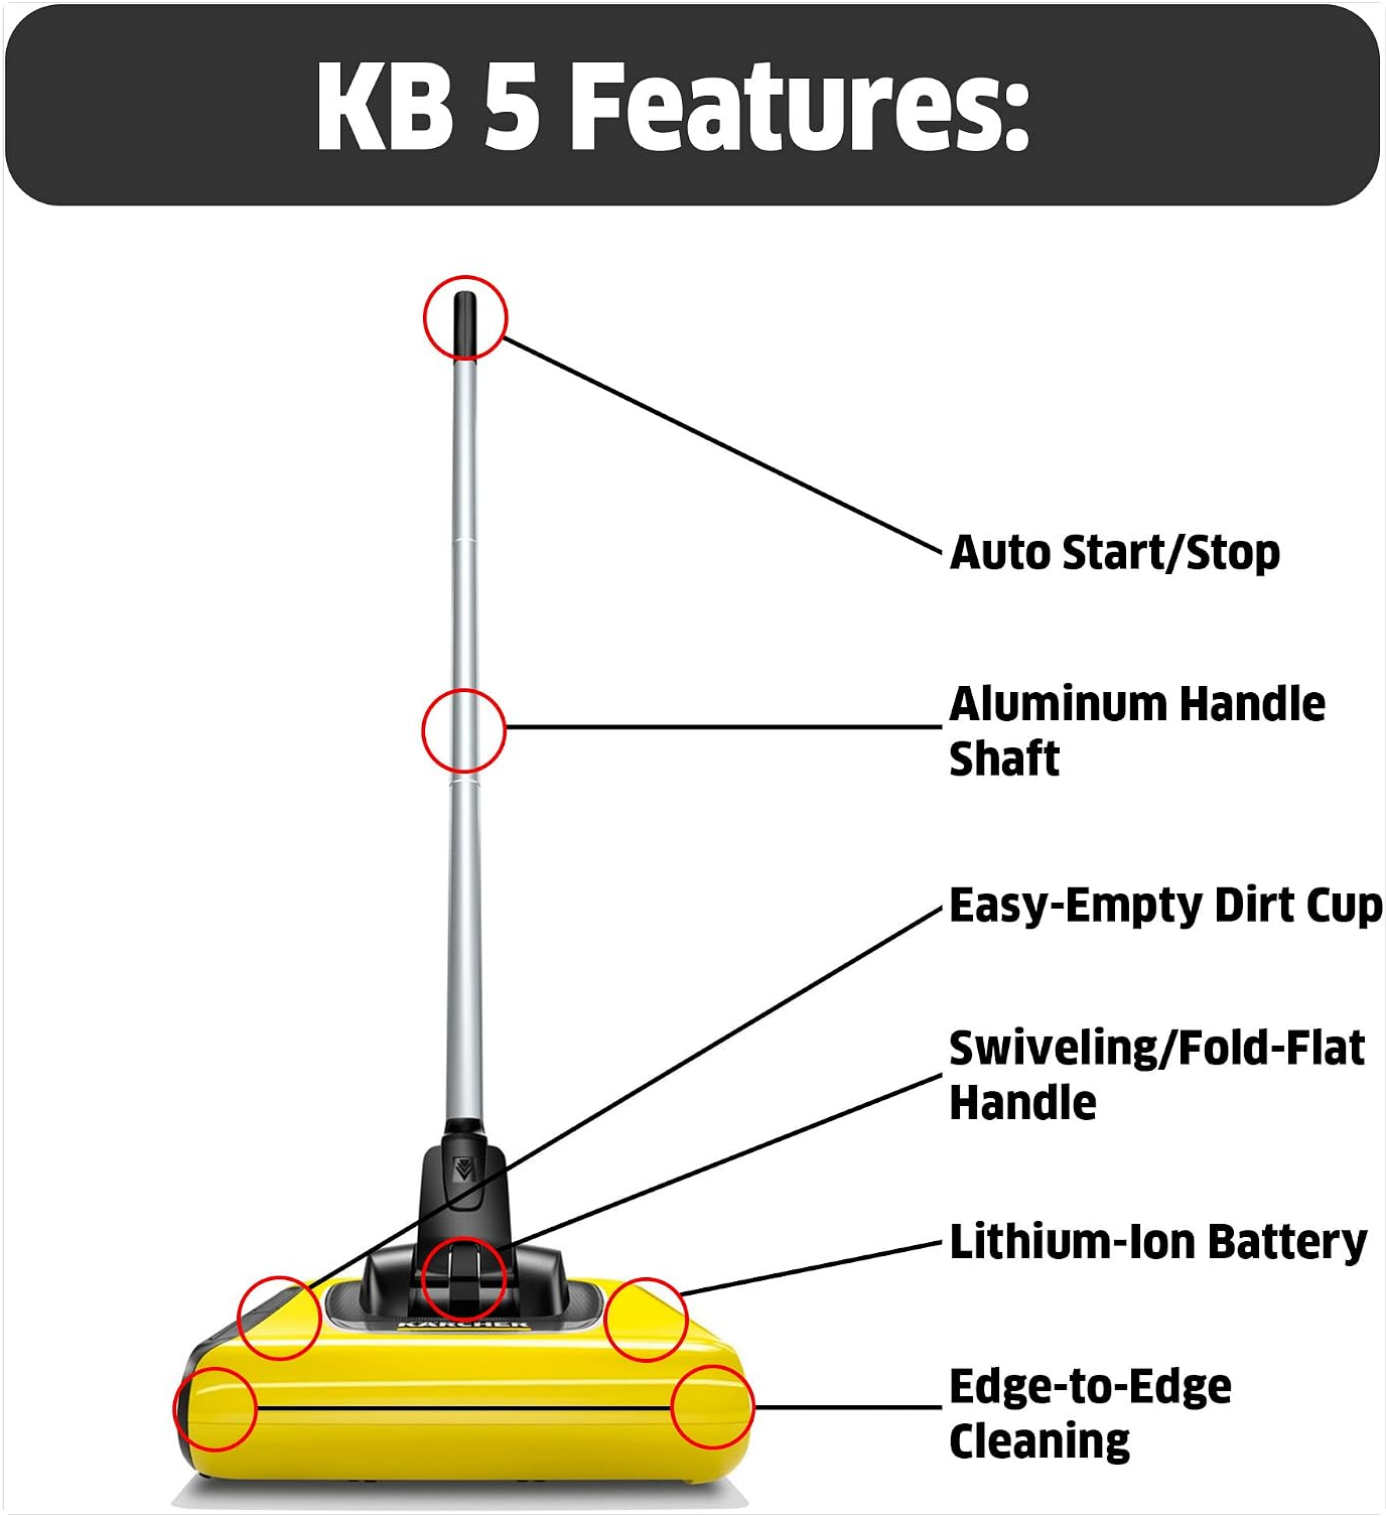


Image: Diagram highlighting key features of the KB 5, including Auto Start/Stop, Aluminum Handle Shaft, Easy-Empty Dirt Cup, Swiveling/Fold-Flat Handle, Lithium-Ion Battery, and Edge-to-Edge Cleaning.



Image: Visual representation of the KB 5's dimensions (8.5" x 9.1" x 44.1") and key specifications: 8" brush, 30 min. runtime, 3 hour charge, and 2.6 pounds weight.

3. Setup

The Kärcher KB 5 Electric Floor Sweeper Broom requires minimal assembly. Follow these steps to prepare your device for first use:

1. **Unpack:** Carefully remove all components from the packaging. Ensure all parts listed in the packing contents are present.
2. **Assemble Handle:** Connect the handle sections by aligning the connectors and pushing them firmly together until they click into place. Insert the assembled handle into the main sweeper unit.
3. **Initial Charge:** Before first use, fully charge the lithium-ion battery. Connect the charging cable to the charging port

on the sweeper and plug it into a standard electrical outlet. The charging indicator light will show the charging status. A full charge typically takes approximately 3 hours.

4. **Docking Station:** Place the docking station in a convenient location near an electrical outlet for easy charging and storage.

4. Operating Instructions

The KB 5 is designed for intuitive operation. It features an automatic on/off function activated by the handle position.

- **Starting the Sweeper:** To activate the sweeper, simply tilt the handle back from its upright parking position. The brush roll will automatically begin to rotate.
- **Stopping the Sweeper:** To turn off the sweeper, return the handle to its upright parking position. The brush roll will automatically stop.
- **Cleaning Surfaces:** The KB 5 is effective on hard floors (wood, tile, laminate) and low-pile carpets/rugs. For optimal performance, move the sweeper in a steady, forward motion.
- **Maneuvering:** The flexible double joint and swivel steering allow the sweeper head to easily navigate around furniture legs and reach under low-clearance items. The handle can also fold flat for extended reach under beds or tables.



Image: A person using the Kärcher KB 5 to clean stairs, demonstrating its maneuverability.



Image: A person using the Kärcher KB 5 to clean a low-pile carpet, showcasing its effectiveness on various floor types.



Image: The Kärcher KB 5 cleaning under a low cabinet, illustrating its ability to reach confined spaces.



Image: The Kärcher KB 5 effectively sweeping up confetti from a hard floor, demonstrating its cleaning power for small debris.



Image: A diagram showing the Kärcher KB 5 handle in various positions, from upright to fully reclined, highlighting its flexible joint.

5. Maintenance

Regular maintenance ensures optimal performance and extends the lifespan of your Kärcher KB 5.

- **Emptying the Debris Cup:** After each use, or when full, remove the debris cup from the side of the sweeper head and empty its contents into a waste bin. This design allows for hygienic emptying without direct contact with dirt.
- **Cleaning the Brush Roll:** Periodically check the brush roll for tangled hair, threads, or large debris. The brush roll is easy to remove for cleaning. Simply unclip it from the sweeper head, remove any obstructions, and reinsert it securely.
- **Wiping Down the Unit:** Use a soft, damp cloth to wipe down the exterior of the sweeper. Do not use abrasive cleaners or solvents.
- **Charging:** Always recharge the battery when the performance noticeably decreases or the charging indicator signals low battery. Store the sweeper on its docking station to ensure it's always ready for use.



Image: A close-up view of the Kärcher KB 5 with its easy-empty debris cup pulled out, demonstrating the simple maintenance process.

6. Troubleshooting

Problem	Possible Cause	Solution
Sweeper does not turn on.	Battery is discharged. Handle is not tilted back.	Charge the battery. Tilt the handle back to activate the sweeper.
Poor cleaning performance.	Debris cup is full. Brush roll is tangled or dirty.	Empty the debris cup. Clean the brush roll.
Sweeper stops unexpectedly.	Battery is low. Obstruction in brush roll.	Recharge the battery. Check and clear any obstructions from the brush roll.
Noise during operation.	Debris caught in brush roll or motor.	Turn off the sweeper, remove the brush roll, and clear any debris.

If the problem persists after attempting these solutions, please contact Kärcher customer support.

7. Specifications

Attribute	Detail
Brand	Kärcher
Model Name	KB5 Yellow
Item Model Number	1.258-009.0
Color	Yellow
Recommended Uses	Floor Cleaning, Hard Floor Cleaning, Low Pile Carpet, Low Pile Rugs
Handle Material	Metal
Bristle Type	Flagged Bristle
Special Features	Cordless, Edge-to-Edge Cleaning, Fold-Flat Handle, Handle Auto-Start, Pivoting Handle
Surface Recommendation	Low-Pile Carpet, Low-Pile Rugs, Hard Floors
Included Components	Charging Cable, Docking Station, KB5 Yellow
Product Dimensions	8.5"W x 44.1"H
Material	Plastic
Item Weight	2.6 Pounds
UPC	886622023128
Batteries	1 Lithium Ion batteries required (included)
Battery Type	Lithium-Ion
Assembly Required	Yes

8. Warranty & Support

Warranty: This Kärcher product comes with a 1-year limited warranty. Please retain your proof of purchase for warranty claims.

For detailed information, refer to the official user manual PDF:Download User Manual (PDF)

For further assistance, troubleshooting, or to explore other Kärcher products, please visit the official Kärcher Store: Kärcher Store on Amazon

© 2024 Kärcher. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07NYD7LGJ

More documents and user manuals: **https://manuals.plus/**