Hamzer KEY-STAND-X2

Hamzer Double-X Keyboard Stand Instruction Manual

Model: KEY-STAND-X2

Introduction

This manual provides comprehensive instructions for the safe and proper use of your Hamzer Double-X Keyboard Stand. Please read this document thoroughly before attempting assembly, operation, or maintenance to ensure optimal performance and longevity of the product. Retain this manual for future reference.

Safety Information

Observe the following safety guidelines to prevent injury or damage to the product:

- Ensure all locking mechanisms are fully engaged and secure before placing any instrument on the stand.
- Do not exceed the stand's maximum weight capacity. Refer to the Specifications section for details.
- Keep hands and fingers clear of all moving parts, especially during unfolding and height adjustment, to avoid pinching.
- Place the stand on a stable, level surface to prevent tipping.
- Regularly inspect the stand for any signs of wear, damage, or loose components. Do not use if damaged.
- Keep children and pets away from the stand during assembly and adjustment.

Package Contents

Verify that all components are present upon unpacking:

- 1 x Hamzer Double-X Keyboard Stand
- 2 x Locking Straps

Setup Instructions

1. Unfolding the Stand

Carefully remove the stand from its packaging. Place the stand on a flat surface. Gently pull the two 'X' frames apart until the

central adjustment mechanism is accessible. The stand will begin to open into its operational shape.



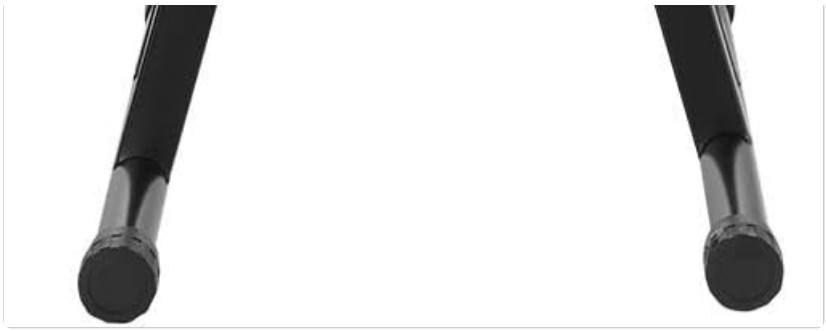


Image: The Hamzer Double-X Keyboard Stand being unfolded from its compact storage position.

2. Adjusting Height

Locate the central adjustment knob. Pull the knob outwards to disengage the locking pin. While holding the knob out, adjust the 'X' frames to raise or lower the stand to your desired height. There are 7 predefined height settings. Once the desired height is achieved, release the knob, ensuring the locking pin fully engages into one of the adjustment holes. Gently rock the stand to confirm it is securely locked.



Image: Detail of the central adjustment knob and the multiple holes for selecting desired height.

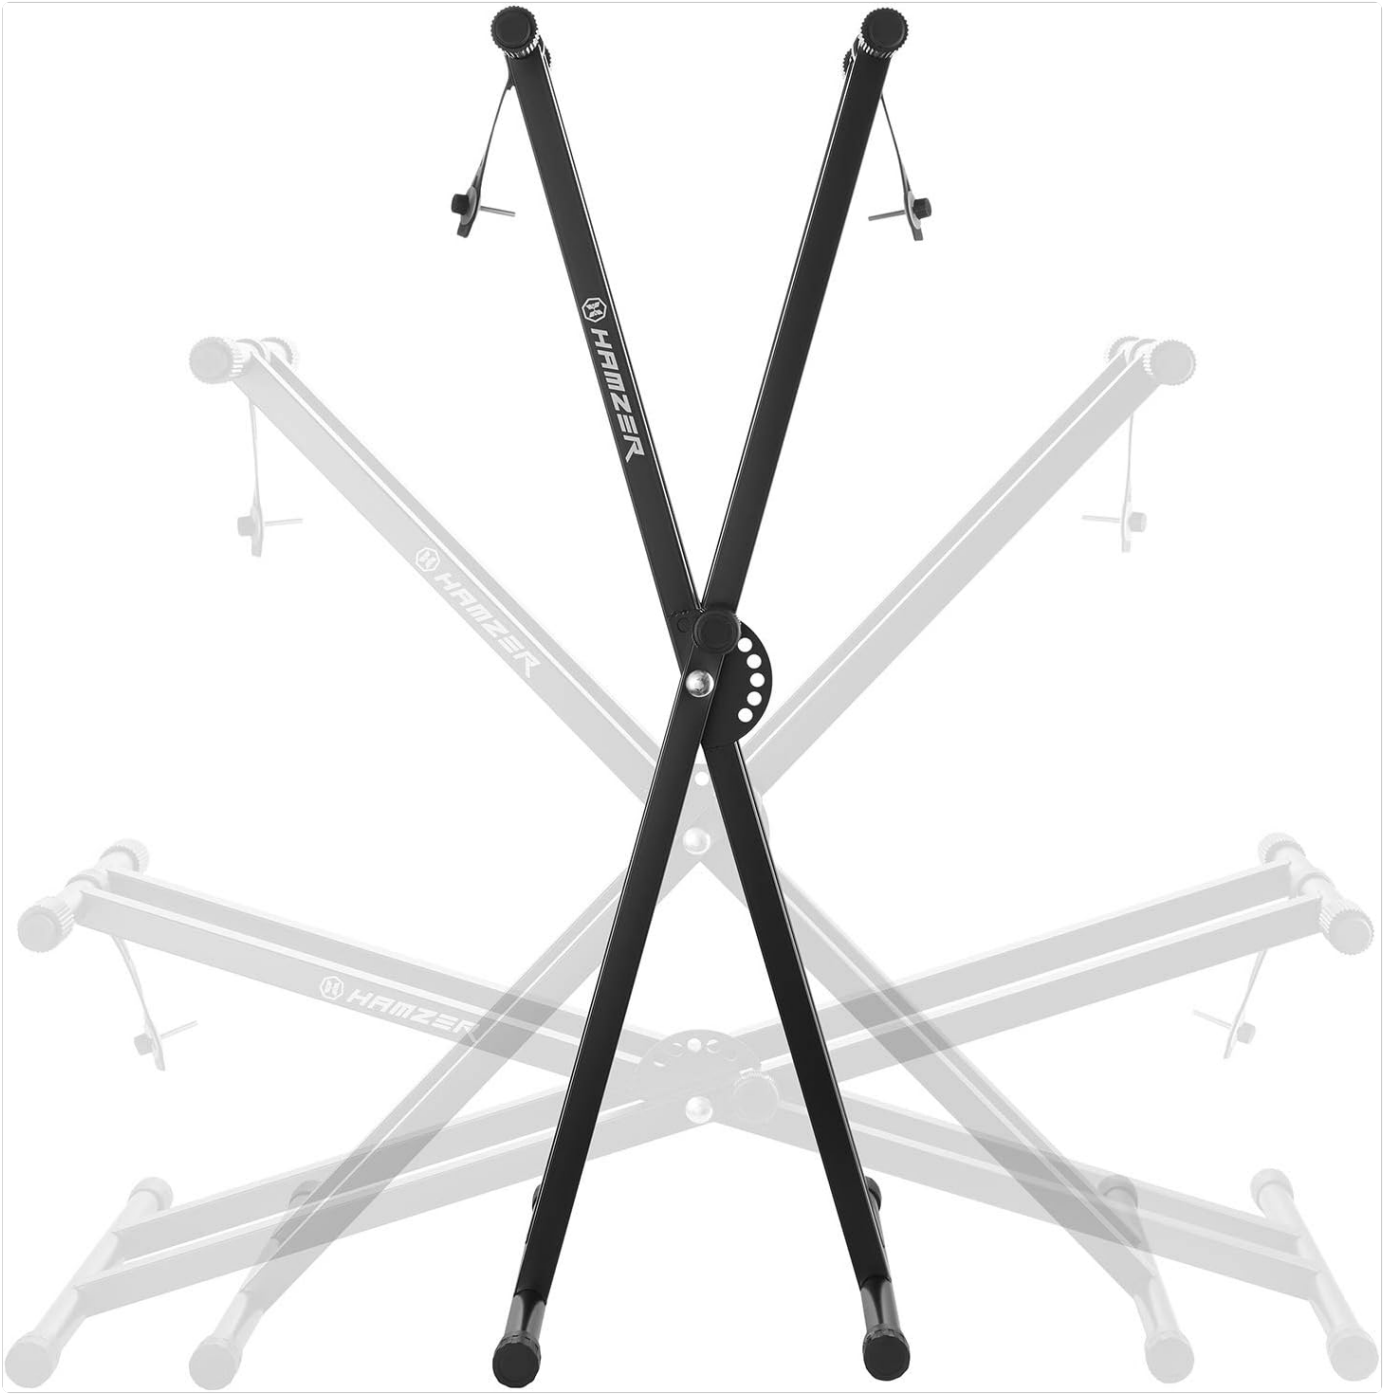


Image: The stand's versatility, demonstrating its ability to be set at different heights for sitting or standing play.

3. Securing the Keyboard

Place your keyboard onto the top support arms of the stand. Utilize the two provided locking straps to secure your keyboard to the stand. Attach one end of each strap to the designated points on the stand's top arms and the other end to your keyboard, ensuring a snug fit. This provides additional stability and prevents accidental movement.



Image: This view highlights the durable strap designed to secure the keyboard to the stand and the non-slip rubber cap on the support arm.

Operating Instructions

Once the stand is set up and adjusted to your preferred height, carefully place your keyboard on the top support arms. Ensure the keyboard rests evenly on the non-slip end caps to prevent sliding. If using the locking straps, ensure they are securely fastened to both the stand and the keyboard. Before playing, gently test the stability of the stand and keyboard assembly.

Maintenance

To maintain your Hamzer Double-X Keyboard Stand in optimal condition:

- **Cleaning:** Wipe the stand with a soft, dry cloth to remove dust. For stubborn dirt, use a slightly damp cloth and mild soap, then dry thoroughly. Avoid abrasive cleaners or solvents.
- **Inspection:** Periodically check all bolts, screws, and adjustment mechanisms to ensure they are tight and functioning correctly.
- **Storage:** When not in use, fold the stand for compact storage. Store in a dry environment away from extreme temperatures.

Troubleshooting

Issue	Possible Cause	Solution
Stand is wobbly	Adjustment knob not fully engaged; uneven surface; loose bolts.	Ensure the adjustment knob's pin is fully seated in a hole. Move stand to a level surface. Check and tighten any loose bolts.
Keyboard slides on stand	Locking straps not used or loose; non-slip caps missing or worn.	Securely fasten the locking straps. Ensure all four non-slip rubber caps are present and in good condition on the support arms.
Difficulty adjusting height	Adjustment knob stuck; mechanism dirty.	Ensure the knob is pulled out completely. Clean the adjustment mechanism to remove any debris. Do not force the adjustment.

Specifications

Feature	Detail
Model Number	KEY-STAND-X2
Material	Metal
Color	Black
Item Weight	6 pounds
Item Dimensions (L x W x H)	33 x 18 x 27 inches (approximate, varies with height setting)
Number of Height Levels	7
Special Features	Portable, Foldable, Height Adjustable, Non-slip Caps, Locking Straps
UPC	842364115644

Warranty Information

This Hamzer Double-X Keyboard Stand is covered by a**90-day limited manufacturer warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, abuse, accidents, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.

Customer Support

Should you have any questions, require assistance, or need to report an issue with your Hamzer Double-X Keyboard Stand, please contact Hamzer customer support. Refer to the product packaging or the Hamzer official website for current contact information.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question