Bundaloo BUN-240

Bundaloo Claw Machine Arcade Game

Model: BUN-240

Introduction

Welcome to the exciting world of the Bundaloo Claw Machine Arcade Game! This manual provides essential information for setting up, operating, and maintaining your new game. Designed to bring the classic arcade experience home, this game tests skill and coordination, offering hours of entertainment for ages 8 and up.

What's in the Box

- Claw Machine
- 30 Reusable Tokens
- Instruction Manual (this document)

Setup

1. **Battery Installation:**

   The Bundaloo Claw Machine requires 3 "D" sized batteries (not included). Ensure you use new batteries of the same type for optimal performance. Locate the battery compartment on the bottom of the machine, open it with a small screwdriver, insert the batteries according to the polarity markings, and securely close the compartment.

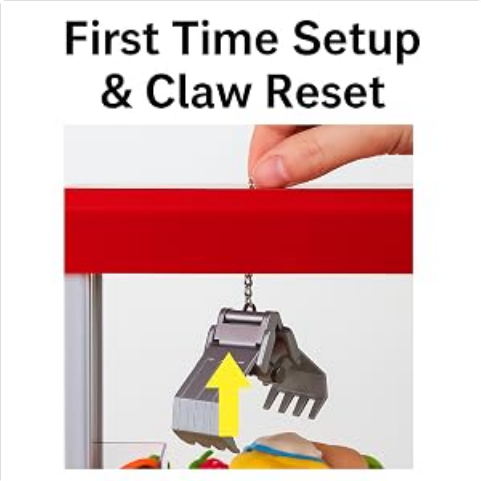


Image: Close-up of the battery compartment with three D-sized batteries being inserted. The text 'Use New Matching D Batteries Only' is visible.

2. **Filling the Machine:**

   Open the top lid of the claw machine. Fill the machine with small, lightweight, WRAPPED candies or prizes. Recommended prize size is approximately 2" x 2" or smaller. Do not overfill the machine, as the claw needs sufficient space to maneuver and grab prizes effectively. Close the lid securely after filling.

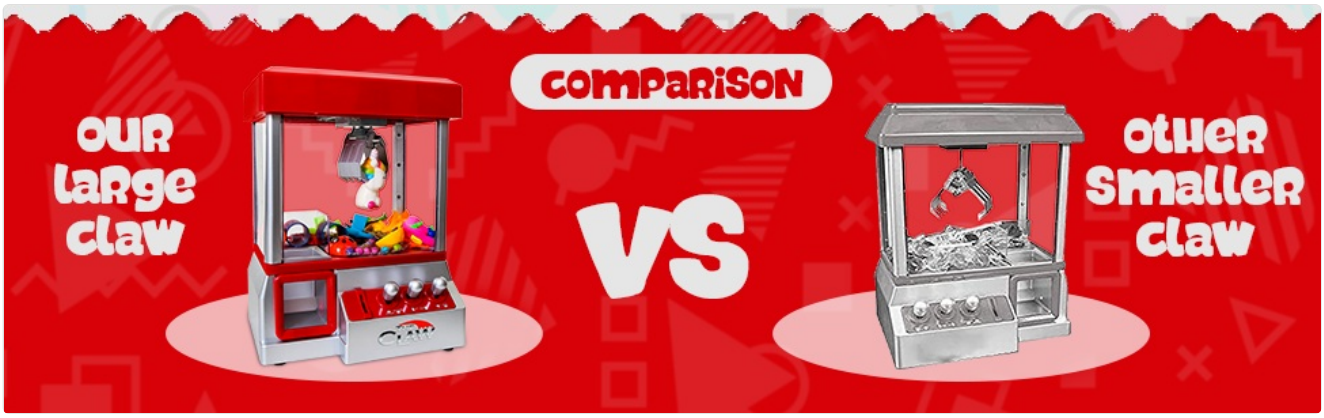


Image: A graphic illustrating how to load the claw machine with candies, small toys, and mini plush items. It emphasizes using wrapped candies only.



Image: A visual warning against overfilling the claw machine, showing the claw needing space above the prizes.

3. **Claw Reset:**

   If the claw is not in its starting position, you may need to manually reset it. Gently guide the claw mechanism to the top-center position to ensure it's ready for play.



Image: A hand demonstrating the 'First Time Setup & Claw Reset' by manually adjusting the claw.

Operating Instructions

Follow these steps to enjoy your Bundaloo Claw Machine:

1. **Power On:** Locate the ON/OFF switch, usually on the bottom or back of the machine, and switch it to the 'ON' position.
2. **Insert Token:** Insert one of the provided reusable tokens into the coin slot. This will activate the machine and start the game music.
3. **Control the Claw:** Use the three joysticks on the front panel to control the claw's movement:
    - The first joystick moves the claw **forward and backward**.
    - The second joystick moves the claw **left and right**.
    - The third joystick lowers the claw **down** to attempt a grab. Once lowered, the claw will automatically attempt to grab a prize and return to the prize chute.
4. **Retrieve Prize:** If successful, your prize will drop into the retrieval chute. Open the small door to collect your prize.



Image: A step-by-step visual guide on how to play the Bundaloo Claw Machine, from loading prizes to winning.



Image: A hand inserting a token into the machine to activate it.



Image: A hand operating the three joysticks to control the claw.

Video Demonstration: Operating the Claw Machine

Your browser does not support the video tag.

Video: A seller demonstrating how to fill the claw machine with prizes, insert a token, and operate the joysticks to grab a prize. This video highlights the ease of use and the fun it provides.

Your browser does not support the video tag.

Video: A seller showcasing the key features of the claw machine, including the joysticks, coin slot, and prize retrieval, demonstrating its operation.

Important Usage Tips

- Use NEW batteries of the same type for best performance.
- Do not overfill the machine; the claw requires space to maneuver.
- Use small, lightweight, WRAPPED candy or prizes only (recommended size approx. 2" x 2" or smaller).
- This item is designed as a game of skill and challenge, similar to real arcade claw machines. Success depends on skill and proper setup, and it is not intended to dispense candy every play.
- Adult supervision is recommended for younger users (ages 8 and up).

Maintenance

- **Cleaning:** Wipe the exterior of the machine with a soft, dry cloth. Do not use abrasive cleaners or immerse the machine in water.
- **Storage:** When not in use for extended periods, remove the batteries to prevent leakage and store the machine in a cool, dry place.

Troubleshooting

- **Machine Not Turning On:** Ensure batteries are correctly installed with proper polarity and are not depleted. Replace with new batteries if necessary. Check that the ON/OFF switch is in the 'ON' position.
- **Claw Not Moving/Grabbing:** Verify that a token has been inserted to activate the game. Ensure the machine is not overfilled, obstructing the claw's movement. The claw's grip strength is designed for small, lightweight items.
- **Loud Music/Sound:** The machine plays authentic arcade-style sounds. There is no volume control feature on this model. If the sound is too loud, consider placing a small piece of tape over the speaker on the bottom of the unit to muffle the sound.
- **Prizes Difficult to Grab:** This is a game of skill. Ensure prizes are small, lightweight, and wrapped to provide the best chance of success. Practice and patience are key.

Specifications

- **Product Dimensions:** 13.75 x 10 x 7.75 inches
- **Item Weight:** 3.83 pounds
- **Item Model Number:** BUN-240
- **Manufacturer Recommended Age:** 6 years and up (Note: Product feature bullets recommend 8 years & up for optimal skill-based play)
- **Batteries:** 3 "D" batteries (not included)



Image: Product information graphic detailing dimensions, ON/OFF switch location, token drawer, and battery requirements.

Warranty & Support

The Bundaloo Claw Machine is safety tested and quality assured, meeting ASTM F963-23 toy safety standards, including mechanical, flammability, lead, and phthalate testing. It is backed by Bundaloo's 6-month warranty for peace of mind. For support or warranty claims, please contact Bundaloo customer service through your retailer or the official Bundaloo website.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question