Nulaxy C3

Nulaxy C3 Laptop Stand User Manual

Model: C3

PRODUCT OVERVIEW

The Nulaxy C3 Fully Aluminum Detachable Laptop Stand is an ergonomic computer riser designed to elevate your laptop screen to an optimal eye level, promoting better posture and reducing strain. Its ventilated design aids in cooling, while anti-slip features ensure stability. Compatible with laptops ranging from 10 to 16 inches, this stand is a robust and practical addition to any workspace.

Image: The Nulaxy C3 laptop stand in gray, supporting a silver laptop. The stand features a sleek, minimalist design with an open base for ventilation.

Setup Instructions

The Nulaxy C3 laptop stand is designed for simple and quick assembly. It consists of three main parts: the base and two support arms.

Assembly Steps:

1. **Unpack Components:** Carefully remove all parts from the packaging. You should have one base piece and two identical support arms.

2. **Identify Slots:** Locate the two rectangular slots on the top surface of the base piece. These are designed to

receive the support arms.

3. **Insert Support Arms:** Take one support arm and align its flat end with one of the slots on the base. Gently slide the arm into the slot until it clicks securely into place. Repeat this step for the second support arm and the remaining slot. Ensure both arms are firmly seated.

4. **Verify Stability:** Once assembled, gently press down on the top surfaces of the support arms to ensure the stand is stable and all connections are secure.

Easy to Install Design
Detach and install with ease

Anti-Slip
Rubber Pads

Precision Cut
Aluminum

Image: A close-up view illustrating the easy installation process of the Nulaxy C3 laptop stand, showing how the support arms slide into the base. Orange arrows indicate the connection points.

The stand is now ready for use. Place it on a flat, stable surface before positioning your laptop.

OPERATING INSTRUCTIONS

The Nulaxy C3 laptop stand is designed for straightforward operation, focusing on ergonomic benefits and heat dissipation.

Placement and Usage:

- **Positioning the Laptop:** Carefully place your laptop onto the top surfaces of the two support arms. Ensure the laptop is centered and rests securely on the large rubber pads to prevent slipping.
- **Ergonomic Benefits:** The stand elevates your laptop screen by approximately 7 inches (17.8 cm), bringing it to a more comfortable eye level. This helps in maintaining proper posture, reducing neck and back strain, and minimizing eye fatigue during prolonged use.
- **Recommended Accessories:** For optimal ergonomic comfort and stability, it is recommended to use an external keyboard and mouse when your laptop is on the stand. This prevents wobbling that might occur when typing directly on the elevated laptop keyboard.
- **Heat Dissipation:** The open-back design of the stand promotes natural airflow around your laptop, preventing overheating. The aluminum alloy material also acts as a thermal conductor, helping to draw heat away from the device.

Ergonomic Design

Rise your laptop to a comfortable height to work with better posture.

Image: A user working comfortably with a laptop elevated on the Nulaxy C3 stand, highlighting the ergonomic design that promotes better posture.

Perfect **Heat Dissipation**

Keeps the Laptop Cool

Image: The Nulaxy C3 stand with a laptop, illustrating the open design that allows for efficient heat dissipation and cooling airflow, indicated by orange arrows.

Space Management

Say goodbye to the messy table

Image: The Nulaxy C3 stand in use on a desk, demonstrating how it helps manage space by allowing a keyboard and mouse to be stored underneath, contributing to a tidy workspace.

MAINTENANCE

The Nulaxy C3 laptop stand requires minimal maintenance to ensure its longevity and continued performance.

- **Cleaning:** Wipe the aluminum surfaces with a soft, damp cloth. Avoid using abrasive cleaners or solvents that could damage the finish.
- **Rubber Pads:** Periodically check the rubber pads on the top and bottom of the stand for any wear or damage. Ensure they are clean and free of debris to maintain optimal grip and protection for your laptop and desk surface.
- **Storage:** If you need to store or transport the stand, it can be easily disassembled into its three parts. Store in a dry, safe place to prevent scratches or damage.

TROUBLESHOOTING

Here are some common issues and their solutions for the Nulaxy C3 laptop stand.

Problem	Possible Cause	Solution
Stand feels wobbly.	Support arms not fully inserted into the base. Typing directly on the laptop keyboard.	Ensure both support arms are securely clicked into their respective slots. Use an external keyboard for typing to minimize movement.
Laptop slides on the stand.	Rubber pads are dirty or worn. Laptop not centered.	Clean the rubber pads with a damp cloth. Replace pads if severely worn. Ensure the laptop is placed centrally on the pads.
Stand slides on the desk.	Bottom rubber pads are dirty or worn. Desk surface is too smooth.	Clean the bottom rubber pads. Ensure the desk surface is clean and dry. Consider a desk mat for extremely smooth surfaces.

SPECIFICATIONS

Model: Nulaxy C3

Material: Premium 5mm Aluminum Alloy

Color: A-Grey

Compatibility: All laptops between 10-16 inches (e.g., MacBook 12/13, MacBook Air 13, MacBook Pro 13/15, Google Pixelbook, Dell XPS, HP, ASUS, Lenovo ThinkPad, Acer Chromebook)

Weight Capacity: Up to 22 lbs (10 kg)

Product Dimensions (LxWxH): 11.5 x 8.3 x 2.3 inches (29.2 x 21.1 x 5.8 cm)

Item Weight: 1.76 pounds (0.8 kg)

Elevation Height: Approximately 7 inches (17.8 cm)

Features: Detachable design, Anti-Slip rubber pads, Ventilated for heat dissipation, Ergonomic riser.

Wider Compatible

Compatible with laptop from

10–16"

| 10" | | 16" |

Image: The Nulaxy C3 laptop stand illustrating its dimensions and compatibility with laptops ranging from 10 to 16 inches.

WARRANTY AND SUPPORT

Nulaxy stands behind the quality of its products. For specific warranty details and customer support, please refer to the official Nulaxy website or contact their customer service directly.
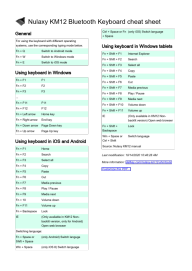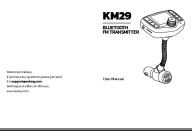
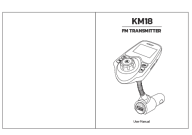**Contact Information:**

- **Website:** www.nulaxy.com (Please visit the official website for the most up-to-date contact information and support resources.)
- **Email:** Refer to website for support email.
- **Phone:** Refer to website for support phone number.

When contacting support, please have your product model (C3) and purchase details ready.

Related Documents - C3

	Nulaxy KM12 Bluetooth Keyboard Cheat Sheet A comprehensive cheat sheet for the Nulaxy KM12 Bluetooth Keyboard, detailing shortcuts for Android, Windows, and iOS operating systems, including general mode switching and specific function key combinations.
	Nulaxy NX10 FM Transmitter User Manual User manual for the Nulaxy NX10 FM Transmitter, covering product diagram, control functions, how to use, important notes, and warranty information.
	Nulaxy KM29 Bluetooth FM Transmitter User Manual User manual for the Nulaxy KM29 Bluetooth FM Transmitter, covering features, specifications, operation, and troubleshooting.
	Nulaxy KM18 FM Transmitter User Manual - Features, Setup, and Troubleshooting Comprehensive user manual for the Nulaxy KM18 FM Transmitter. Learn about its features, how to connect via FM and Bluetooth, play music, make hands-free calls, charge devices, and troubleshoot common issues. Includes safety instructions and disposal information.
	Nulaxy KM18 FM Transmitter User Manual Comprehensive user manual for the Nulaxy KM18 FM Transmitter, covering features, specifications, setup, operation, hands-free calling, music playback, charging, troubleshooting, and regulatory information.
	Nulaxy BR18 2-in-1 Wireless Audio Adapter User Manual User manual for the Nulaxy BR18 2-in-1 Wireless Audio Adapter, detailing its specifications, operation modes (Receiver and Transmitter), pairing instructions, troubleshooting, and charging information.