Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Crosley CR6037A-SI

Crosley RSD3 Mini Turntable User Manual

Model: CR6037A-SI

Introduction

The Crosley RSD3 Mini Turntable is specifically designed for playing collectible 3-inch vinyl records. This compact belt-drive turntable offers a unique way to enjoy your vinyl collection, featuring an AT3600 moving magnet cartridge, adjustable pitch control, and a fully supported platter. Despite its small size, it includes many features found in larger turntables, making it a versatile and enjoyable device for vinyl enthusiasts.

Safety Information

- **Power Source:** Use only the specified power adapter or batteries (4 AA batteries) for operation.
- **Placement:** Place the turntable on a stable, level surface to prevent vibrations and ensure proper playback.
- **Moisture:** Keep the unit away from water or excessive moisture to prevent electric shock or damage.
- **Cleaning:** Disconnect power before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosols.
- **Servicing:** Do not attempt to service the unit yourself. Refer all servicing to qualified service personnel.

Package Contents

Carefully unpack all items and ensure you have the following:

- Crosley RSD3 Mini Turntable
- RCA Cable
- AUX Cable
- Mini USB Power Cable
- Clear Dust Cover
- User Manual
- 3-inch Large-Hole Post Adapters (2)
- Warranty Card

Product Overview


Familiarize yourself with the components of your RSD3 Mini Turntable:



Front view of the Crosley RSD3 Mini Turntable, showing the platter, tonearm, and controls.



The turntable with its clear dust cover in place, protecting the components.

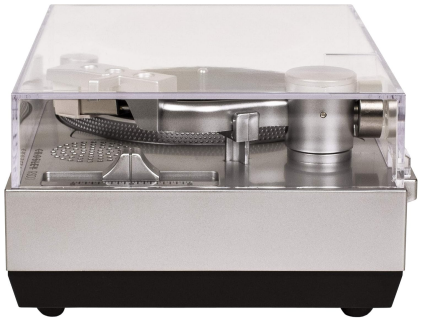

Side profile of the turntable, highlighting the tonearm and pitch control slider.



Rear panel with connectivity options: power input, AUX output, and USB port.



Overhead view of the turntable, detailing the platter, tonearm, and control layout.

Key Components:

- **Platter:** Where the 3-inch record rests.
- **Tonearm:** Holds the cartridge and stylus.
- **AT3600 Moving Magnet Cartridge:** High-quality cartridge for sound reproduction.
- **Pitch Control:** Slider to adjust playback speed.
- **Built-in Speaker:** For direct audio playback.
- **AUX Out Port:** Connect to external speakers or audio systems.
- **USB Port:** For power supply.
- **Dust Cover:** Protects the turntable from dust.

Setup

1. **Unpack:** Carefully remove the turntable and all accessories from the packaging.
2. **Placement:** Place the turntable on a flat, stable surface.
3. **Power Connection:**
    - **USB Power:** Connect the Mini USB power cable to the USB port on the turntable and to a compatible USB power source (e.g., computer, USB wall adapter).
    - **Battery Power:** If using batteries, open the battery compartment on the bottom of the unit and insert 4 AA batteries (not included), ensuring correct polarity.
4. **Dust Cover:** Place the clear dust cover over the turntable.
5. **External Audio (Optional):** If connecting to external speakers, use the provided AUX cable or RCA cable adapter to connect the turntable's AUX Out port to your audio system's input.

Operating Instructions

1. **Power On:** Turn the power knob to the ON position. The power indicator light will illuminate.
2. **Place Record:** Carefully place a 3-inch vinyl record onto the platter. If the record has a large center hole, use one of the included large-hole post adapters.
3. **Remove Stylus Protector:** Gently remove the clear plastic stylus protector from the cartridge.
4. **Position Tonearm:** Manually lift the tonearm and position the stylus over the lead-in groove of the record. Gently lower the tonearm onto the record.
5. **Adjust Pitch:** Use the pitch control slider to fine-tune the playback speed if needed.
6. **Volume Control:** Adjust the volume using the dedicated volume knob.
7. **Playback:** The record will begin playing.
8. **End of Playback:** At the end of the record, manually lift the tonearm and return it to its rest. Turn the power knob to the OFF position.

Maintenance

- **Cleaning the Stylus:** Periodically clean the stylus using a soft brush designed for stylus cleaning, brushing from back to front.
- **Cleaning the Turntable:** Wipe the turntable body and dust cover with a soft, dry, lint-free cloth. Do not use harsh

chemicals or abrasive cleaners.

- **Record Care:** Keep your 3-inch records clean and free of dust to ensure optimal sound quality and prolong stylus life. Store records in their sleeves.
- **Dust Cover:** Keep the dust cover on when the turntable is not in use to prevent dust accumulation.

Troubleshooting

Problem	Possible Cause	Solution
No power	Power cable not connected; Batteries depleted or incorrectly inserted.	Ensure USB cable is securely connected; Replace batteries or check polarity.
No sound from built-in speaker	Volume too low; Stylus not on record; Stylus protector still on.	Increase volume; Ensure stylus is properly placed on the record; Remove stylus protector.
No sound from external speakers	AUX cable not connected properly; External speaker volume too low or off.	Check AUX cable connection; Adjust volume on external speakers.
Sound is distorted or skipping	Record is dirty or damaged; Stylus is dirty or worn; Turntable not on a stable surface.	Clean record; Clean or replace stylus; Place turntable on a stable, level surface.
Record plays too fast or too slow	Pitch control needs adjustment.	Adjust the pitch control slider to the desired speed.

Specifications

- **Brand:** Crosley
- **Model Name:** RSD3
- **Model Number:** CR6037A-SI
- **Product Type:** Mini Turntable
- **Material:** Plastic
- **Maximum Rotational Speed:** 33 RPM (Adjustable via Pitch Control)
- **Motor Type:** AC Motor
- **Signal Format:** Analog
- **Power Source Type:** Battery Powered (4 AA batteries required) or USB (5V)
- **Voltage:** 5 Volts
- **Power Consumption:** 4 Watts
- **Connectivity Interface:** AUX, RCA (via adapter), USB
- **Features:** Dust Cover, Pitch Control, Built-in Speaker
- **Item Dimensions (L x W x H):** 12.1 x 15.6 x 7.3 cm (approximately 4.76 x 6.14 x 2.87 inches)
- **Item Weight:** Approximately 1 pound (0.45 kg)
- **GTIN:** 710244228640

Warranty Information

This Crosley product is covered by a limited warranty. Please refer to the included warranty card in your package for specific terms, conditions, and duration of coverage. Retain your proof of purchase for warranty claims.

Support

For further assistance, technical support, or inquiries regarding your Crosley RSD3 Mini Turntable, please visit the official Crosley website or contact their customer service department. Contact information can typically be found on the manufacturer's website or on the warranty card.
Website: www.crosleyradio.com

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07P83H6KK

More documents and user manuals: **https://manuals.plus/**