Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

YING RAY 2019031103

Replacement Air Conditioner Remote Control User Manual

MODEL: 2019031103 | BRAND: YING RAY

Introduction

This user manual provides comprehensive instructions for the operation and maintenance of your new YING RAY Replacement Air Conditioner Remote Control. This remote is designed as a direct replacement for Noma Air Conditioner models RG15A(B)/E, RG15A1(B)/E, and RG15A2(B)/E. It requires no programming and functions immediately upon battery installation.

Product Overview

The YING RAY replacement remote control is a compact and ergonomic device designed for easy handling and intuitive operation of your compatible Noma air conditioner. Below are images illustrating the remote's design and its compatibility.



Figure 1: Front View of the Remote Control. This image displays the front face of the remote control, showing all the buttons including Power, Mode, Speed, Timer, Sleep, Swing, Energy Saver, and One Touch, along with temperature adjustment arrows.

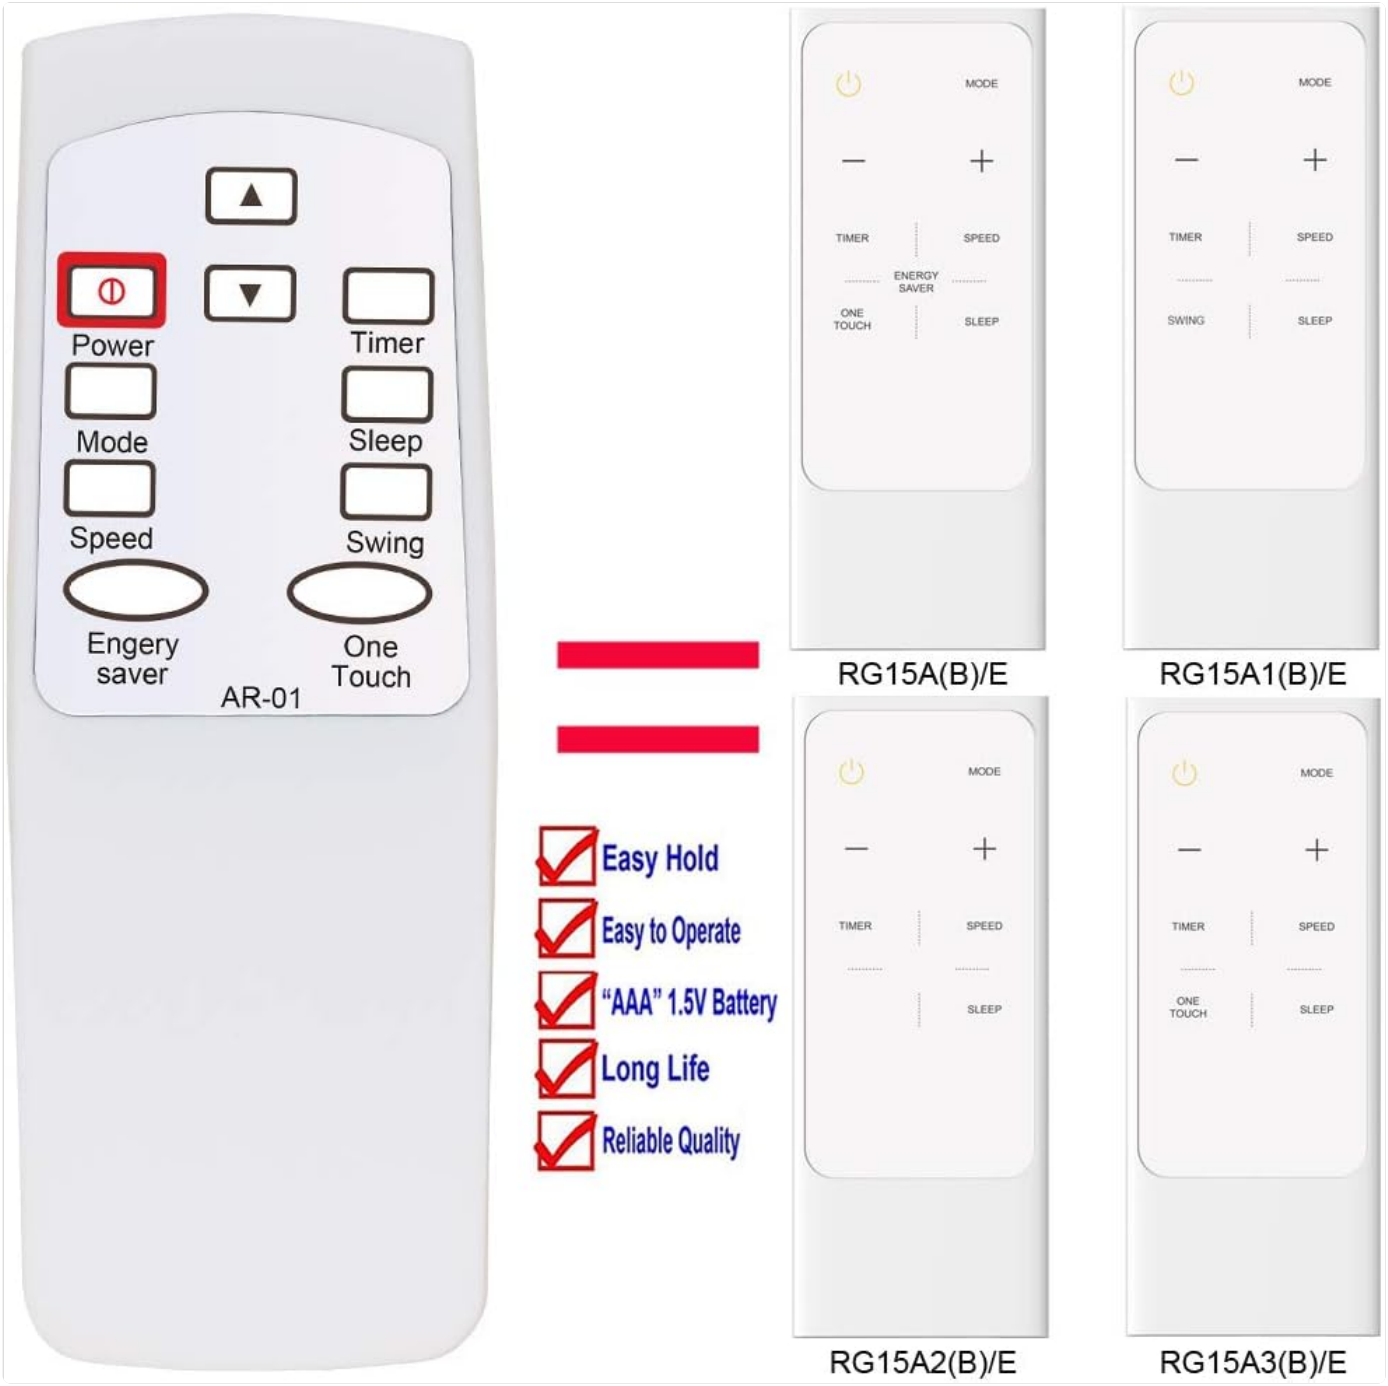


Figure 2: Remote Control Compatibility. This image illustrates the remote control's compatibility with various Noma air conditioner models, specifically RG15A(B)/E, RG15A1(B)/E, and RG15A2(B)/E, highlighting its key features such as easy hold, ease of operation, AAA battery requirement, long life, and reliable quality.



Figure 3: Back View of the Remote Control. This image shows the rear side of the remote control, featuring the battery compartment cover.





Figure 4: Side View of the Remote Control. This image provides a profile view of the remote control, highlighting its ergonomic shape.

Setup

The remote control requires two (2) AAA 1.5V batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA 1.5V batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Once batteries are installed, the remote is ready for use without any additional programming.



Figure 5: Battery Installation Guide. This image shows the open battery compartment of the remote control, indicating where to insert the two AAA 1.5V batteries. It also highlights the "NEW Good design with 1.5V AAA battery" feature.



Figure 6: Open Battery Compartment. This image provides a clear view of the empty battery compartment, showing the spring contacts for battery placement.

Operating Instructions

This remote control provides direct access to various functions of your Noma air conditioner. Point the remote control directly at the air conditioner's receiver when operating.

- **Power Button ( ):** Press to turn the air conditioner ON or OFF.
- **Temperature Adjustment Buttons (▲ / ▼):** Use the Up arrow to increase the temperature setting and the Down arrow to decrease it.
- **Mode Button:** Cycles through different operating modes such as Cool, Fan, Dry, Heat (if applicable to your AC unit).

- **Speed Button:** Adjusts the fan speed (e.g., Low, Medium, High, Auto).
- **Timer Button:** Sets the timer for automatic ON/OFF operation. Refer to your air conditioner's original manual for specific timer programming.
- **Sleep Button:** Activates the sleep mode, which typically adjusts temperature and fan speed for comfortable sleep and energy saving.
- **Swing Button:** Controls the louver swing function, directing airflow.
- **Energy Saver Button:** Activates an energy-saving mode, optimizing power consumption.
- **One Touch Button:** Activates a pre-set comfort setting with a single press.

Maintenance

Proper maintenance ensures the longevity and optimal performance of your remote control.

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's range decreases or it stops responding. Always replace both batteries at the same time with new AAA 1.5V batteries.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and damage. Store in a cool, dry place.
- **Avoid Exposure:** Do not expose the remote control to direct sunlight, extreme temperatures, or high humidity.

Troubleshooting

If you experience issues with your remote control, please refer to the following common solutions:

- **Remote Not Responding:**
  - Ensure batteries are inserted correctly with the correct polarity (+/-).
  - Replace old batteries with new AAA 1.5V batteries.
  - Ensure there are no obstructions between the remote control and the air conditioner's receiver.
  - Verify that the remote control is compatible with your specific Noma air conditioner model (RG15A(B)/E, RG15A1(B)/E, RG15A2(B)/E).
- **Limited Range:**
  - Replace batteries.
  - Ensure the remote is pointed directly at the air conditioner.
- **Specific Functions Not Working:**
  - Some functions (e.g., Timer, Sleep) may require specific settings or be dependent on the air conditioner's capabilities. Refer to your air conditioner's original manual for detailed function descriptions.

This remote control does not require any programming. If it does not work after verifying battery installation and compatibility, please contact customer support.

Specifications

Feature	Detail
Brand	YING RAY
Model Number	2019031103

Compatible Devices	Noma Air Conditioner models RG15A(B)/E, RG15A1(B)/E, RG15A2(B)/E
Power Source	Battery Powered
Battery Type	2 x AAA 1.5V (not included)
Special Features	Remote Control, No Programming Required
Color	Same With Item Picture (White)

Warranty and Support

For warranty information or technical support, please refer to the seller's policy on the platform where the product was purchased or contact YING RAY customer service directly. Keep your purchase receipt as proof of purchase.
For further assistance, you may visit the product page on Amazon:Product Link

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07PG8LJRT

More documents and user manuals: **https://manuals.plus/**