Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Frigidaire EFR1150BLU

Frigidaire 1.6 cu. ft. Compact Mini Fridge User Manual

Model: EFR1150BLU

Introduction

Thank you for choosing the Frigidaire 1.6 cu. ft. Compact Mini Fridge. This manual provides important information for the proper installation, operation, and maintenance of your appliance. Please read it thoroughly before use and keep it for future reference.

This compact refrigerator is designed for convenience, offering ample storage for groceries in a small footprint. It features a reversible door with a door basket suitable for 2L bottles and canned drinks, an adjustable thermostat, and an invisible door handle. Its space-saving design makes it ideal for dorm rooms, bedrooms, offices, or any area requiring compact refrigeration.



Image: The Frigidaire Mini Fridge in a modern kitchen setting, demonstrating its compact size and aesthetic integration into various environments.

Safety Information

WARNING: To reduce the risk of fire, electric shock, or injury when using your refrigerator, follow these basic precautions:

- Read all instructions before using the appliance.
- Plug into a grounded 3-prong outlet. Do not remove the grounding prong, do not use an adapter, and do not use an extension cord.
- It is recommended that a separate circuit, serving only your refrigerator, be provided. Use receptacles that cannot be turned off by a switch or pull chain.
- Never clean refrigerator parts with flammable fluids. The fumes can create a fire hazard or explosion.
- Before proceeding with any cleaning and maintenance operations, make sure the power line of the unit is disconnected.
- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other refrigerator. The

fumes can create a fire hazard or explosion.

- Do not allow children to operate, play with, or crawl inside the refrigerator.
- Do not use abrasive cleaners or sharp objects on the interior or exterior surfaces.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Setup

Unpacking Your Refrigerator

1. Remove all packaging material. This includes the foam base and all adhesive tape holding the refrigerator accessories inside and out.
2. Inspect and remove any remaining packing, tape, or printed materials before powering on the refrigerator.

Proper Air Circulation

To ensure your refrigerator works at the maximum efficiency it was designed for, you should install it in a location where there is proper air circulation, plumbing, and electrical connections.

- Allow 5 inches of space between the back and sides of the refrigerator, which allows the proper air circulation to cool the compressor.

Leveling the Refrigerator

It is important for the refrigerator to be level in order to function properly. You can raise or lower the refrigerator by rotating the adjustable leveling legs located at the bottom of the unit.

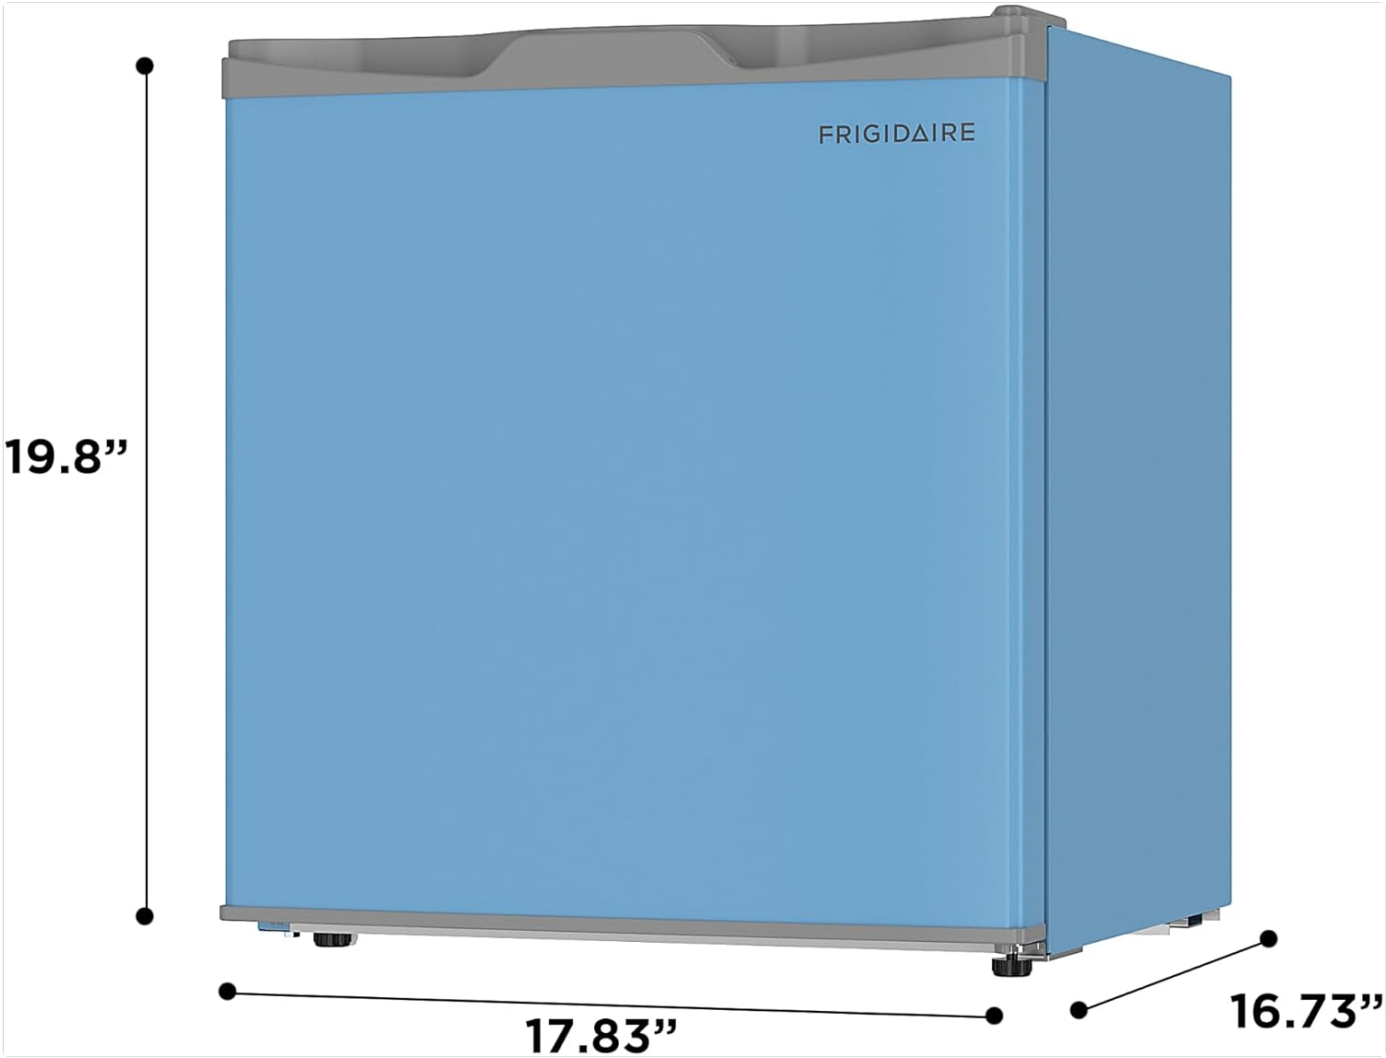


Image: Front view of the Frigidaire Mini Fridge with dimensions labeled. The fridge measures approximately 19.8 inches in height, 17.83 inches in width, and 16.73 inches in depth. This image helps in planning the placement of the appliance.

Door Reversal

The door can be reversed to open from either the left or right side to suit your installation needs. Refer to the detailed instructions in the full owner's manual for this procedure.



Image: Front view of the Frigidaire 1.6 cu. ft. Mini Fridge in Sea color. The Frigidaire logo is visible on the top right of the door. This shows the compact and sleek design of the appliance.

Operating Your Refrigerator

Temperature Control

Your refrigerator has one control for regulating the temperature. The temperature control is located on the upper right side of the interior compartment. The temperature range of the refrigerator is from "1" (warmest) to "7" (coldest). Adjust the temperature control to the setting that best suits your needs. A setting of "4" is generally recommended for normal operation.



Image: Interior view of the Frigidaire Mini Fridge. It shows the adjustable glass shelves, a small freezer compartment at the top, and a door basket designed to hold bottles and cans. The temperature control dial is visible in the upper right corner.

Removable Shelves

The refrigerator comes with removable shelves for flexible storage and easy cleaning. These shelves are spill-proof and can be slid out to prevent liquids from dripping onto items below.

Initial Operation

When you first plug in the unit, set the temperature control to "7" for at least 2 hours before placing food inside. This ensures the cabinet is thoroughly cooled before loading.

Maintenance

Cleaning Your Refrigerator

Interior Cleaning:

- Unplug the refrigerator.
- Wash the interior with a warm water and baking soda solution (2 tablespoons of baking soda to 1 quart of water).
- Wash removable parts with a mild detergent solution.
- Wipe dry all surfaces thoroughly after cleaning.

Exterior Cleaning:

- Wash the exterior with a mild detergent and warm water.
- Dry thoroughly with a soft cloth.

- Do not use harsh cleaners or abrasive materials.

Defrosting

This refrigerator features an automatic defrost system. However, a thin layer of frost may accumulate in the small freezer compartment. To manually defrost this section:

1. Remove all food items from the freezer compartment.
2. Unplug the refrigerator.
3. Leave the freezer door open to allow frost to melt naturally. Do not use sharp objects or heating devices to speed up defrosting.
4. Wipe away melted water and dry the compartment thoroughly before plugging the refrigerator back in.

Troubleshooting

Before calling for service, please check the following points:

Problem	Possible Cause	Solution
Refrigerator does not operate.	Not plugged in. Circuit breaker tripped/blown fuse. Temperature control set to "0" or "OFF".	Plug in appliance. Reset circuit breaker/replace fuse. Set temperature control to a higher setting.
Temperature inside is too warm.	Temperature control set too low. Door opened too frequently. Large amount of warm food added. Poor air circulation.	Adjust temperature control to a colder setting. Minimize door openings. Allow time for new food to cool. Ensure adequate space around the unit.
Refrigerator runs too frequently.	Room temperature is warmer than normal. Door opened too frequently. Door not closed completely. Door gasket not sealing properly.	This is normal in warmer environments. Minimize door openings. Ensure door is fully closed. Check door gasket for damage or obstructions.
Vibrations.	Refrigerator is not level. Unit touching wall or other objects.	Adjust leveling legs. Move refrigerator away from walls/objects.
Moisture forms on outside of refrigerator.	Humid weather. Door slightly open.	This is normal in humid conditions. Wipe surface dry. Ensure door is fully closed.



Image: Rear view of the Frigidaire Mini Fridge, showing the compressor unit at the bottom. This area requires adequate ventilation for proper operation and cooling efficiency.

Specifications

Feature	Detail
Brand	Frigidaire
Model Number	EFR1150BLU
Capacity	1.6 cubic feet
Product Dimensions (D x W x H)	52.1D x 47W x 52.1H centimetres (20.5D x 18.5W x 20.5H inches)
Item Weight	13.29 kg (29.3 lbs)
Colour	Sea
Configuration	Internal Freezer
Defrost System	Automatic
Voltage	110 volts
Annual Energy Consumption	300 kilowatt hours per year
Refrigerant	R-600A
Door Orientation	Reversible
Included Components	Fridge, Owner Manual, Parts, Accessories

Feature	Detail
UPC	058465807283

Warranty and Support

This Frigidaire appliance comes with a**1 Year Manufacturer Limited Warranty**. For warranty claims or technical support, please refer to the contact information provided in your product packaging or visit the official Frigidaire website.
Manufacturer Contact Information: Mississauga, ON L5S 2A4, CA
For further assistance, please contact Frigidaire customer service.

© 2026 Frigidaire. All rights reserved. This manual is for informational purposes only.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07PSW4XVW

More documents and user manuals: **https://manuals.plus/**