Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Breeze Bay HK-RE

Breeze Bay HD5 Ceiling Fan Remote Control Replacement User Manual

Model: HK-RE

Introduction

This manual provides instructions for the Breeze Bay HD5 Ceiling Fan Remote Control, a replacement transmitter designed for 3-speed ceiling fans. It allows for separate control of fan speed and light brightness. This package includes the remote control and a wall mount. A 9V battery and receiver are not included.





Image: Breeze Bay HD5 Ceiling Fan Remote Control with wall mount and mounting screws. The remote is white with black buttons for Light/Dimmer, LO, MED, HI, and FAN OFF. Two mounting screws are shown next to it.

Compatibility

This remote control is a replacement for various Hampton Bay remotes and is compatible with specific receivers. Ensure your original remote matches the models listed below or that your receiver is compatible.

- **Replaces remotes including:** FAN-HD, UC7078T, HD5, CHQ7078T, Standard-RR7079T.
- **Works with receivers:** FAN28R, UC7067FMRX.

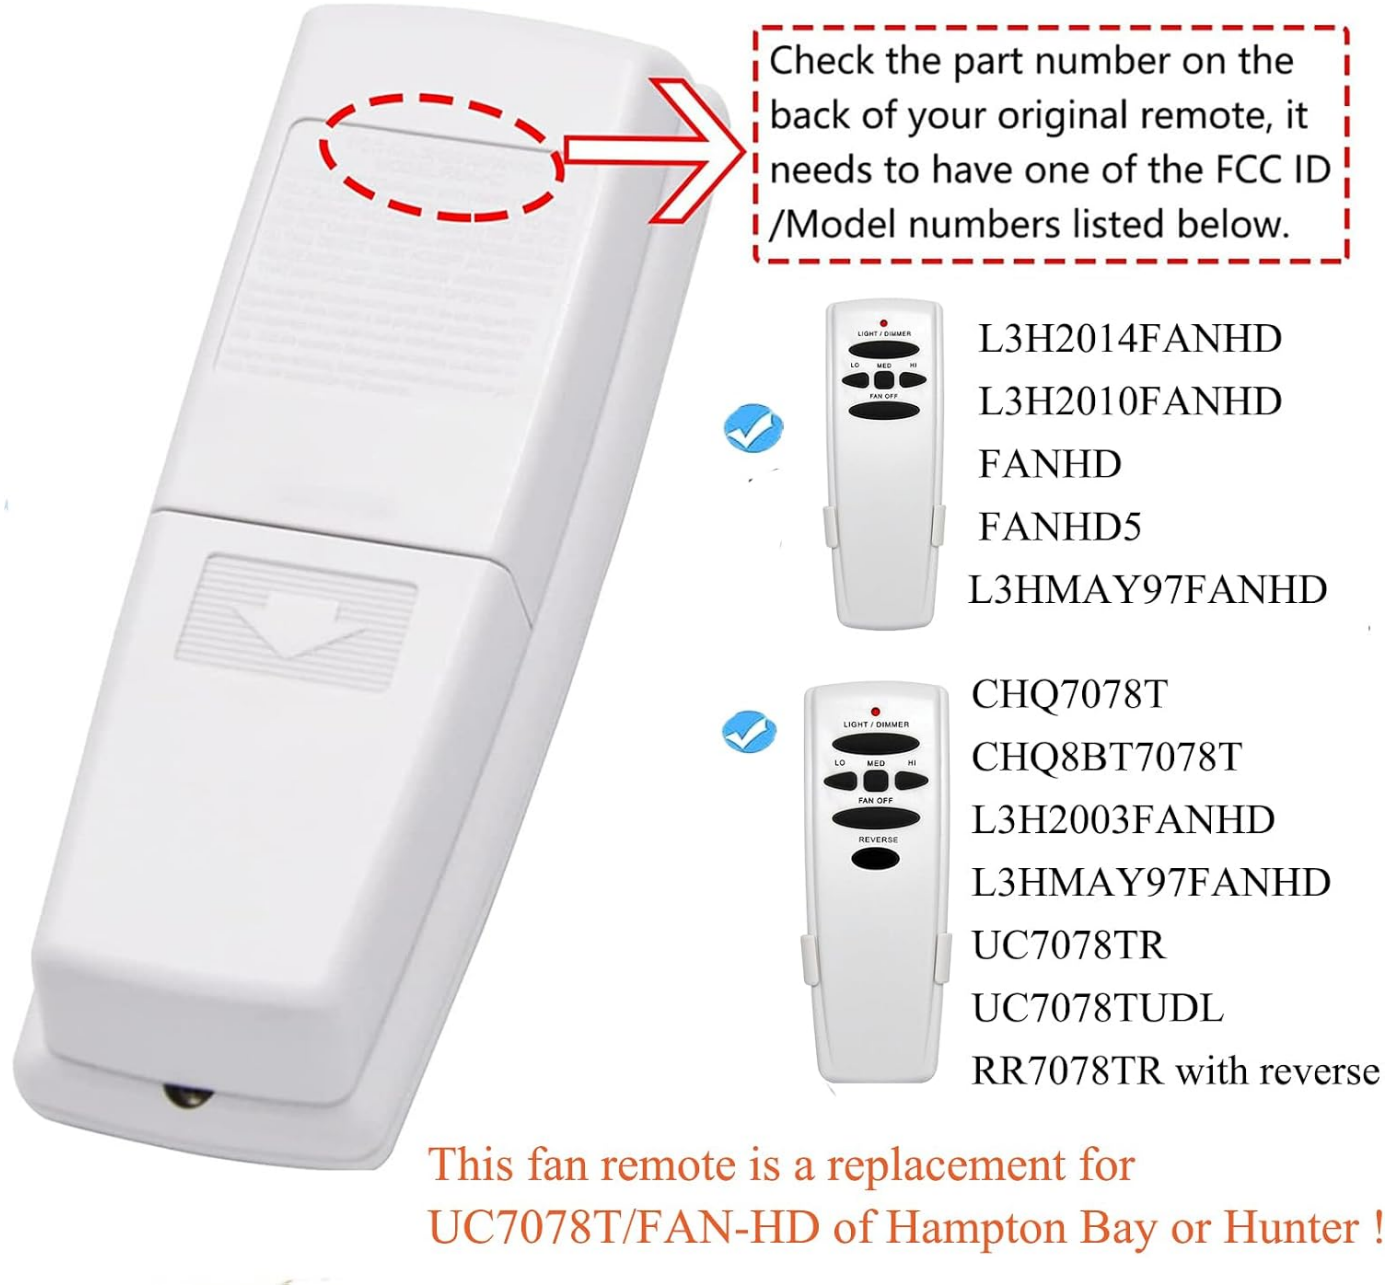


Image: Back view of the remote control, showing the battery compartment cover. An arrow points to a diagram indicating where to find model numbers on original remotes for compatibility verification, listing models such as L3H2014FANHD, FANHD, CHQ7078T, UC7078T.

Setup and Installation

1. Battery Installation

Open the battery compartment on the back of the remote control. Insert one 9V battery (not included), ensuring correct polarity. Close the battery compartment.

2. Matching DIP Switches

The remote control operates by matching its frequency combination (DIP switch pattern) with that of your ceiling fan's receiver. This is a critical step for proper function.

1. Locate the DIP switches on your existing remote control or directly on the ceiling fan's receiver unit. These are typically a series of small switches (usually 4) that can be set to 'ON' or 'OFF' positions.
2. Open the battery compartment of your new Breeze Bay HD5 remote control to access its DIP switches.
3. Carefully set the DIP switches on the new remote control to exactly match the pattern of your original remote or receiver.

HOW TO USE?

Just set the DIP switch pattern of new remote control to be the same as the DIP switch pattern of the original remote control.

Make sure your original remote has the same DIP switch.

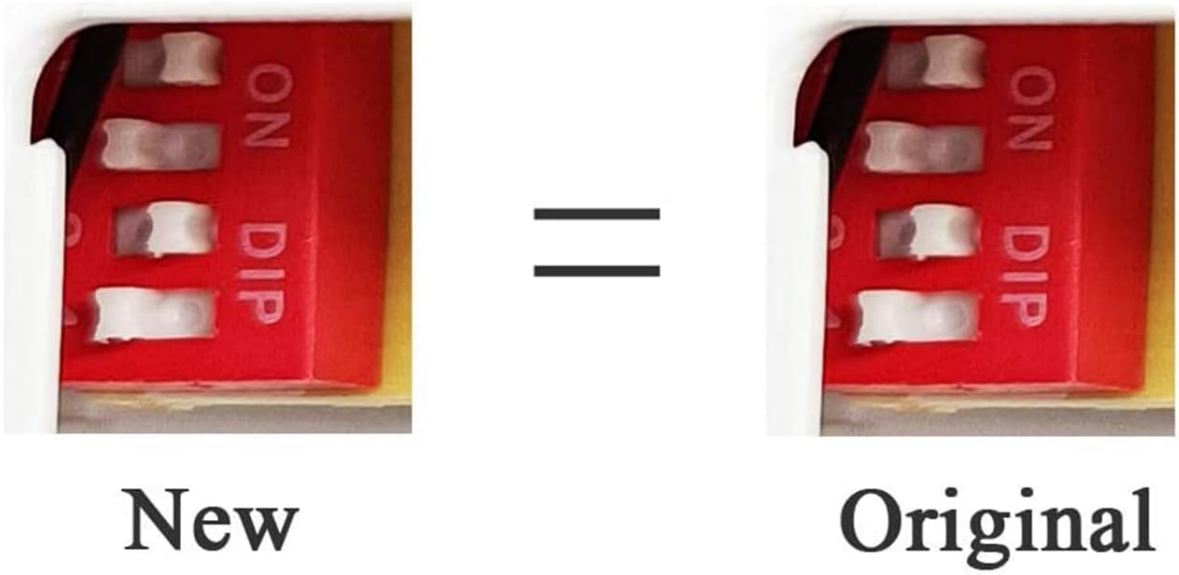


Image: Close-up comparison of two sets of DIP switches. Both sets show four switches in identical 'ON' or 'OFF' positions, labeled 'New' and 'Original', with an equals sign between them, illustrating the matching process.

3. Wall Mount Installation

The included wall mount allows for convenient storage of your remote control. Use the provided screws to secure the wall mount to a desired location.



Image: Small image of a white plastic wall mount bracket, designed to hold the remote control.

Operating Instructions

Once the DIP switches are matched and the battery is installed, the remote control is ready for use.

- **Fan Speed Control:** Use the 'HI', 'MED', and 'LO' buttons to adjust the fan speed. Press 'FAN OFF' to turn the fan off.
- **Light Control:** The 'LIGHT / DIMMER' button controls the light.

- Press once to turn the light ON or OFF.
- Press and hold the 'LIGHT / DIMMER' button to adjust the brightness (dimmer function). This function is compatible with dimmable LED, dimmable CFL, halogen, and incandescent bulbs only.
- For non-dimmable LED or CFL bulbs, the 'LIGHT / DIMMER' button will only control ON/OFF functionality.



Image: A hand holding the white Breeze Bay HD5 remote control, pointing towards a ceiling fan with lights in a well-lit room.

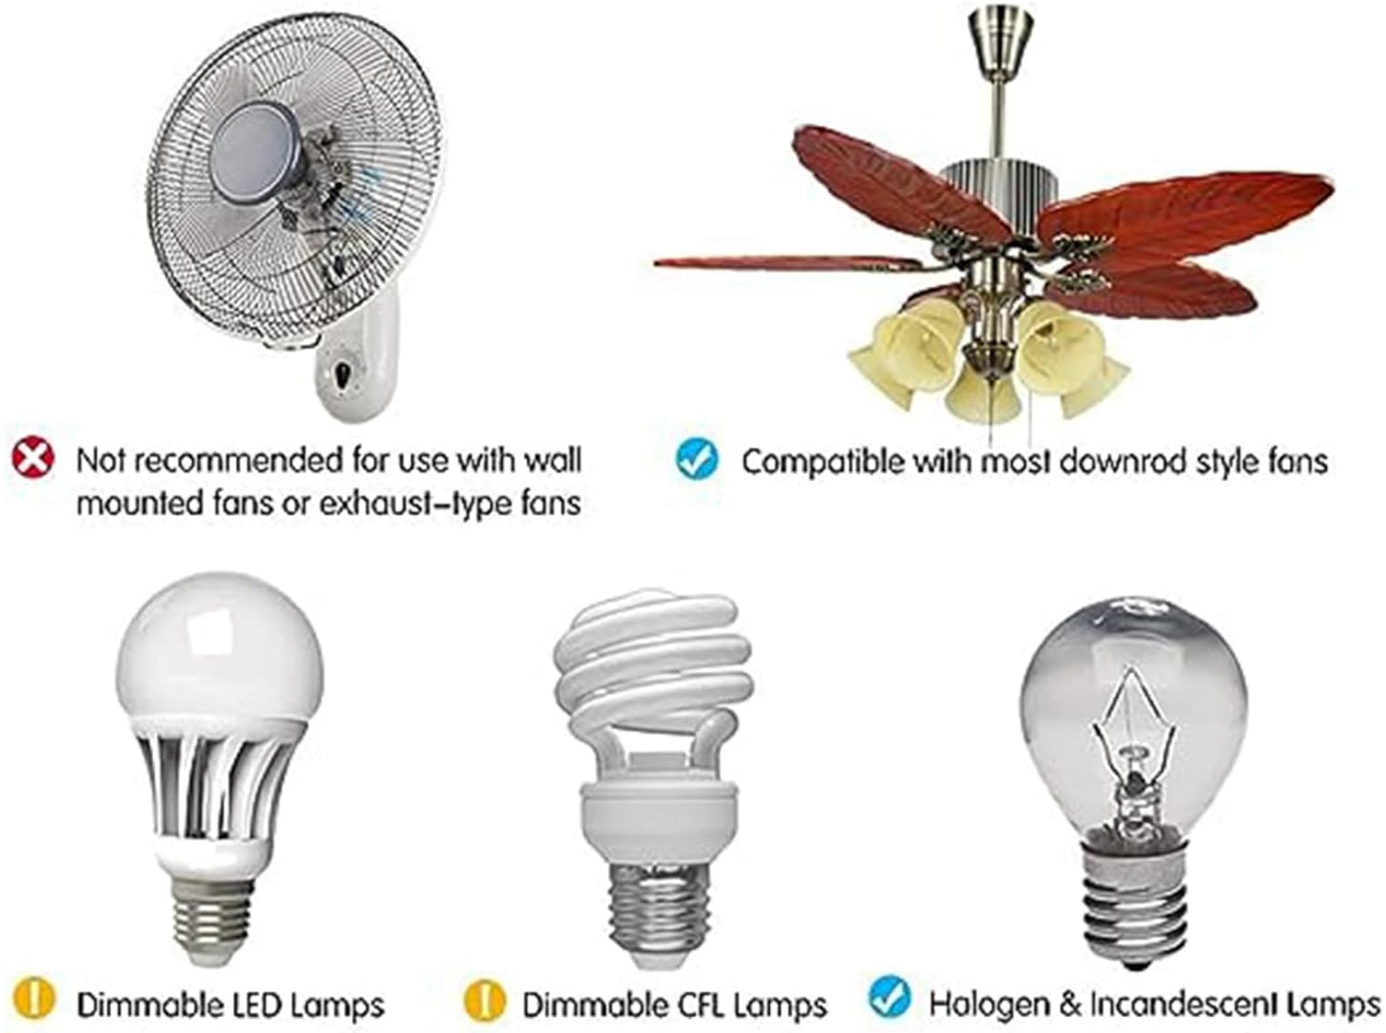


Image: A diagram showing a downrod style ceiling fan as compatible, and a wall-mounted fan as incompatible. Below, three light bulb types are shown: a dimmable LED lamp, a dimmable CFL lamp, and a halogen/incandescent lamp, indicating compatibility with the dimmer function for these types.

Troubleshooting

- **Remote not responding:**
  - Check if the 9V battery is installed correctly and has sufficient power. Replace if necessary.
  - Verify that the DIP switches on the remote control precisely match the settings on your ceiling fan's receiver.
  - Ensure the remote is within the operating range (up to 75 feet).
- **Light dimmer function not working:**
  - Confirm that your light bulbs are explicitly labeled as 'dimmable'. Non-dimmable LED or CFL bulbs will only support ON/OFF functionality.
- **Fan operates but light does not, or vice versa:**
  - Re-check the DIP switch settings. An incorrect match can sometimes lead to partial functionality.
  - Ensure the receiver unit in the fan is functioning correctly. This remote is a transmitter only.

Specifications

Feature	Detail
Product Dimensions	5.12 x 2.36 x 1.38 inches
Item Weight	2.65 ounces
Item Model Number	HK-RE
Batteries Required	1 x 9V battery (not included)
Connectivity Technology	Radio Frequency
Compatible Devices	3-speed AC Ceiling Fan with dimmer
Max Number of Supported Devices	1



Image: A diagram showing the Breeze Bay HD5 remote control with its dimensions labeled: 5.59 inches in length, 2.16 inches in width, and 1.18 inches in thickness.

For further assistance, please refer to your ceiling fan's original manual or contact the manufacturer of your ceiling fan system.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07PTQ1WM6

More documents and user manuals: **https://manuals.plus/**