ZdalaMit EN3139S

ZdalaMit EN3139S Replacement Remote Control User Manual

For Sharp TV Models

1. Introduction

This user manual provides comprehensive instructions for the setup, operation, and maintenance of your new ZdalaMit EN3139S replacement remote control. This remote is designed to be compatible with various Sharp TV models, offering a direct replacement experience without the need for complex programming. Please read this manual thoroughly to ensure optimal use of your remote control.

2. Product Overview

The ZdalaMit EN3139S is a pre-programmed replacement remote control for Sharp 4K UHD HDR Smart TVs. It replicates the functionality of your original remote, providing access to all essential TV functions and dedicated app buttons.



Figure 1: Front view of the ZdalaMit EN3139S replacement remote control, showing all buttons including power, input, number pad, volume, channel, navigation, and dedicated app buttons for VUDU, Netflix, YouTube, and Amazon.



Figure 2: Angled view of the remote control, highlighting its ergonomic design and button layout.

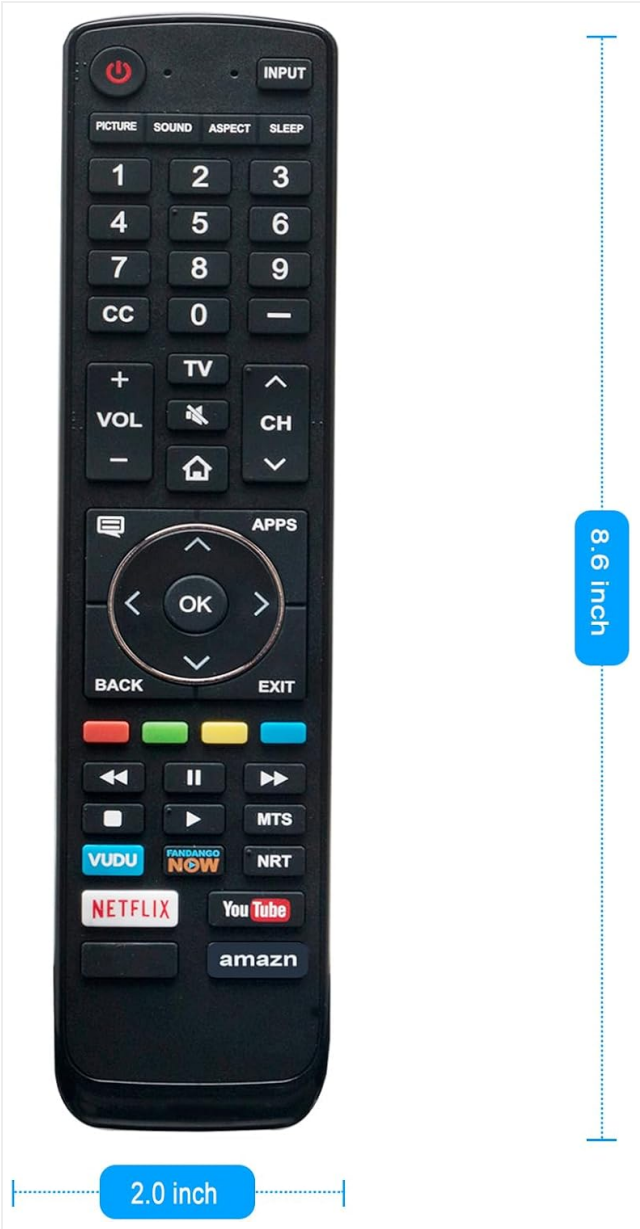


Figure 3: The remote control displaying its approximate dimensions: 8.6 inches in length and 2.0 inches in width.



Figure 4: A hand holding the remote control, demonstrating its use with a Sharp TV in a living room setting, indicating signal transmission.

3. Setup

3.1 Battery Installation

The remote control requires two (2) AAA alkaline batteries for operation. Batteries are not included with the remote.

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two new AAA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Close the battery compartment cover securely.

Once batteries are installed, the remote is ready for use without any additional programming or pairing.

4. Operating Instructions

The ZdalaMit EN3139S remote control is designed for immediate use with compatible Sharp TV models. No programming or pairing is required. Simply point the remote at your TV and press the desired button.

4.1 Basic Functions

- **Power (●)**: Turns the TV on or off.
- **INPUT**: Cycles through available input sources (HDMI, AV, etc.).
- **Number Buttons (0-9)**: Directly select channels.
- **VOL (+/-)**: Adjusts the volume level.
- **CH (▲/▼)**: Changes channels up or down.
- **Mute ( )**: Mutes or unmutes the TV audio.
- **Navigation Pad (◀ ▲ ▶ ▼) & OK**: Navigates menus and confirms selections.
- **BACK**: Returns to the previous menu or screen.
- **EXIT**: Exits the current menu or application.
- **APPS**: Accesses the smart TV applications menu.
- **Dedicated App Buttons**: Direct access to VUDU, PANDANGO NOW, Netflix, YouTube, and Amazon applications.

5. Maintenance

To ensure the longevity and proper functioning of your remote control, follow these maintenance guidelines:

- **Cleaning**: Wipe the remote with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials.
- **Battery Replacement**: Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones.
- **Storage**: If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage. Store in a cool, dry place.
- **Avoid Damage**: Do not drop the remote, expose it to extreme temperatures, or immerse it in water.

6. Troubleshooting

If you encounter issues with your remote control, please refer to the following common solutions:

- **Remote not responding**: Ensure the batteries are inserted correctly with the correct polarity (+/-). Replace old batteries with new AAA alkaline batteries.
- **TV not turning on/off**: Check if there is a clear line of sight between the remote and the TV's infrared sensor. Remove any obstructions.
- **Specific buttons not working**: Clean the remote's surface and ensure no debris is lodged around the buttons. If the issue persists, try replacing the batteries.
- **Remote works but TV functions are erratic**: In some rare cases, a TV reset may resolve communication issues. Refer to your Sharp TV's user manual for instructions on how to perform a factory reset, if necessary.

7. Specifications

Feature	Detail
Model Number	EN3139S (Internal: GSS2193)
Brand	ZdalaMit
Compatible Devices	Sharp Televisions (various models including LC-55P6000U, LC-65P6000U, LC-50P7000U, LC-55P7000U, LC-65P7000U, LC-50P8000U, LC-55P8000U, LC-65P8000U, LC-43N7002U, LC-50N7002U, LC-55N7002U, LC-50N8002U)
Power Supply	2 x 1.5V AAA Alkaline Batteries
Product Dimensions	7 x 2 x 0.6 inches (approximately 17.8 x 5.1 x 1.5 cm)
Item Weight	1.76 ounces (approximately 50 grams)
Special Feature	Pre-programmed, no setup required

8. Customer Support

For any questions, concerns, or assistance regarding your ZdalaMit EN3139S replacement remote control, please do not hesitate to contact our customer support. We are committed to providing helpful and timely solutions.
Please refer to your purchase documentation or the seller's contact information for specific support channels.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question