Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

TELESIN GP-BCG-701

TELESIN Allin Box Charger & SD Card Reader Kit User Manual

Model: GP-BCG-701

Introduction

The TELESIN Allin Box is a multi-functional accessory designed for GoPro Hero 5, Hero 6, and Hero 7 Black cameras. It serves three primary functions: a triple battery charger, an SD card reader, and a protective storage case for up to three batteries and three SD cards. This manual provides detailed instructions for its proper use and maintenance.



Image: The TELESIN Allin Box highlighting its capabilities as a charger, card reader, and storage solution.

Product Overview and Package Contents

The Allin Box is designed for portability and durability, featuring an impact-resistant PC inner shell and a food-grade silicone outer case. It includes slots for three GoPro batteries and three Micro SD cards.



Image: The TELESIN Allin Box in an open state, revealing the battery charging slots and Micro SD card storage in the lid. A USB-C charging cable is also shown.

Package Contents:

- TELESIN Allin Box Charger
- USB-C Charging Cable
- User Manual (this document)



Image: Visual representation of the TELESIN Allin Box package contents, showing the main unit, USB cable, and product packaging.

Setup

Before first use, ensure the Allin Box is fully charged or connected to a power source.

1. **Insert Batteries:** Open the Allin Box and carefully insert up to three compatible GoPro Hero 5/6/7 batteries into the designated slots. Ensure they are oriented correctly.
2. **Insert SD Cards (Optional):** For storage or data transfer, insert Micro SD cards into the TF card slots located on the inside of the lid.
3. **Connect to Power:** Use the provided USB-C cable to connect the Allin Box to a USB power source (e.g., USB wall adapter, power bank, computer USB port).

Operating Instructions

1. Charging Batteries

The Allin Box can charge up to three batteries simultaneously and independently.

- Insert batteries into the slots.
- Connect the Allin Box to a power source using the USB-C cable.
- The smart LED indicators on the front of the box will display the charging status for each battery:
  - **Red Light:** Battery is charging.
  - **Green Light:** Battery is fully charged.
  - **Blue Light:** Power is connected, but no battery is inserted or charging.
- Charging typically takes approximately 2 hours for a full charge.



Image: The Allin Box illustrating the charging process with LED indicators and built-in safety features such as over-discharge, short-circuit, over-voltage, over-charge, and over-current protection.

Multiple Charging Options:

The Allin Box can be powered from various USB sources:

- USB Wall Charger
- Mobile Power Bank

- Laptop/Computer USB Port
- Car Charger



Image: Diagram showing the versatility of the Allin Box, capable of charging from multiple USB power sources.

2. Using as an SD Card Reader

The Allin Box features a USB 3.0 compatible Micro SD card reader for fast data transfer.

1. Insert a Micro SD card into the dedicated slot inside the Allin Box.
2. Connect the Allin Box to a computer using the provided USB-C cable.
3. The computer will recognize the Allin Box as an external drive, allowing you to access and transfer files from the Micro SD card.

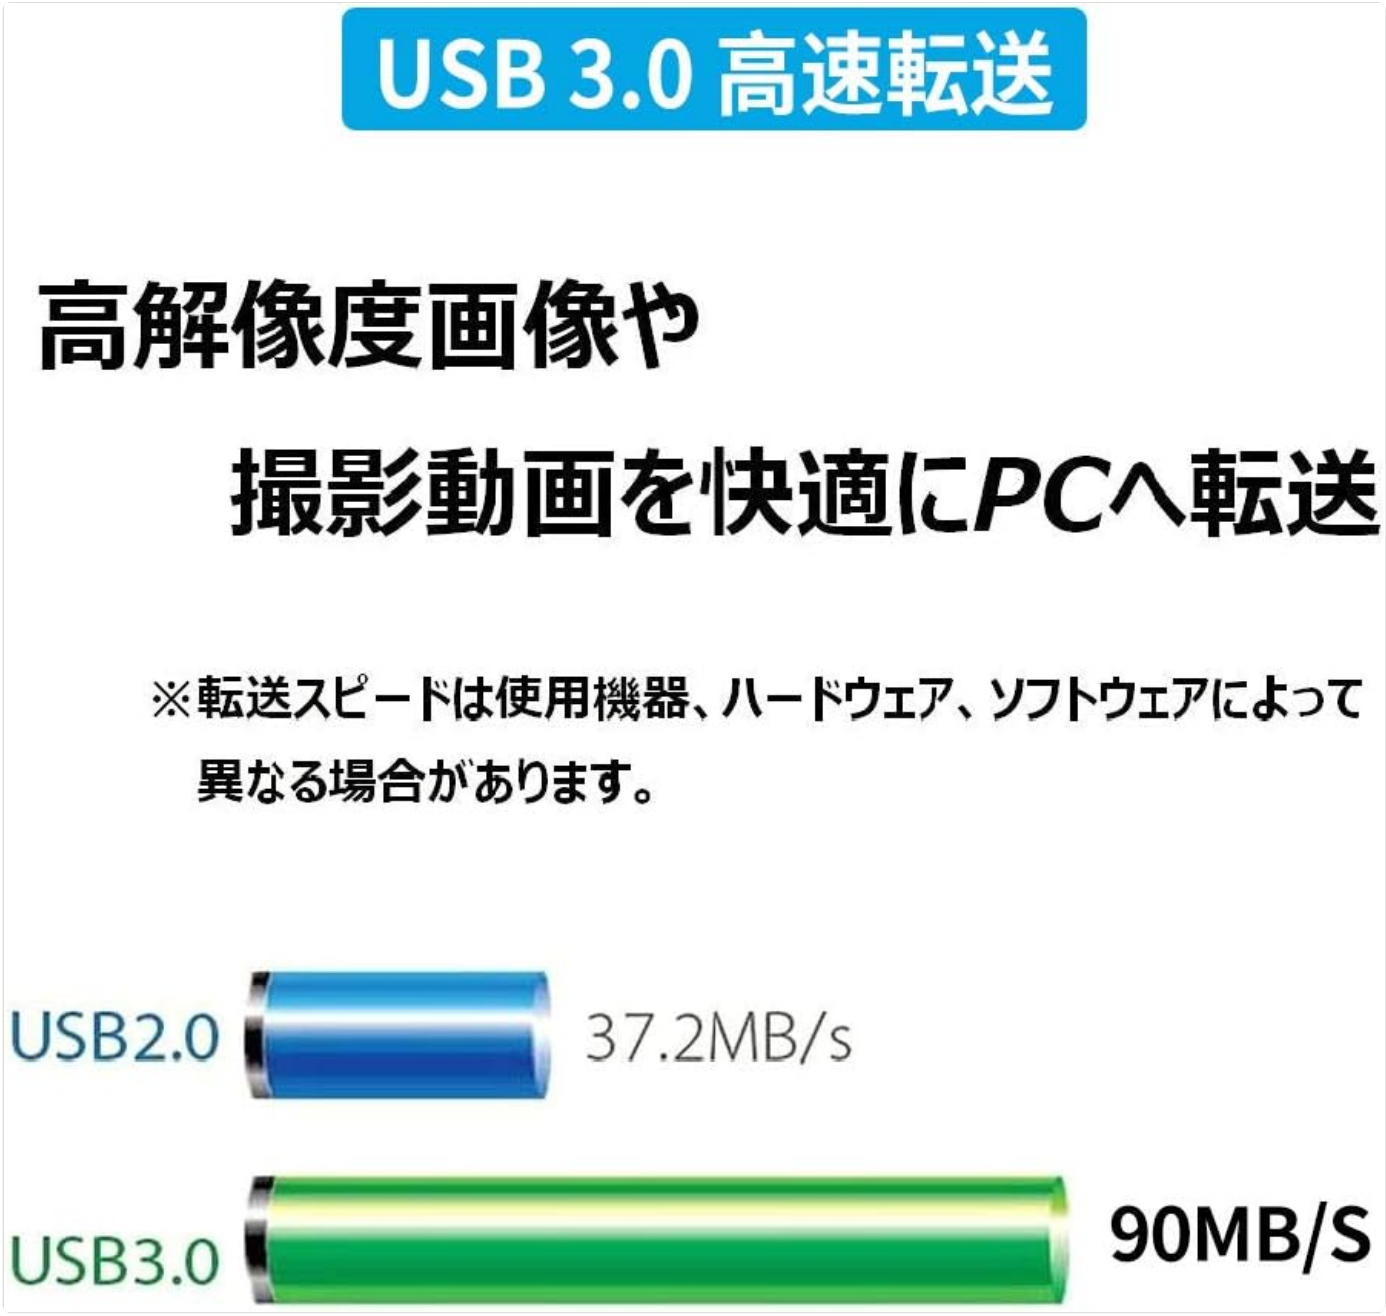


Image: Illustration demonstrating the high-speed data transfer capabilities of USB 3.0, ideal for large photo and video files.

3. Storage Case Function

The Allin Box provides secure storage for your GoPro batteries and Micro SD cards.

- Place up to three GoPro Hero 5/6/7 batteries in the battery slots.
- Place up to three Micro SD cards in the TF card slots located in the lid.
- Close the lid securely to protect the contents from dust, splashes, and minor impacts.

Maintenance

- **Cleaning:** Wipe the exterior of the Allin Box with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- **Water Resistance:** The Allin Box has an IP54 waterproof rating, protecting it from splashes and light rain. It is not designed for submersion. Ensure the lid is securely closed to maintain water resistance.
- **Storage:** Store the Allin Box in a cool, dry place away from direct sunlight and extreme temperatures when not in use.

Troubleshooting

- **Batteries not charging:**
  - Ensure the USB-C cable is securely connected to both the Allin Box and the power source.
  - Verify the power source is active and providing sufficient power.
  - Check if the batteries are inserted correctly and are compatible with GoPro Hero 5/6/7.
  - Observe the LED indicators; a red light indicates charging, green indicates fully charged. If no light, check connections.
- **SD card not recognized by computer:**
  - Ensure the Micro SD card is fully inserted into the TF card slot.
  - Verify the USB-C cable is properly connected between the Allin Box and the computer.
  - Try connecting to a different USB port on your computer.
  - Test the Micro SD card in another device to confirm it is functional.
- **Lid does not close securely:**
  - Check for any obstructions preventing the lid from closing properly.
  - Ensure batteries and SD cards are correctly seated and not protruding.

Specifications

Brand Name	TELESIN
Model Number	GP-BCG-701
Compatible Batteries	GoPro Hero 5, Hero 6, Hero 7 Black
Functions	Triple Battery Charger, SD Card Reader, Storage Case
Waterproof Rating	IP54 (Splash-proof)
Data Transfer Speed	USB 3.0 (up to 5Gbps)
Material	Impact-resistant PC (inner), Food-grade Silicone (outer)
Item Weight	Approximately 10.6 ounces
Package Dimensions	5.43 x 3.82 x 3.27 inches

Warranty and Support

TELESIN products are manufactured with high-quality standards. This product comes with a 6-month warranty from the date of purchase, covering manufacturing defects.

- **Warranty Period:** 6 months from the date of purchase.
- **Coverage:** Manufacturing defects.
- **Claim Process:** In case of a defect, please contact TELESIN customer support with your proof of purchase.



Image: Visual representation of the 6-month product warranty and available customer support.

Customer Support:

For any questions regarding product usage, delivery, or other inquiries, please refer to the official TELESIN website or contact their customer service directly. Contact information can typically be found on the product packaging or the official TELESIN website.

Note: Warranty is valid only for products purchased from authorized TELESIN retailers.

© 2024 TELESIN. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07Q3HV3SS

More documents and user manuals: **https://manuals.plus/**