Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

EMKE TR1040A-NEW

EMKE Bathroom Radiator Towel Dryer TR1040A-NEW (40 x 100 cm Anthracite) - Instruction Manual

1. Introduction

This manual provides comprehensive guidance for the safe installation, efficient operation, and proper maintenance of your EMKE Bathroom Radiator Towel Dryer, model TR1040A-NEW. Please read these instructions carefully before installation and use, and retain them for future reference.

The EMKE Bathroom Radiator is designed to provide warmth to your bathroom space and efficiently dry towels. It features a durable anthracite finish and is constructed from high-quality steel, ensuring long-lasting performance and aesthetic appeal.



Figure 1: EMKE Bathroom Radiator Towel Dryer, 40 x 100 cm Anthracite, installed in a bathroom setting.

2. Safety Information

- **Professional Installation Recommended:** For optimal safety and performance, installation should be carried out by a qualified professional.
- **Water System Compatibility:** Ensure your heating system is compatible with a hot water radiator.
- **Pressure Testing:** After installation, the system must be pressure tested to check for leaks.
- **Hot Surface Warning:** The radiator surface will become hot during operation. Avoid prolonged contact to prevent burns. Keep children and pets away.
- **Ventilation:** Ensure adequate ventilation in the room where the radiator is installed.
- **Cleaning:** Disconnect from the heating system and allow to cool completely before cleaning. Use only mild cleaning agents.

3. Package Contents

Please check that all components are present and undamaged before proceeding with installation. If any parts are missing or damaged, contact EMKE customer support.

- 1 x EMKE Bathroom Radiator Towel Dryer
- 1 x Mounting Kit (includes blind plugs, long screws, rubber rings, small screws)
- 1 x Assembly Manual (German, please refer to this document for English instructions)



Figure 2: Illustration of included accessories and multi-layer packaging.

4. Setup and Installation

The EMKE Bathroom Radiator is designed for straightforward installation. However, due to the nature of plumbing and heating systems, professional installation is highly recommended.

4.1 Connection Options

The radiator offers flexible connection options. In addition to the central connection, the ends of the towel dryer can also be used as water inlet and outlet points. Please note that valves are not included and must be purchased separately based on your specific installation requirements.



Figure 3: Radiator connection options: Side connection and Central connection. Valves are sold separately.

- **Connection Thread:** G1/2"
- **Connection Dimensions:** 50 mm

4.2 Wall Mounting

The radiator's wall distance is adjustable, allowing for flexibility during installation to suit your bathroom layout.



Figure 4: Adjustable wall distance for the radiator, typically between 90-105 mm from the wall to the outer surface.

- **Adjustable Wall Distance:** 90-105 mm (from wall to outer surface of radiator)

Refer to the detailed technical drawing for precise measurements and mounting points.

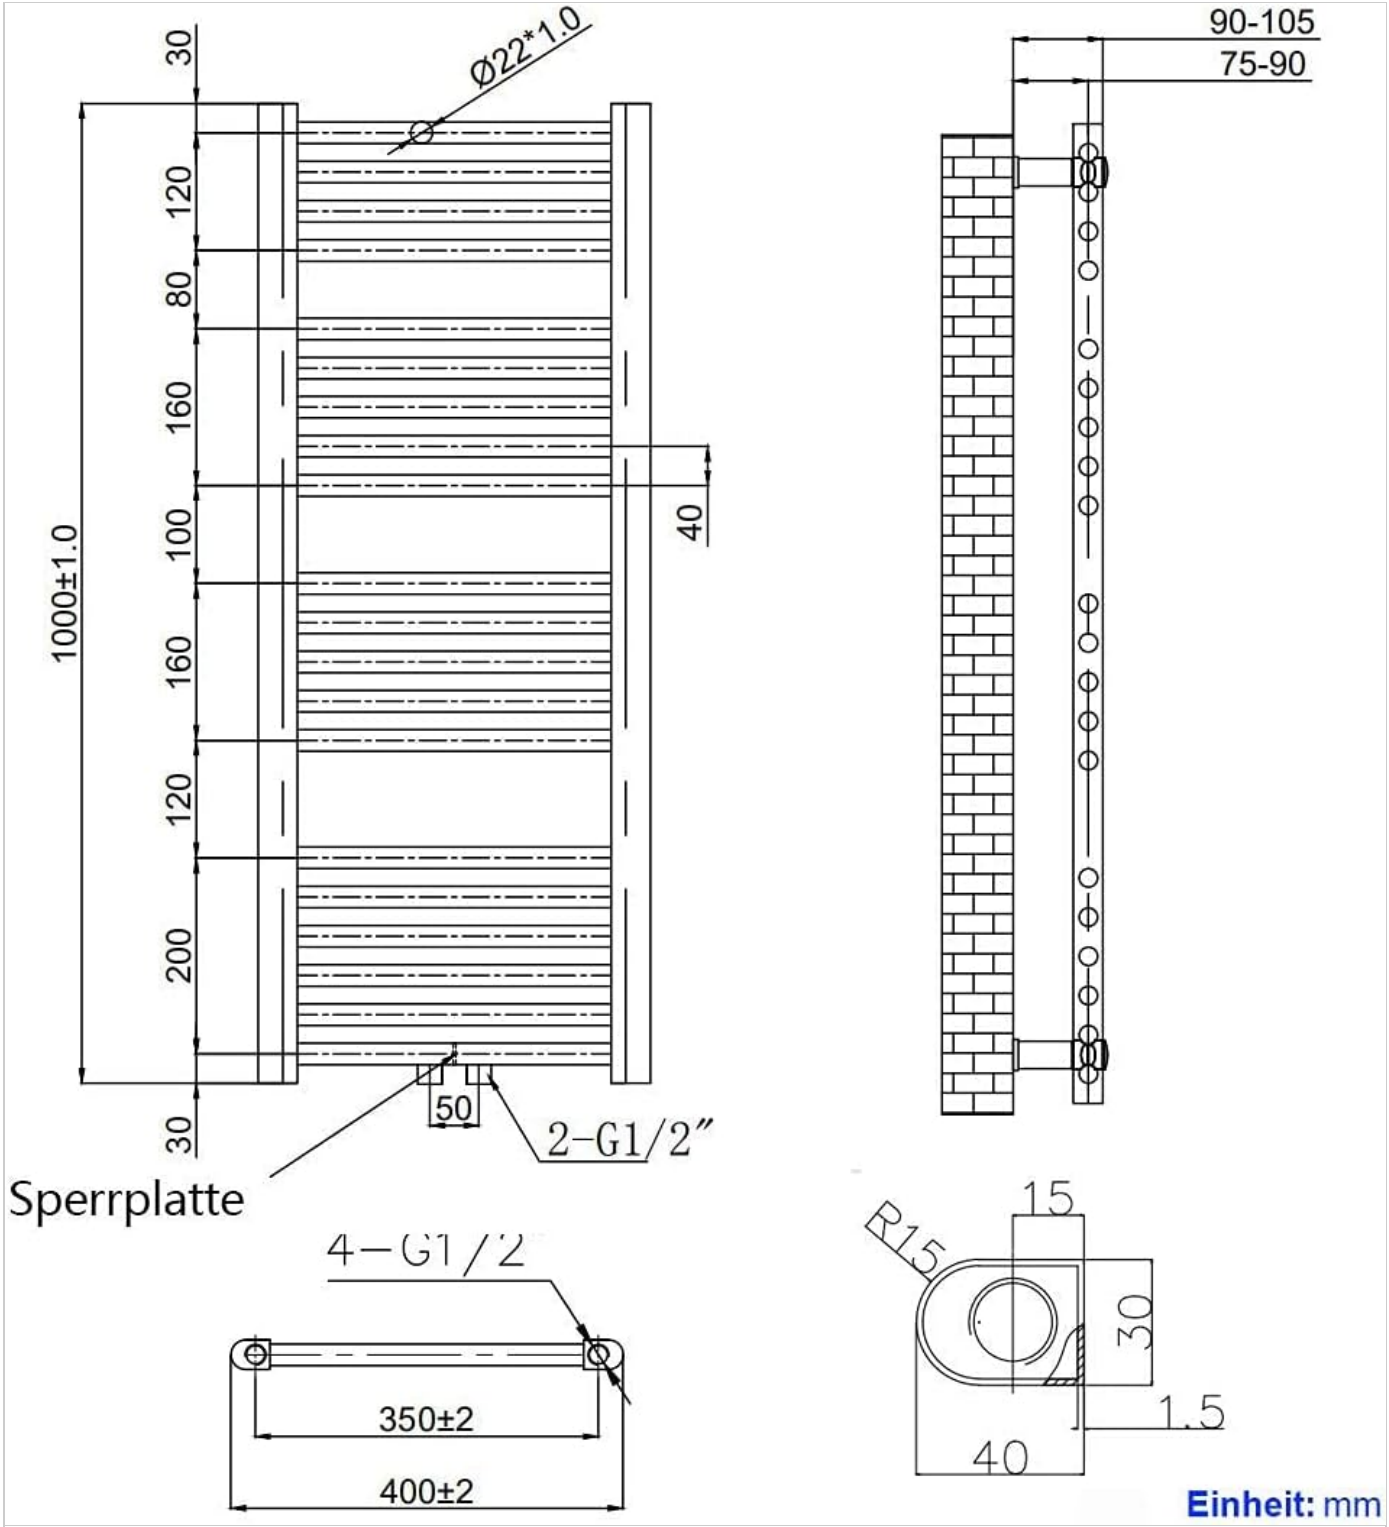


Figure 5: Technical drawing with detailed dimensions for installation.

5. Operating Instructions

The EMKE Bathroom Radiator operates as part of your hot water central heating system. Once installed and connected, it will heat up when your central heating is active.

- **Heat Distribution:** The radiator is constructed from high-quality steel, ensuring uniform and efficient heat distribution throughout the room.
- **Towel Drying:** The design allows for towels to be hung and dried quickly and effectively, contributing to a warm and dry bathroom environment.
- **Recommended Water Temperatures:**

- Inlet Water Temperature: 75 °C
- Outlet Water Temperature: 55 °C



Figure 6: Overlapping technology for enhanced heat dissipation.



Figure 7: The radiator's versatile application in different living spaces.

6. Maintenance

Regular maintenance ensures the longevity and optimal performance of your EMKE Bathroom Radiator.

- **Cleaning:**
  - Ensure the radiator is cool before cleaning.
  - Wipe the surface with a soft, damp cloth.
  - Use only mild, non-abrasive cleaning agents. Avoid harsh chemicals or abrasive pads, which can damage the finish.
  - The environmentally friendly coating helps prevent rust and leaks, making cleaning easier.
- **Inspections:** Periodically check all connections for any signs of leaks or corrosion. Address any issues promptly.
- **Bleeding:** If you notice cold spots on your radiator or hear gurgling noises, it may need bleeding to release trapped air. Consult a professional if you are unsure how to perform this task.



Figure 8: High-quality SPCC steel with an environmentally friendly coating for durability.

7. Troubleshooting

This section addresses common issues you might encounter with your radiator. For complex problems, always consult a qualified heating engineer.

Problem	Possible Cause	Solution
Radiator is cold or only partially warm.	Trapped air in the system.	Bleed the radiator to release air. Ensure the heating system is on and the pump is running.

Problem	Possible Cause	Solution
Radiator is not heating at all.	Thermostatic Radiator Valve (TRV) is closed or faulty. Central heating system is off or faulty.	Check if the TRV is open. Ensure your central heating system is operational. Consult a heating engineer if the issue persists.
Water leaks from connections.	Loose connections or faulty seals.	Tighten connections carefully. If leaks persist, replace seals or consult a professional. Turn off the water supply to the radiator immediately.
Unusual noises (e.g., banging, whistling).	Air in the system, water pressure issues, or pipework problems.	Bleed the radiator. Check system pressure. If noises continue, contact a heating engineer.

8. Specifications

Feature	Detail
Brand	EMKE
Model Number	TR1040A-NEW
Dimensions (H x W)	1000 x 400 mm (100 x 40 cm)
Product Dimensions (L x W x H)	100 x 40 x 3 cm
Weight	6.6 kg
Power Output	356 W
Energy Type	Hot Water
Applicable Area	3 square meters
Connection Thread	G1/2"
Connection Dimensions	50 mm
Wall Distance (adjustable)	90-105 mm
Recommended Inlet Water Temp.	75 °C
Recommended Outlet Water Temp.	55 °C
Material	High-quality Steel (SPCC Steel)
Color	Anthracite
Compliance	EN442 Standard
Components Included	Towel dryer, mounting kit, assembly manual

9. Warranty and Support

EMKE is committed to providing high-quality products and excellent customer service.

- **Return Policy:** We offer a 14-day return policy. Please refer to your purchase documentation for specific terms and conditions.
- **Repair Service:** A 2-year repair service is provided for this product. For service requests, please contact EMKE customer support with your proof of purchase.
- **Customer Satisfaction:** Our high customer satisfaction rate reflects our dedication to reliability and product quality.

For further assistance or inquiries, please visit the official EMKE website or contact your retailer.

© 2025 EMKE. All rights reserved. Information in this manual is subject to change without notice.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07Q625QTS

More documents and user manuals: **https://manuals.plus/**