Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Energizer EPMHH32E

Energizer Vision HD Compact Metal Flashlight

Model: EPMHH32E

Brand: Energizer

1. Introduction

This manual provides essential information for the safe and effective operation of your Energizer Vision HD Compact Metal Flashlight, Model EPMHH32E. Please read thoroughly before use and retain for future reference.

2. Safety Information

BATTERY WARNING:

- Keep batteries away from children. If swallowed, promptly seek medical attention. Contact a doctor immediately or call 800-498-8666.
- Do not install batteries backwards, charge, put in fire, or mix with used or other battery types. This may cause explosion or leakage, resulting in injury.
- Replace all batteries at the same time.

3. Product Overview

The Energizer Vision HD Compact Metal Flashlight is a durable and powerful lighting tool designed for various uses, from household tasks to outdoor activities. Its robust construction and multiple light modes ensure reliability.

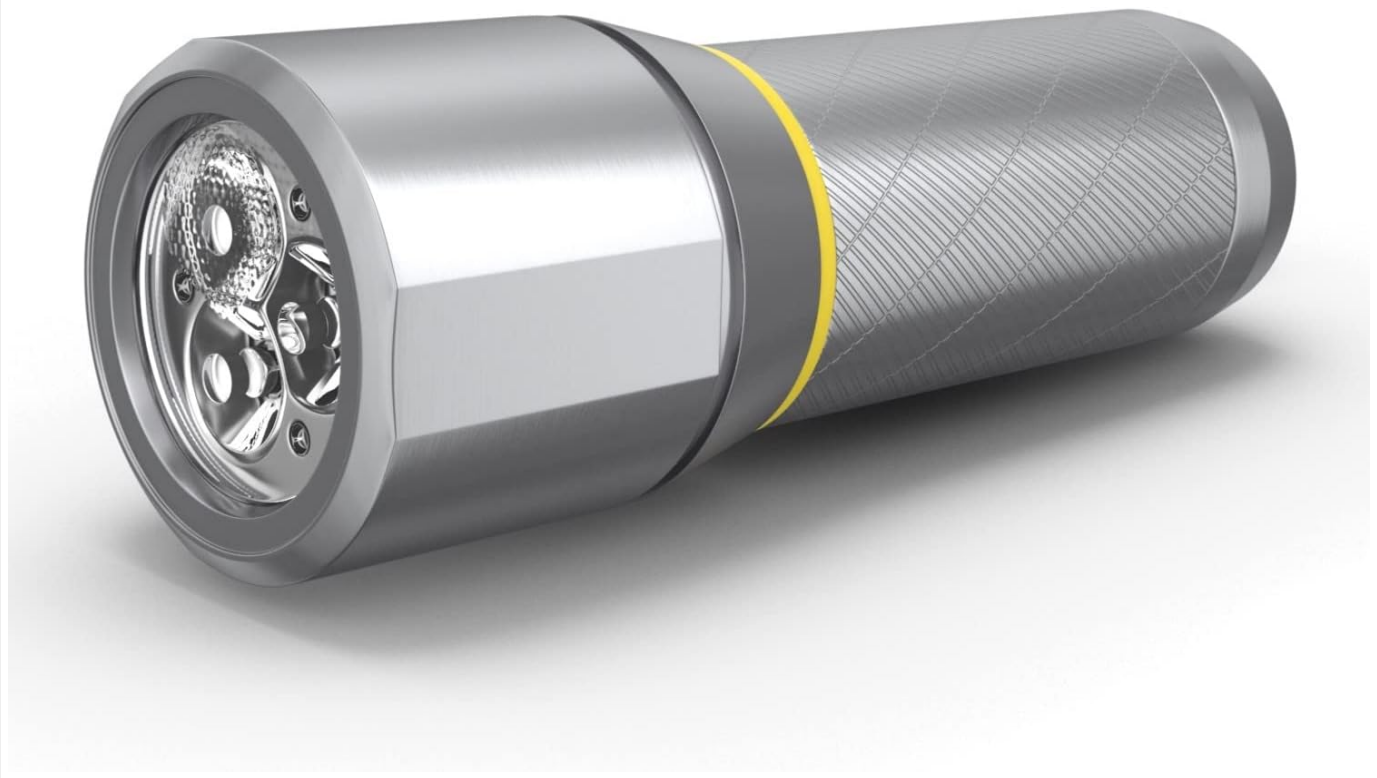

Figure 1: Energizer Vision HD Compact Metal Flashlight

Key Features:

- **High Brightness:** Up to 270 lumens, reaching a beam distance of 84 meters.
- **Durable Construction:** Crafted from aircraft-grade aluminum for enhanced durability.
- **Water-Resistant:** IPX4 rated, providing protection against splashing water.
- **Multiple Light Modes:** Features High, Low, and Strobe light settings.
- **Compact Design:** Convenient for storage and easy handling.

4. Setup

Battery Installation

The Energizer Vision HD Compact Metal Flashlight operates on 3 AAA alkaline batteries (included). To install or replace batteries:

1. Unscrew the tail cap of the flashlight by turning it counter-clockwise.
2. Remove the old batteries or insert 3 new AAA batteries into the battery holder. Ensure the positive (+) and negative (-) ends align correctly with the markings inside the holder.
3. Carefully slide the battery holder with batteries into the flashlight body.
4. Screw the tail cap back on clockwise until it is securely tightened. This ensures proper contact and maintains water resistance.

Figure 2: Battery compartment for 3 AAA batteries

5. Operating Instructions

Power On/Off and Mode Selection

The flashlight features a single button for power control and mode selection:

- **First Press:** Activates **High Mode** (270 lumens).
- **Second Press:** Switches to **Low Mode** (Energy Saver).
- **Third Press:** Activates **Strobe Mode**.
- **Fourth Press:** Turns the flashlight **Off**.
- To activate Strobe mode directly, hold the power button for 2 seconds.

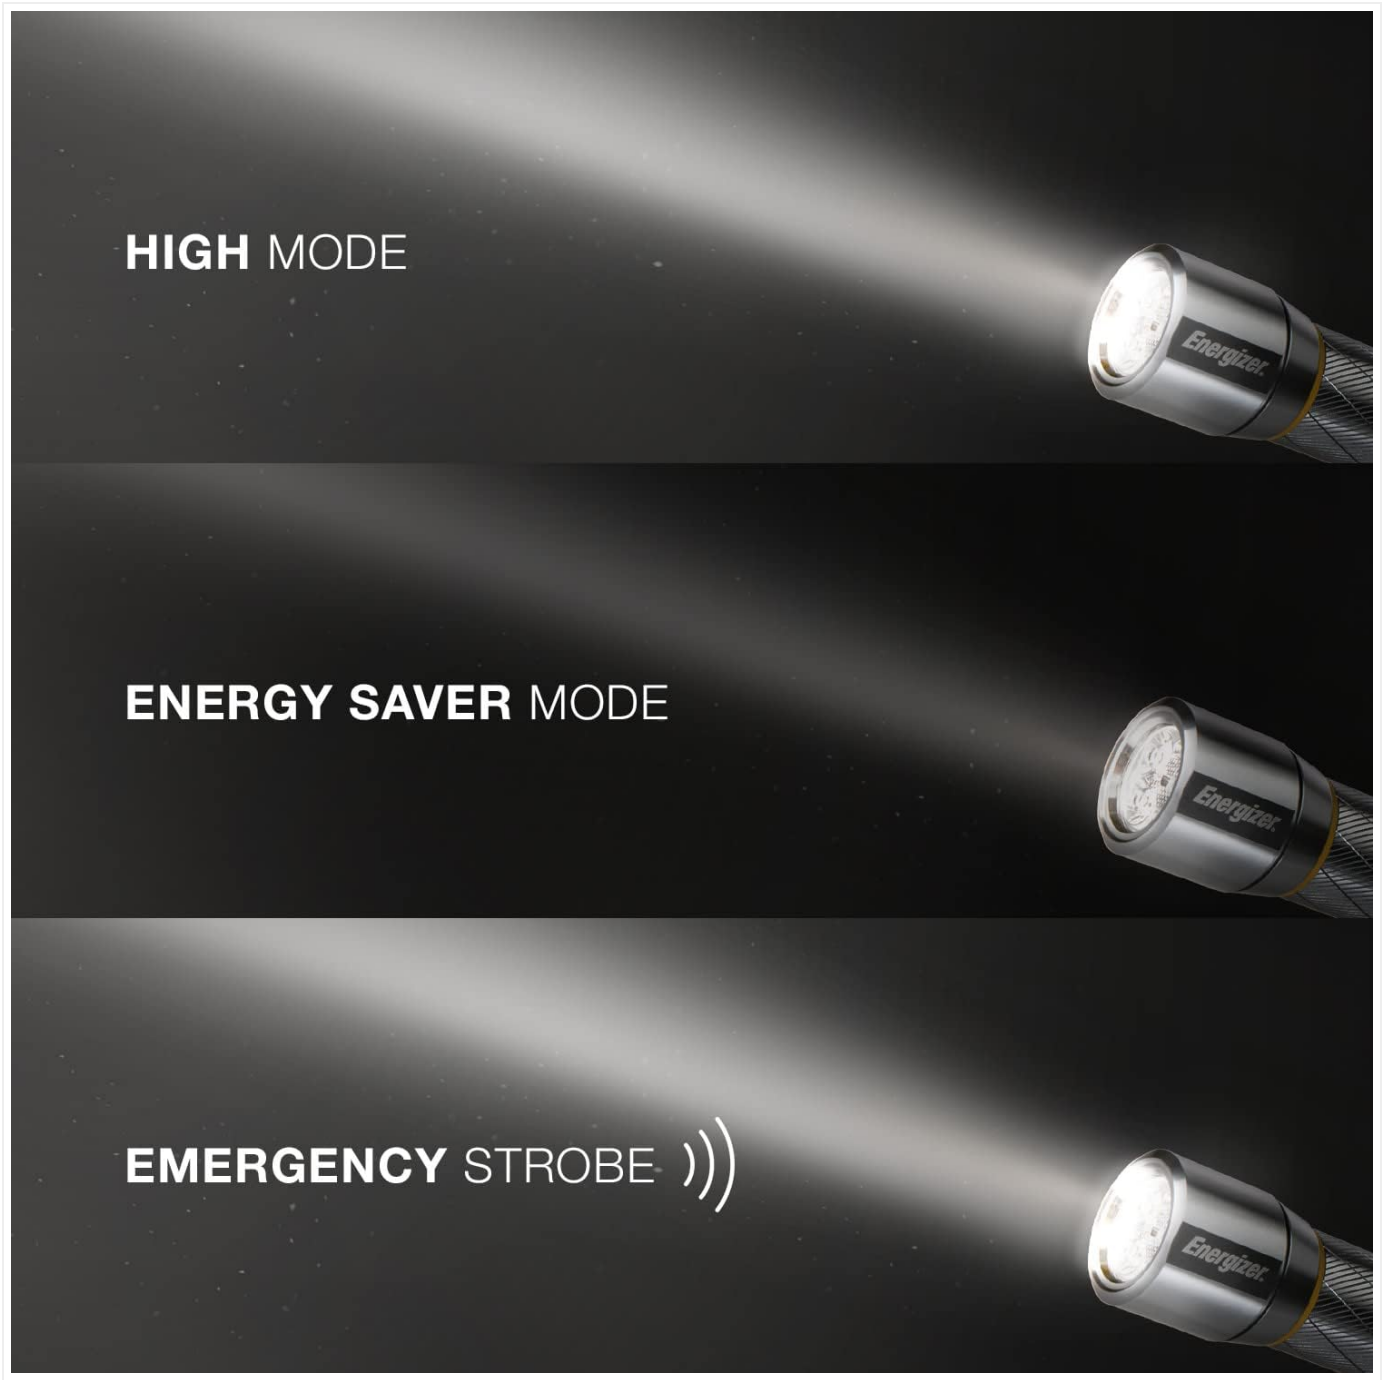

Figure 3: Visual representation of the flashlight's three light modes

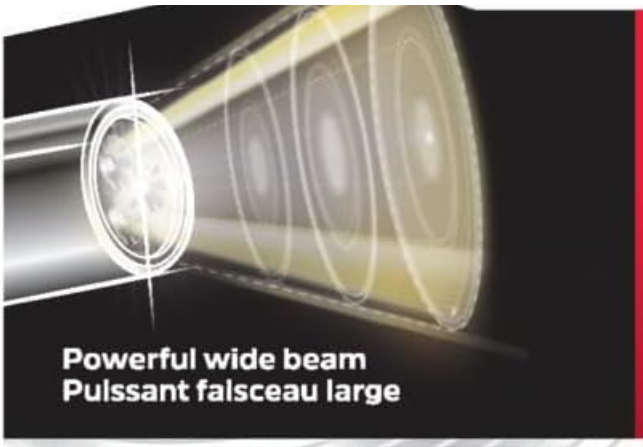

To activate strobe hold for 2 seconds
Pour activer le mode clignotant, maintenez enfoncé le bouton pendant deux secondes

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

BATTERY WARNING: (1) Keep away from children. If swallowed, promptly see doctor; have doctor phone 800-498-8666. (2) Do not install backwards, charge, put in fire or mix with used or other battery types - may explode or leak causing injury. **Replace all batteries at the same time.**

AVERTISSEMENT AU SUJET DES PILES: (1) Gardez hors de portée des enfants. En cas d'ingestion, consultez un médecin sans tarder et demandez-lui de composer 800-498-8666. (2) N'installez pas la pile à l'envers, ne la chargez pas, ne la jetez pas au feu ou ne la mélangez pas avec des piles usées ou d'autres types de piles – elle risque d'exploser ou de fuir, en entraînant des blessures. **Remplacez toutes les piles en même temps.**

ADVERTENCIA SOBRE LAS PILAS: (1) Manténgalas alejadas de los niños. En caso de ingestión, vea a un médico de inmediato y pídale al médico que llame 800-498-8666. (2) No las instale al revés, no las cargue, las arroje al fuego ni las mezcle con pilas usadas o con otros tipos de pilas – pueden explotar o experimentar fugas causando lesiones. **Reemplace todas las pilas a la vez.**

Energizer, Energizer Bunny design, and certain graphic designs are trademarks of Energizer Brands, LLC and related subsidiaries.

Energizer, le dessin du lapin Energizer et certains dessins graphiques sont des marques de commerce de la société Energizer Brands, LLC et de ses filiales connexes.

Energizer, el diseño del conejo de Energizer y ciertos diseños gráficos son marcas comerciales de Energizer Brands, LLC y de sus subsidiarias.

Light made in China. Batteries made in Singapore.

Lampe fabriquée en Chine. Piles fabriquées à Singapour.

Linterna fabricada en China. Pilas fabricadas en Singapúr.

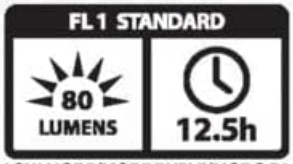

LOW MODE/MODE FAIBLE/MODO BAJO

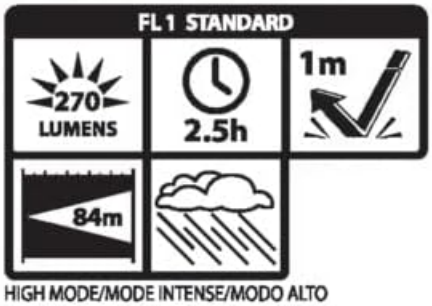

HIGH MODE/MODE INTENSE/MODO ALTO

Manufactured for/
Fabriqué pour/
Fabricado para:
Energizer Brands, LLC
St. Louis, MO 63141.
Energizer Canada, Inc.
Mississauga,
Ontario L5N 6J5.

TM Used under lic./
MC Usager lic.

Questions/
Preguntas?
www.energizer.com
www.energizer.ca

PMHH321
EPMHH32E
UPN -145135

©2019 Energizer.

Figure 4: Illustration of the flashlight's powerful wide beam

Product Demonstration Video

Your browser does not support the video tag.

Video 1: Official product video demonstrating the features and usage of the Energizer LED Tactical Aircraft-Grade Metal Flashlight.

6. Maintenance

- **Cleaning:** Clean the flashlight with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Battery Care:** If the flashlight will not be used for an extended period, remove the batteries to prevent potential leakage and damage.
- **Water Resistance:** Ensure the tail cap is always securely tightened to maintain the IPX4 water-resistant rating.

7. Troubleshooting

- **Flashlight does not turn on:**
  - Check if the batteries are inserted with the correct polarity.
  - Replace batteries with new ones if they are depleted.
  - Ensure battery contacts are clean and free of corrosion.
- **Light output is dim or flickers:**
  - Replace batteries with new ones.
  - Ensure the tail cap is fully tightened.

8. Specifications

Feature	Detail
Brand	Energizer
Model Name	EPMHH32E (50044)
Light Source Type	LED
Brightness	270 Lumens (High Mode)
Beam Distance	84 meters
Power Source	3 AAA Alkaline Batteries
Water Resistance Level	IPX4 Water Resistant
Material	Aircraft-Grade Aluminum
Product Dimensions	1"D x 1"W x 4.8"H
Item Weight	5.28 ounces
Number of Items	1
UPC	039800127389

9. Warranty and Support

This Energizer product is covered by a**2-Year Limited Warranty** from the date of purchase.

For warranty claims, technical support, or additional product information, please visit the official Energizer website:

www.energizer.com

You may also refer to the product packaging for specific contact details.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07QD4X194

More documents and user manuals: **https://manuals.plus/**