Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Panasonic DMR-BRX2060

Panasonic DMR-BRX2060 Blu-ray Recorder Instruction Manual

Model: DMR-BRX2060

1. Product Overview

The Panasonic DMR-BRX2060 is a sophisticated Blu-ray recorder featuring a 2TB hard drive and 7 tuners, designed to enhance your home entertainment experience. This model supports automatic recording of multiple channels, 4K up-conversion, and seamless integration with smartphones for remote access and media management.

- **Automatic Recording:** Capture up to 6 channels for 16 days automatically, ensuring you never miss your favorite programs.
- **Smartphone Integration:** Enjoy recorded programs, photos, and music on your smartphone or tablet using the 'Dokodemo DIGA' app.
- **4K Up-conversion:** Experience enhanced picture quality for your content.
- **HDD Capacity:** 2TB for extensive recording storage.
- **Tuner Configuration:** Total 7 tuners (6 for Terrestrial D/BS/110°CS shared, 1 for Terrestrial D dedicated).
- **Connectivity:** HDMI output, USB 2.0 (front), USB 3.0 (rear), LAN port.
- **Dimensions:** 430 mm (W) × 60 mm (H) × 199 mm (D) (excluding protrusions).
- **Weight:** Approximately 2.7 kg.

2. Initial Setup

Follow these steps for the initial setup of your Panasonic DMR-BRX2060 Blu-ray Recorder.

2.1 Physical Connections

Before powering on the unit, ensure all necessary cables are connected securely.

1. **HDMI Connection:** Connect an HDMI cable from the recorder's HDMI output to your TV's HDMI input.
2. **Antenna Connection:** Connect your terrestrial digital antenna cable to the 'Antenna Input' terminal and an output cable from the recorder to your TV's antenna input. Connect BS/CS antenna cables as well.
3. **LAN Connection (Optional):** For wired internet access, connect an Ethernet cable from the recorder's LAN port to your router. The unit also supports built-in wireless LAN.
4. **Power Connection:** Plug the power cord into the recorder and then into an electrical outlet.

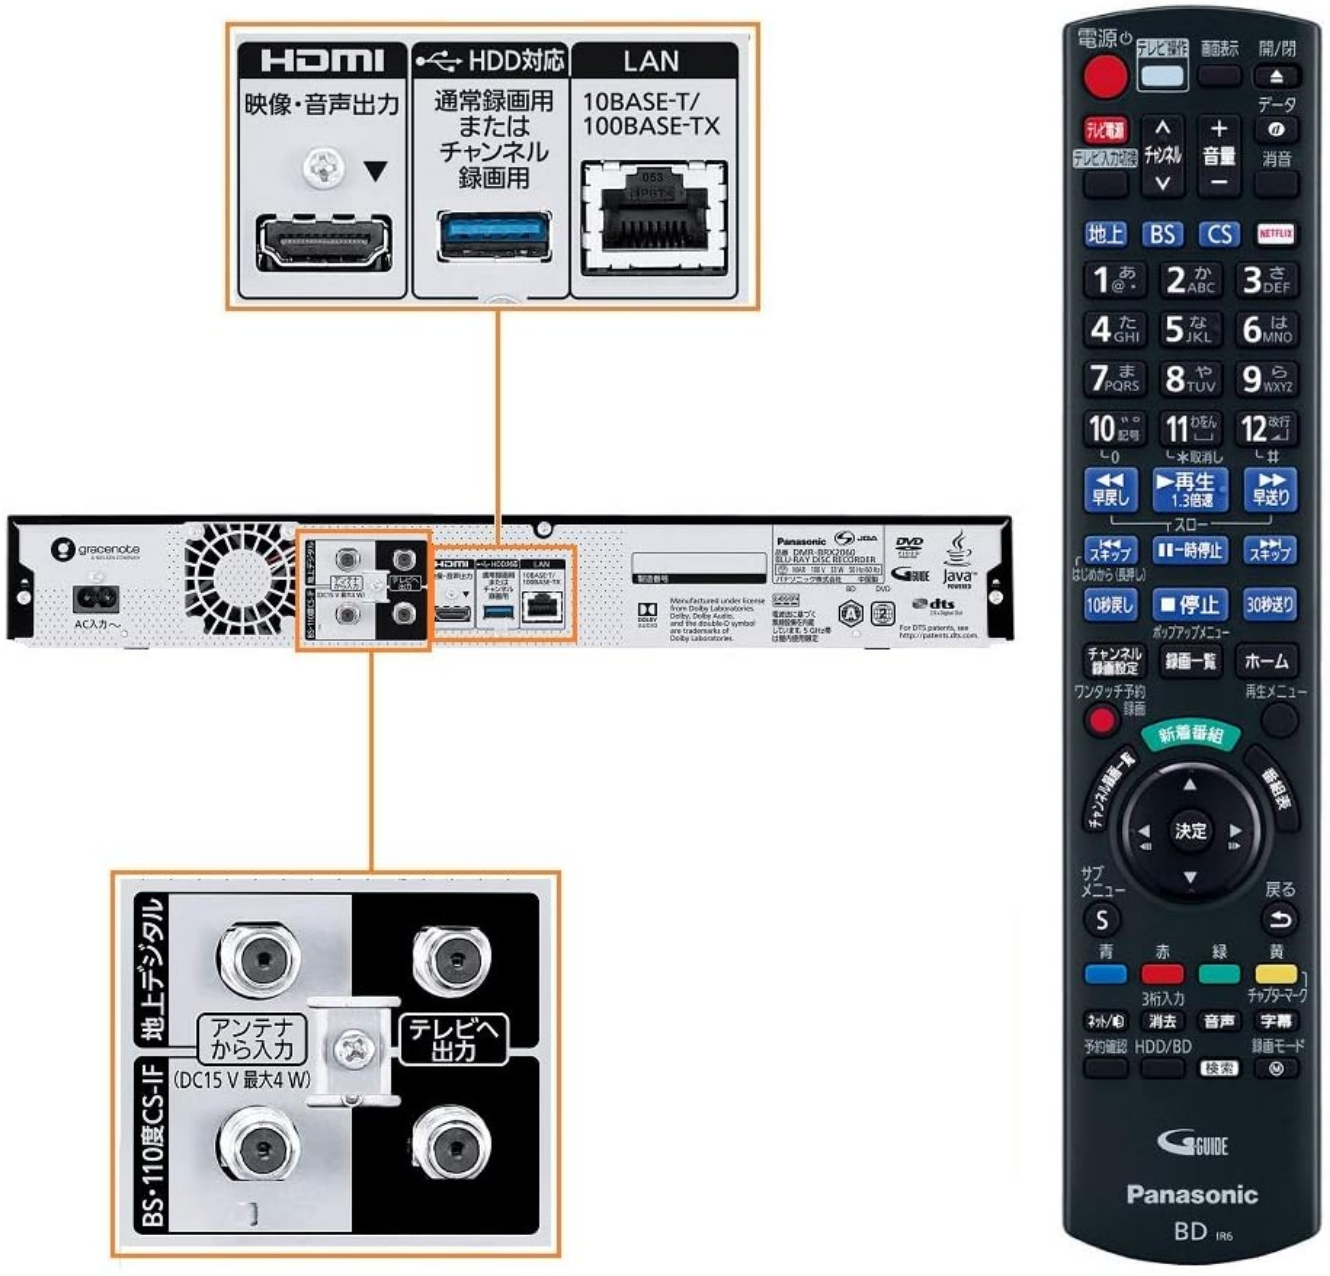


Image: Rear panel connections showing HDMI, HDD, LAN, and antenna ports, alongside the remote control. This illustrates how to connect the recorder to your TV and network.

2.2 On-Screen Setup Guide

Once powered on, follow the on-screen instructions using the remote control.

1. **Enter Postal Code:** Input your 7-digit postal code using the number buttons on the remote control and press 'Enter'. This helps in setting up local channels.
2. **Select Channels for Recording:** Choose the channels you wish to automatically record and specify the number of recording days.
3. **Automatic Internet Settings:** The recorder will attempt to automatically configure internet settings. If using a wired LAN, ensure the cable is connected.

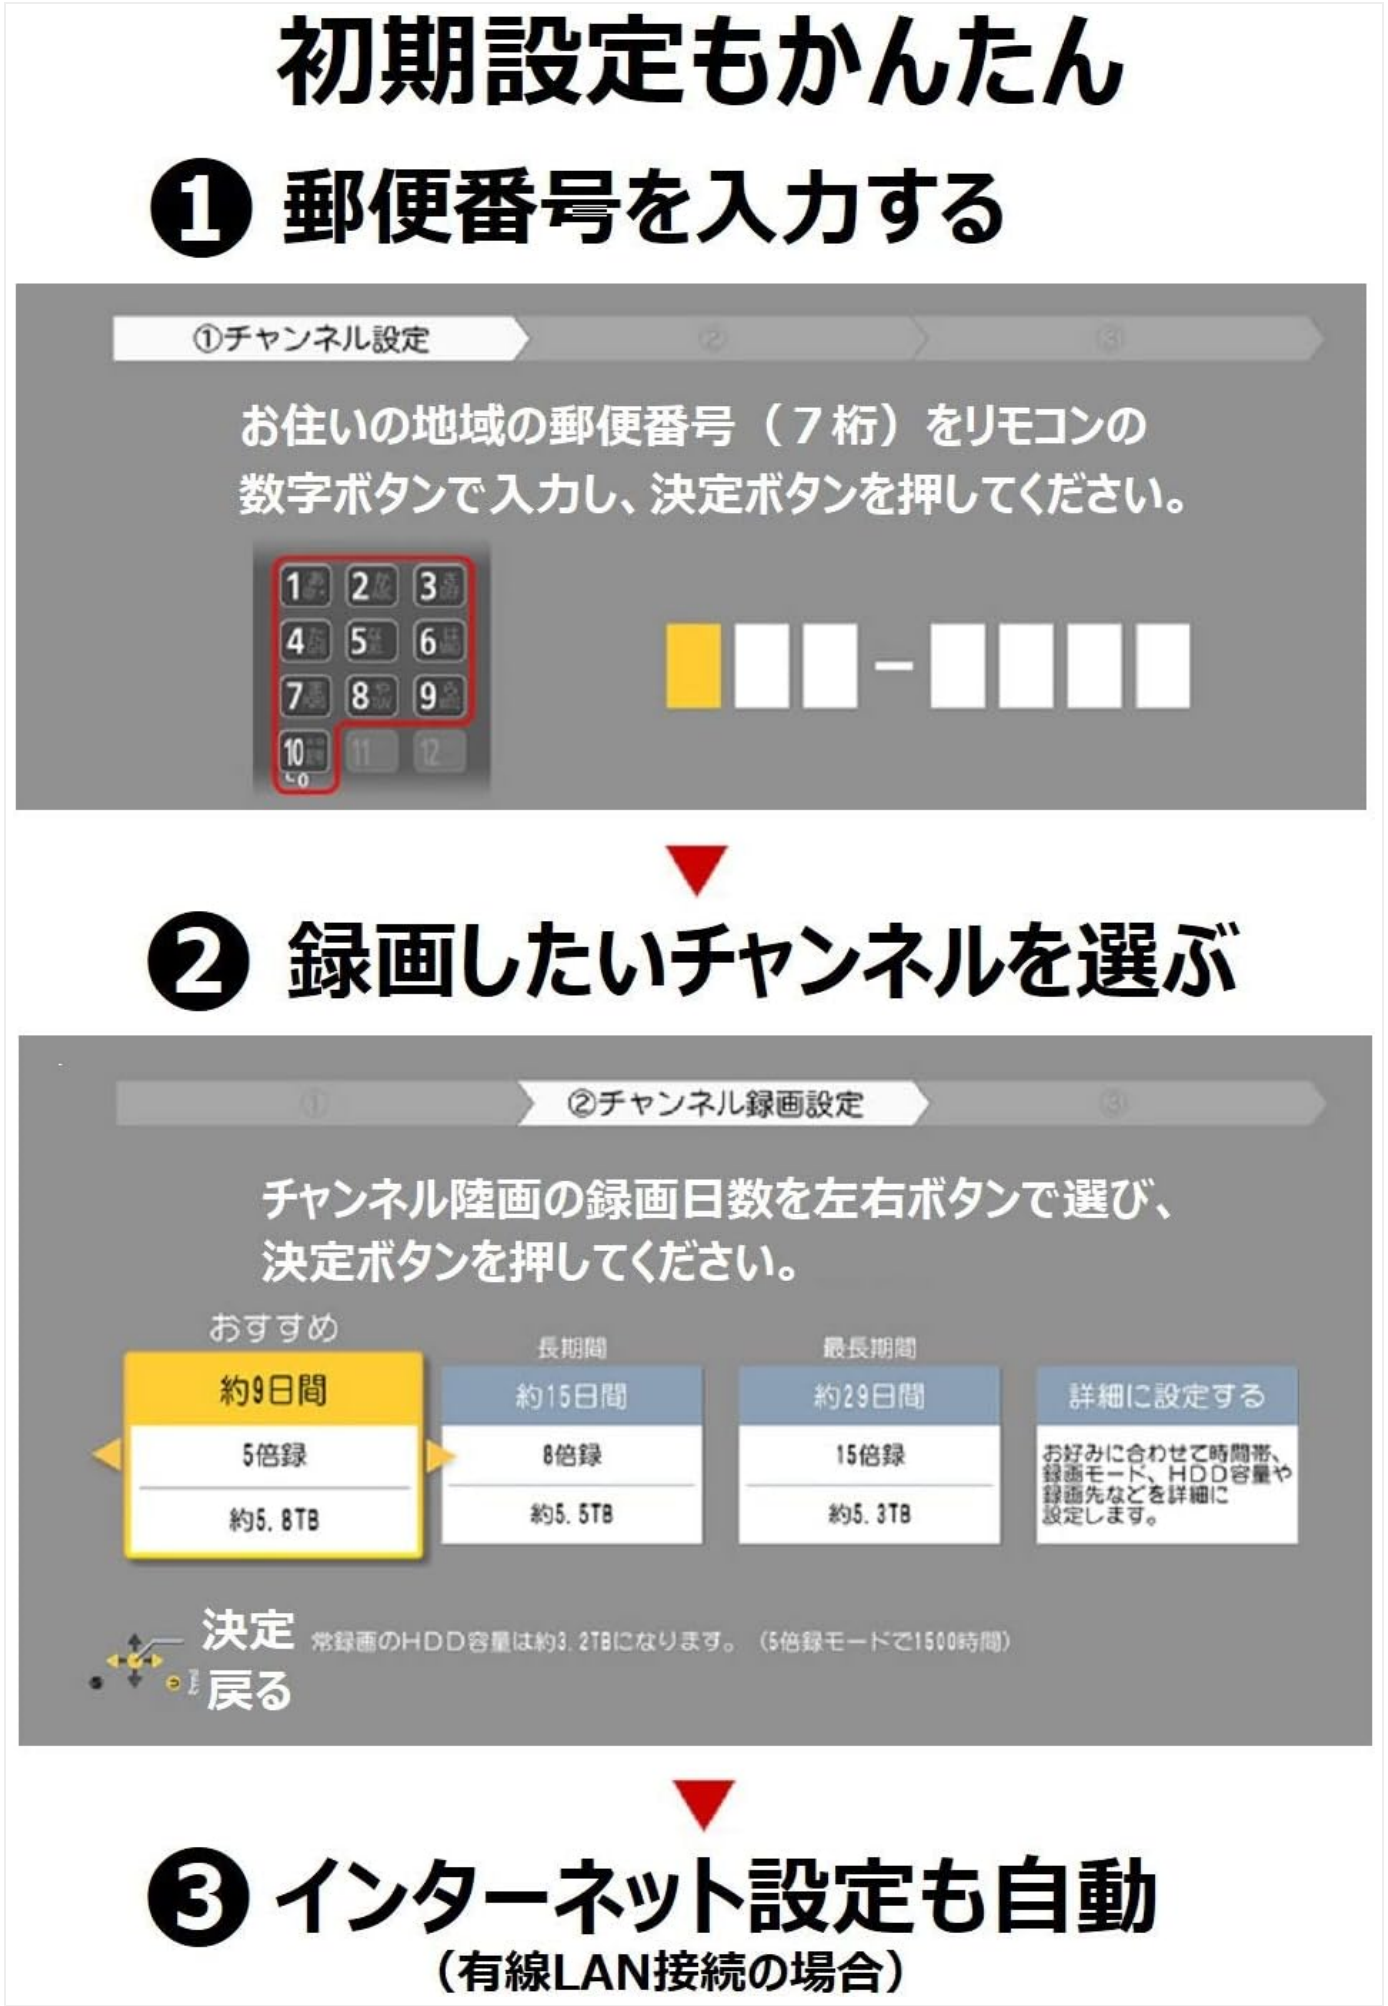


Image: A visual guide to the initial setup process, detailing how to enter your postal code, select channels for automatic recording, and

confirm internet settings.

3. Operating Instructions

3.1 Automatic Channel Recording

The DMR-BRX2060 features a 'Fully Automatic' recording mode, which records all programs on selected channels to the hard disk.

- The system can automatically record up to 6 channels for a maximum of 16 days.
- Older programs are automatically deleted to make space for new recordings, eliminating concerns about hard disk capacity.



Image: This diagram illustrates the automatic recording feature, showing how the recorder captures all programs on specified channels for up to 16 days, automatically managing storage by deleting older content.

3.2 Smartphone Integration with 'Dokodemo DIGA' App

The free 'Dokodemo DIGA' smartphone app allows you to control your recorder and access its content remotely.

- **Remote Recording & Viewing:** Easily make recording reservations and watch recorded programs or live broadcasts from your smartphone or tablet, even when away from home or in another room.
- **Media Sharing:** View photos and videos stored on your DIGA recorder directly on your smartphone. You can also send photos and videos from your smartphone to the DIGA for storage and viewing on a larger screen.



Image: This image demonstrates the 'Dokodemo DIGA' app's functionality, showing how users can easily make recording reservations and watch content on their smartphone or tablet, whether at home or on the go.



Image: This visual explains how to view photos and videos stored on the DIGA recorder via a smartphone and how to transfer media from a smartphone to the DIGA for storage.

4. Specifications

Brand	Panasonic
Model Number	DMR-BRX2060
HDD Capacity	2TB

Tuner Count	7 (6 for Terrestrial D/BS/110°CS shared, 1 for Terrestrial D dedicated)
Media Type	Blu-ray Disc
Features	Automatic Recording, 4K Up-conversion, Smartphone Integration
Resolution	3840 x 2160 (Output)
Connector Type	HDMI
Connectivity Technology	Wireless LAN (Built-in), HDMI, USB, LAN
Color	Black
Product Weight	2.7 kg
Product Dimensions (L x W x H)	43 cm x 19.9 cm x 6 cm
Audio Output Mode	Stereo
Supported Audio Formats	Dolby Digital, DTS, PCM
Speaker Channel Configuration	5.1
HDMI Ports	1
Video Encoding Formats	H.264/AVC, H.265/HEVC
Compatible Devices	Television
Analog Video Format	NTSC
File Formats	MP4, JPEG



	 DMR-UBX8060	 DMR-UBX4060	 DMR-BRX2060
HDD容量	8TB	4TB	2TB
録画時間目安(15倍モード)	10ch×28日間	6ch×28日間	6ch×16日間
チューナー数	11チューナー	7チューナー	7チューナー
チャンネル録画	○	○	○
無線LAN内蔵	○	○	○
Amazon プライムビデオ hulu他対応	○	○	○
UltraHDブルーレイ再生	○	○	—
ハイレゾリマスター	○	○	○
サイズ(幅×高さ×奥行)mm	430mm×66mm×239mm	430mm×66mm×239mm	430mm×60mm×199mm

Image: A detailed comparison table highlighting the specifications of the DMR-BRX2060 alongside other DIGA models, including HDD capacity, tuner count, and supported features.

5. Troubleshooting

This section provides solutions to common issues you might encounter with your DMR-BRX2060 Blu-ray Recorder.

5.1 No Power

- Ensure the power cord is securely plugged into both the recorder and a working electrical outlet.

- Check if the power outlet is functional by plugging in another device.

5.2 No Picture/Sound on TV

- Verify that the HDMI cable is correctly connected to both the recorder and the TV.
- Ensure your TV input is set to the correct HDMI port connected to the recorder.
- Check the volume level on both the TV and the recorder.

5.3 Recording Issues

- Confirm that the antenna cables are properly connected and receiving a strong signal.
- Check the remaining hard disk space. Although the unit manages space automatically, manual intervention might be needed for specific recordings if space is critically low.
- Ensure that the automatic recording settings are correctly configured for the desired channels and duration.

5.4 Network/App Connectivity Problems

- Verify that your home network (Wi-Fi or wired LAN) is active and functioning correctly.
- Ensure the 'Dokodemo DIGA' app is updated to the latest version on your smartphone/tablet.
- Restart both your router and the DMR-BRX2060 recorder.
- For remote viewing, ensure the recorder is registered with the 'Dimora' internet service and your CLUB Panasonic account.

6. Maintenance

Regular maintenance helps ensure the longevity and optimal performance of your DMR-BRX2060.

- **Cleaning:** Gently wipe the exterior of the unit with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- **Ventilation:** Ensure that the ventilation openings on the unit are not blocked to prevent overheating. Allow adequate space around the recorder for airflow.
- **Software Updates:** Periodically check for and install software updates to ensure your recorder has the latest features and bug fixes. These can often be performed automatically via an internet connection.
- **Hard Disk Management:** While the automatic recording feature manages space, you can manually delete unwanted recordings to free up space or organize your content.

7. Support & Warranty Information

For repair inquiries or further assistance with your Panasonic product, please contact Panasonic customer support.

- **Panasonic Repair Consultation Desk:** TEL: 0120-878-554
- **Operating Hours:** 9:00 AM - 7:00 PM (Weekdays), 9:00 AM - 5:30 PM (Sundays, Holidays, Year-end/New Year)
- You can also search for "Panasonic Repair" online for more information.

Please refer to the warranty card included with your product for specific warranty terms and conditions. Keep your proof of purchase for warranty claims.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07R9D7W2V

More documents and user manuals: **https://manuals.plus/**