Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

CHOUBENBEN 20190506595

CHOUBENBEN Replacement Remote Control User Manual

Model: 20190506595

Introduction

This user manual provides detailed instructions for the CHOUBENBEN Replacement Remote Control. This remote is designed to be compatible with a wide range of air conditioner units, specifically those using R57 series and RG57 series remote controls from brands such as Midea, Rient, and Kaysun. Please read this manual carefully before using the remote control to ensure proper operation and longevity.



Front view of the CHOUBENBEN replacement remote control, featuring a standard layout of buttons for air conditioner functions and a digital display.

Setup

Battery Installation


1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or in the direction indicated by an arrow to open it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery cover by sliding it back into place until it clicks securely.

Initial Use

No programming is typically required for this replacement remote control. Once batteries are installed, point the remote control towards your air conditioner unit and press the **ON/OFF** button to test functionality. If your old remote control was similar in appearance and button layout, this replacement should work directly with your AC unit.

Operating Instructions

The remote control features a clear digital display and intuitive buttons for various air conditioner functions.

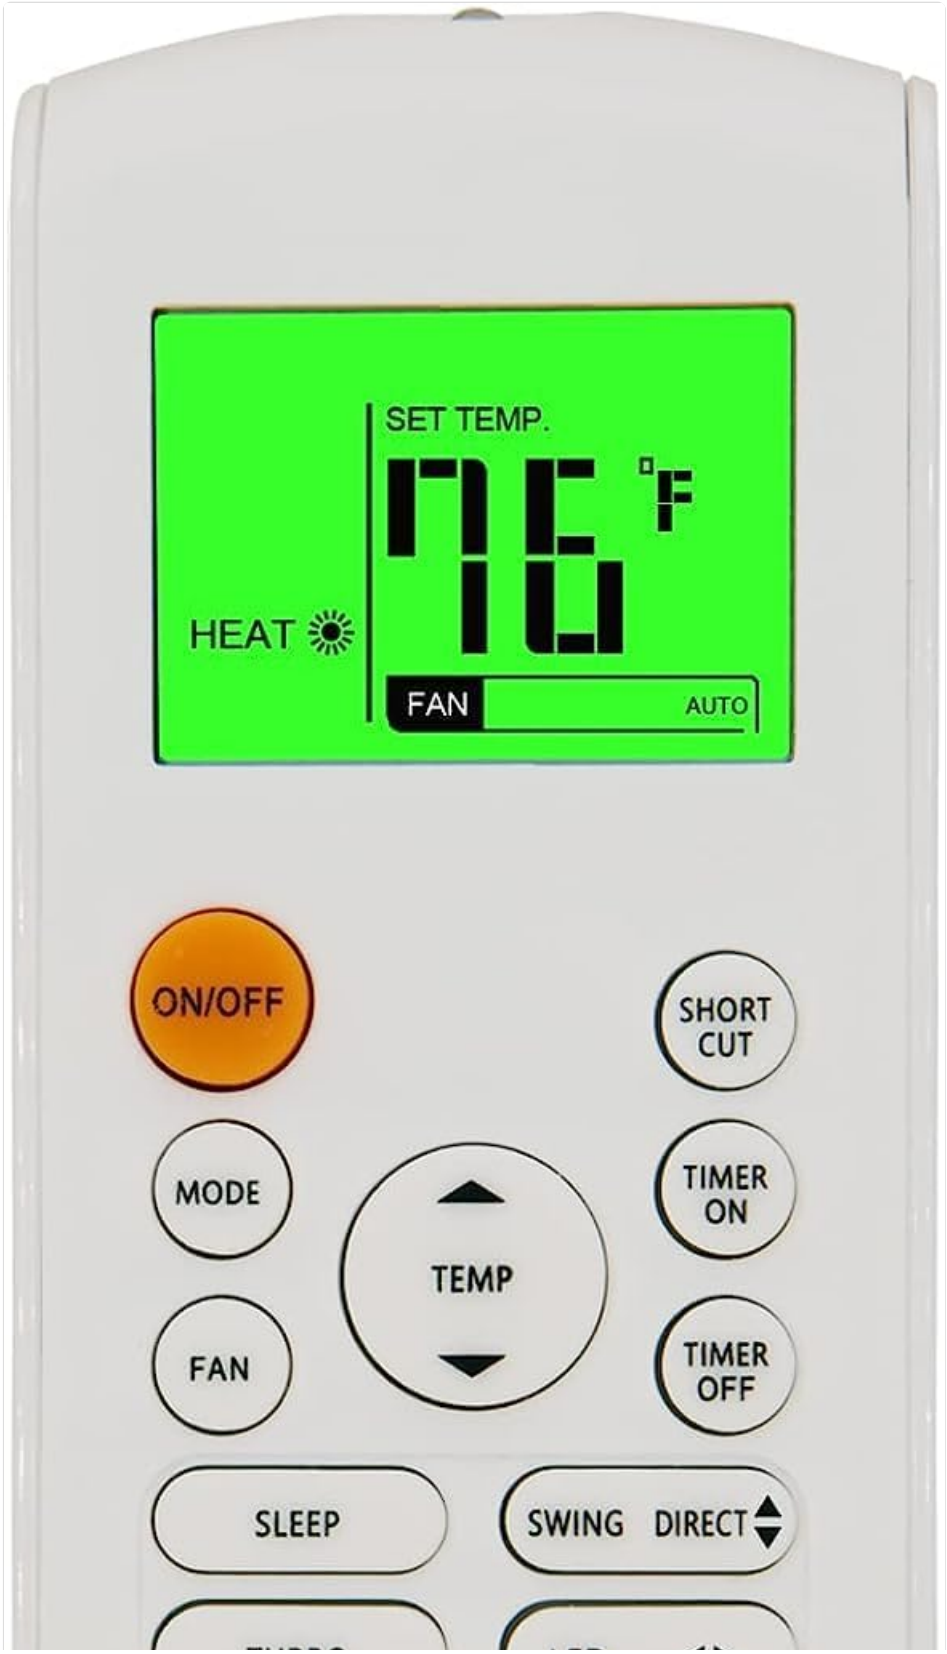




A detailed front view of the remote control, showcasing the layout of all buttons and the digital display screen.

Key Functions:

- **ON/OFF:** Powers the air conditioner unit on or off.
- **MODE:** Cycles through operating modes (e.g., Cool, Heat, Fan, Dry, Auto).
- **FAN:** Adjusts fan speed (e.g., Low, Medium, High, Auto).
- **TEMP ▲/▼:** Increases or decreases the set temperature.
- **SLEEP:** Activates or deactivates sleep mode for quiet operation and energy saving.
- **TURBO:** Engages maximum cooling or heating power for rapid temperature change.
- **SELF CLEAN:** Initiates a self-cleaning function for the indoor unit (if supported by AC).
- **LED:** Turns the display light on or off on the indoor unit.
- **FOLLOW ME:** Activates a sensor in the remote to detect ambient temperature at its location and adjust AC accordingly (if supported by AC).
- **TIMER ON/OFF:** Sets a timer for the unit to turn on or off automatically.
- **SWING DIRECT:** Controls the louver swing direction.
- **SHORT CUT:** A customizable button for frequently used settings (functionality may vary by AC model).

Display Features:

- **Fahrenheit and Celsius Display:** The remote control can display the temperature in both Fahrenheit (°F) and Celsius (°C). The unit typically switches between these by pressing a specific combination of buttons (often TEMP UP and DOWN simultaneously, or a dedicated button if present).
- **Green Backlight:** The display features a green backlight, making it easy to read and operate the remote control in low-light conditions or at night.

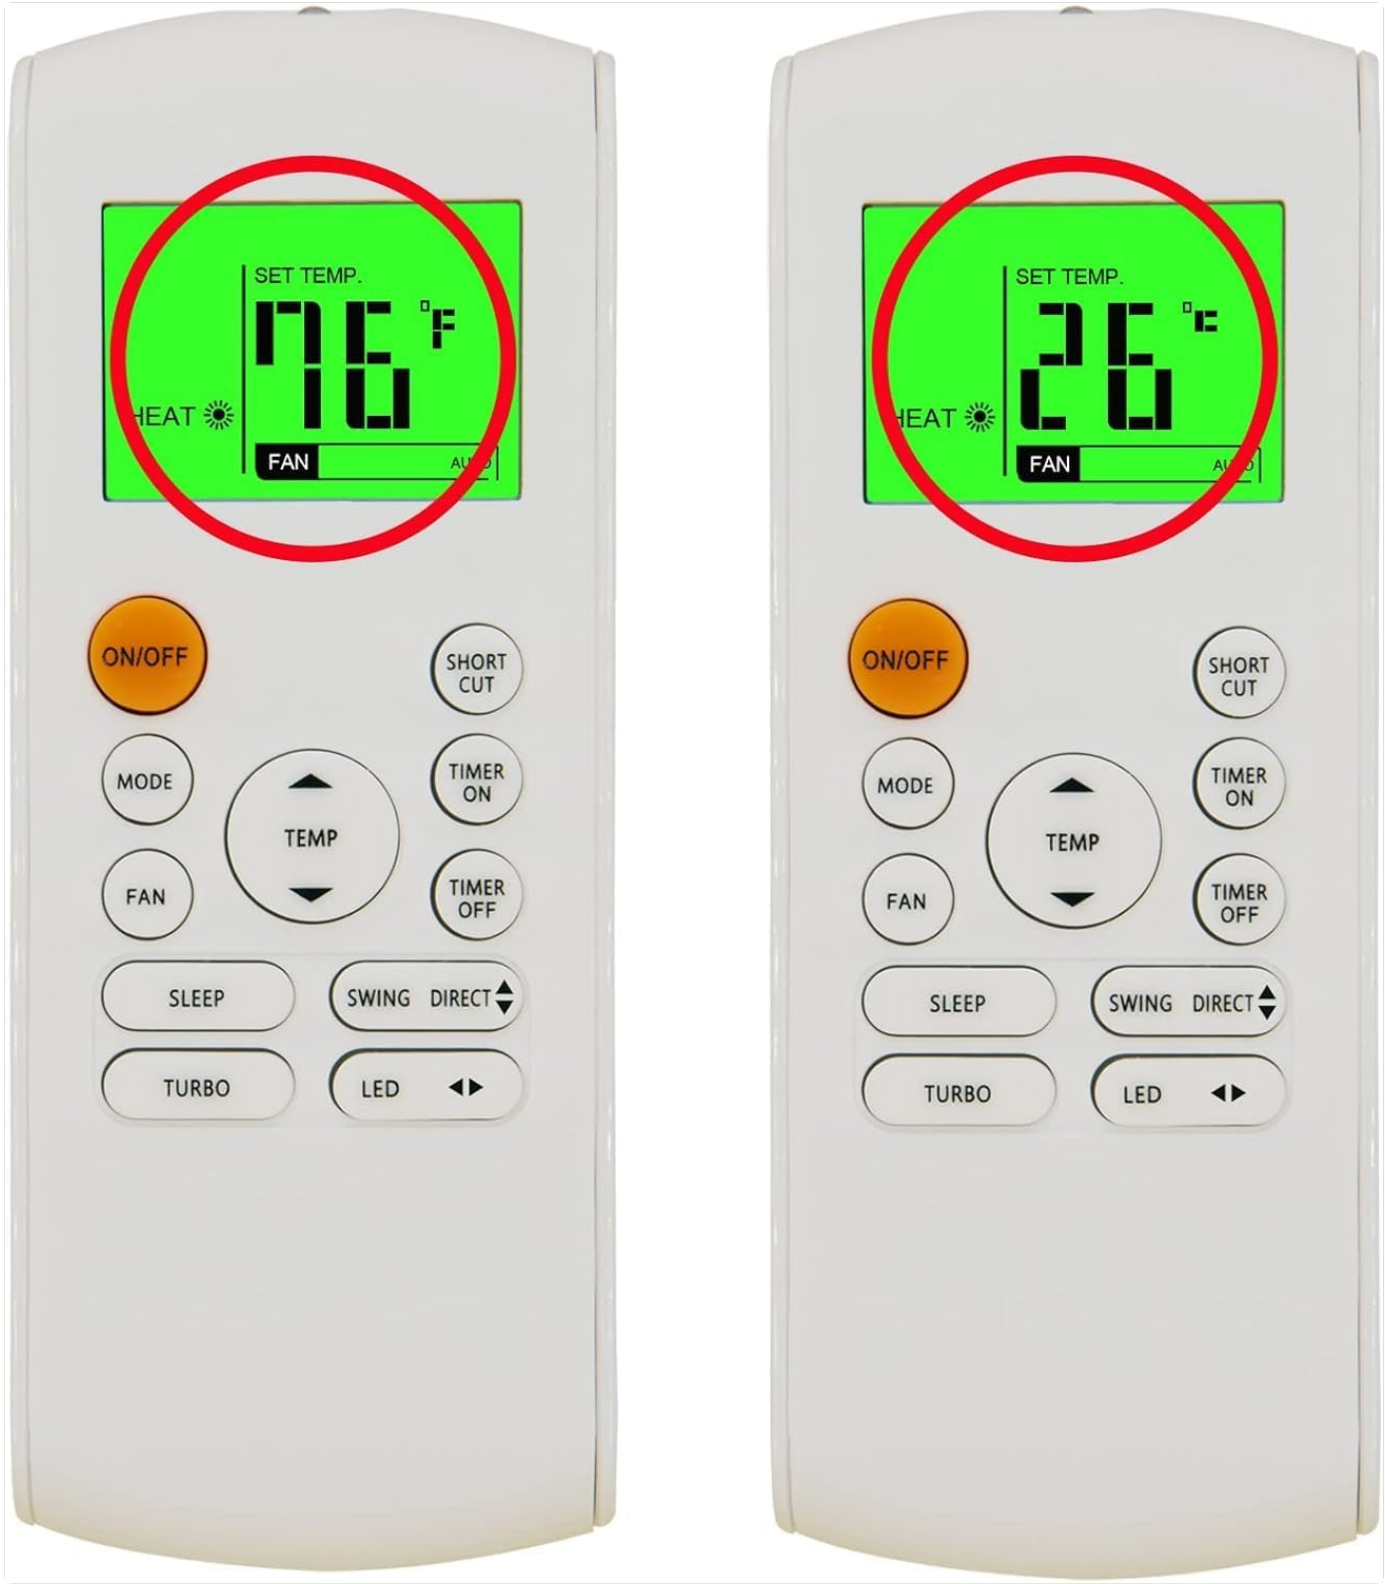

A side-by-side comparison showing the remote control's display in Fahrenheit (76°F) and Celsius (26°C), demonstrating its dual temperature display capability.



A close-up view of the remote control's display, clearly showing the activated green backlight, which enhances visibility in low-light conditions.

Maintenance

Battery Replacement

Replace batteries when the remote control's display becomes dim or unresponsive. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, wipe it gently with a soft, dry cloth. Do not use liquid cleaners, abrasive cleaners, or chemical solvents, as these can damage the remote's surface or internal components.

Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the remote.

Troubleshooting

Problem	Possible Cause	Solution
Remote control is unresponsive or not working.	Dead or incorrectly installed batteries. Obstruction between remote and AC unit. Remote not compatible with AC unit.	◦ Check battery orientation and replace with fresh AAA batteries. ◦ Ensure a clear line of sight to the AC unit's receiver. ◦ Verify your AC unit's original remote model number against the compatible models listed in this manual.
Display is dim or flickering.	Low battery power.	Replace batteries with new ones.
Cannot switch between Fahrenheit and Celsius.	Incorrect button combination or feature not supported by specific AC model.	◦ Try pressing the **TEMP ▲** and **TEMP ▼** buttons simultaneously. ◦ Refer to your AC unit's original manual for specific instructions on temperature unit conversion if this remote's method does not work.

Specifications

Model Number: 20190506595

Compatible Devices: Air Conditioner units using R57 series and RG57 series remote controls (e.g., Midea, Rient, Kaysun, Carrier, MrCool, FRIMEC, Olimpia Splendid, ECOXTOSHIBA)

Power Source: 2 x AAA Batteries (not included)

Display: Digital LCD with Green Backlight

Temperature Display: Fahrenheit (°F) and Celsius (°C)

Dimensions: Approximately 7.87 x 3.15 x 1.18 inches

Item Weight: Approximately 2.39 ounces



An image highlighting the key features of the remote control, including its ability to display temperatures in both Fahrenheit and Celsius, a green backlight for easy viewing, and a list of compatible R57 and RG57 series models.

Warranty and Support

Specific warranty information for this CHOUBENBEN replacement remote control is not provided in the product details. For any issues or support inquiries, please refer to the seller or retailer from whom the product was purchased. They can provide assistance regarding product functionality, returns, or exchanges.

© 2025 CHOUBENBEN. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07RKX593D

More documents and user manuals: **https://manuals.plus/**