Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Warmfod WF-C18D57

Warmfod WF-C18D57 Electric Double Induction Cooktop User Manual

Model: WF-C18D57 | Brand: Warmfod

Important Safeguards

Please read all instructions carefully before using the Warmfod WF-C18D57 Electric Double Induction Cooktop to ensure safe and efficient operation. Keep this manual for future reference.

- Always place the cooktop on a stable, flat, and heat-resistant surface.
- Ensure adequate ventilation around the unit. Do not block air vents.
- Do not immerse the cooktop, cord, or plug in water or other liquids.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Use only induction-compatible cookware. Non-magnetic cookware will not heat.
- The surface will remain hot after use due to residual heat from the cookware. Exercise caution and avoid touching the hot surface directly.
- Keep magnetic objects (e.g., credit cards, pacemakers) away from the cooktop during operation.
- Unplug the appliance from the outlet when not in use and before cleaning.

Product Overview

The Warmfod WF-C18D57 is a digital double induction cooktop designed for efficient and precise cooking. It features two independent cooking zones with touch screen controls.

Key Features

- 1800W total power for rapid heating.
- Digital touch screen controls for precise temperature and power adjustments.
- Two independent induction cooking zones.

- Durable frosted glass panel, scratch-resistant and high-temperature resistant (up to 500°C).
- Fast heat dissipation system with a 7-blade fan for extended product life.

Product Dimensions

- Dimensions: 20.1 x 11.8 x 2.6 inches
- Weight: 10.83 pounds



The Warmfod WF-C18D57 Electric Double Induction Cooktop features two independent cooking zones, each with its own digital display and touch controls. The sleek black surface is made of frosted glass, designed for both functionality and aesthetics.

Setup

Unpacking

1. Carefully remove the cooktop from its packaging.
2. Remove any protective films or stickers from the surface and controls.
3. Inspect the unit for any signs of damage. If damaged, do not use and contact customer support.

Placement

- Place the cooktop on a dry, stable, and level surface.
- Ensure there is at least 4 inches (10 cm) of clear space around all sides of the cooktop for proper ventilation.
- Do not place the cooktop near heat sources, flammable materials, or on metal surfaces.

Power Connection

- Plug the power cord into a standard 120V AC electrical outlet.
- Ensure the outlet is properly grounded and can support the 1800W power requirement.

Compatible Cookware

Induction cooktops require specific types of cookware to function. The cookware must have a magnetic base.

Induction Compatibility Test

To check if your cookware is compatible, perform a simple magnet test:

1. Place a small magnet on the bottom of your pot or pan.
2. If the magnet sticks firmly, the cookware is compatible with induction cooking.
3. If the magnet does not stick or sticks weakly, the cookware is not suitable for induction.

Compatible Materials: Cast iron, enameled iron, and stainless steel with a magnetic base.

Incompatible Materials: Aluminum, copper, glass, ceramic, and non-magnetic stainless steel.



This diagram visually explains the magnet test for induction cookware compatibility. Compatible cookware will attract a magnet to its base,

while incompatible cookware will not.

Operating Instructions

Power On/Off

1. Place induction-compatible cookware on the desired cooking zone.
2. Press the **ON/OFF** button to power on the cooktop. The display will illuminate.
3. To turn off, press the **ON/OFF** button again.

Setting Temperature/Power

- After powering on, select the desired cooking zone.
- Use the **Temperature/Power** controls (rotary knob or touch buttons) to adjust the heat setting. You can typically choose between temperature (e.g., °F/°C) or power levels (e.g., Watts).
- The digital display will show the selected setting.

Using Dual Zones

The Warmfod WF-C18D57 allows for independent operation of both cooking zones. You can set different temperatures or power levels for each zone simultaneously.



The cooktop's intuitive touch controls allow for easy adjustment of temperature and power settings for each cooking zone. The digital display provides clear feedback on current settings.

Maintenance and Cleaning

Regular cleaning and maintenance will prolong the life of your induction cooktop and ensure optimal performance.

Cleaning the Surface

1. Always ensure the cooktop is unplugged and completely cool before cleaning.
2. Wipe the frosted glass surface with a soft, damp cloth and a small amount of mild dish soap.
3. For stubborn stains, use a non-abrasive cleaner specifically designed for glass cooktops.
4. Dry the surface thoroughly with a clean, soft cloth to prevent water spots.
5. Do not use abrasive pads, harsh chemicals, or steam cleaners.

Ventilation

- Periodically check the air intake and exhaust vents on the underside of the cooktop to ensure they are free from dust and debris.
- A clean ventilation system is crucial for efficient cooling and preventing overheating.



The premium frosted surface of the cooktop is designed for easy cleaning, requiring only a soft cloth and mild detergent for most spills.

Troubleshooting

If you encounter issues with your Warmfod WF-C18D57, please refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution


Problem	Possible Cause	Solution
Cooktop does not power on.	Not plugged in, power outage, circuit breaker tripped.	Check power cord connection, verify power supply, reset circuit breaker if necessary.
Cooktop powers on but does not heat.	Incompatible cookware, cookware not centered, small cookware size.	Ensure cookware is induction-compatible and has a magnetic base. Center cookware on the cooking zone. Use cookware with a base diameter between 5.7" and 8.2".
Display shows an error code.	Various internal issues or sensor errors.	Refer to the detailed error code section in the full manual (if available) or contact customer support. Try unplugging and re-plugging the unit.
Unusual noise during operation.	Normal fan operation, vibration from cookware.	A low humming sound from the cooling fan is normal. Ensure cookware is stable and not vibrating excessively.



The cooktop utilizes electromagnetic induction technology for efficient and uniform heating. Understanding this process can help in troubleshooting heating-related issues.

Specifications

Feature	Detail
Brand	Warmfod
Model	WF-C18D57
Type	Electric Double Induction Cooktop
Heating Elements	2
Wattage	1800 watts
Controls Type	Touchpad
Voltage	120 Volts
Power Source	Corded Electric
Product Dimensions	20.1 x 11.8 x 2.6 inches
Item Weight	10.83 pounds
UPC	791306853963
ASIN	B07RST7QF3

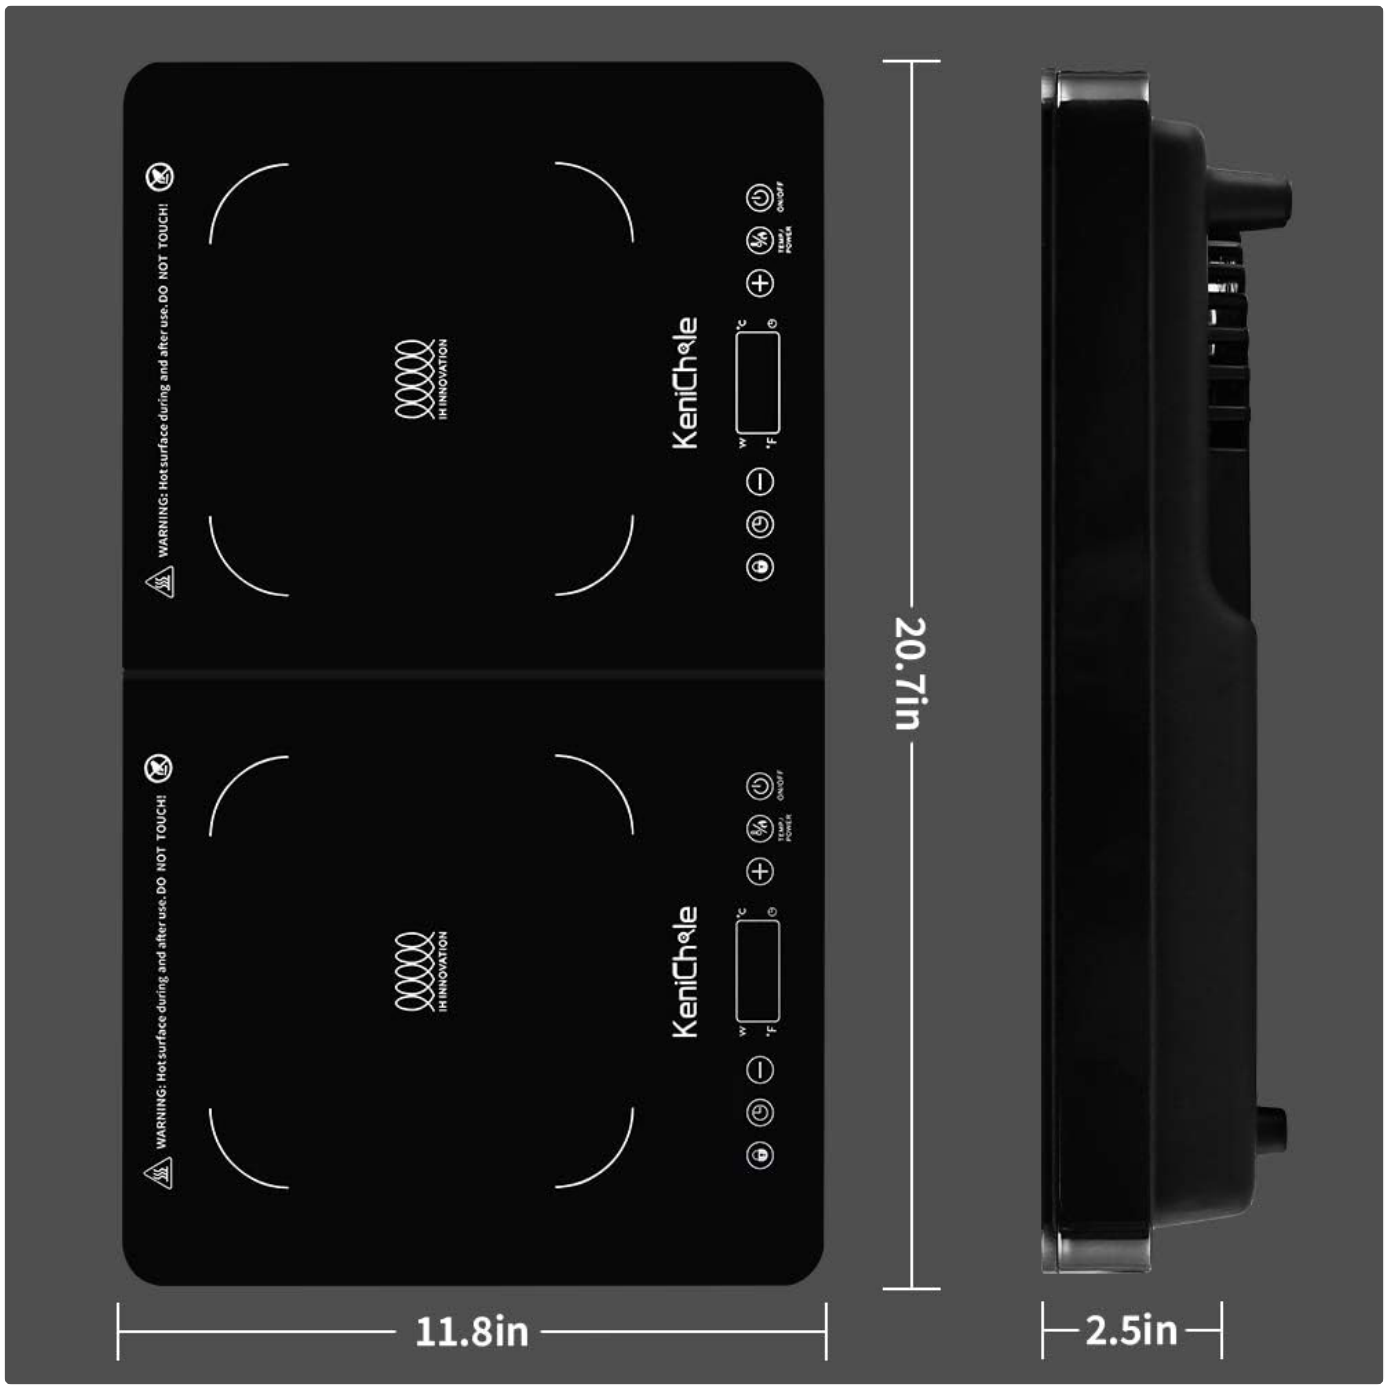

Detailed dimensions of the Warmfod WF-C18D57 Electric Double Induction Cooktop, providing precise measurements for placement and integration into your kitchen space.

Warranty and Support

Warranty Information

For detailed warranty information regarding your Warmfod WF-C18D57 Electric Double Induction Cooktop, please refer to the warranty card included in your product packaging or visit the official Warmfod website. The warranty typically covers manufacturing defects under normal use conditions.

Customer Support

If you require assistance with setup, operation, troubleshooting, or have any questions about your product, please contact Warmfod customer service. Contact details can usually be found on the product packaging, the official website, or in the

included documentation.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07RST7QF3

More documents and user manuals: **https://manuals.plus/**