Calvin Klein K4N211C1

Calvin Klein Time K4N211C1 Quartz Analog Watch User Manual

Model: K4N211C1

Introduction Setup Operation Maintenance Troubleshooting Specifications Warranty & Support

Introduction

This manual provides instructions for the Calvin Klein Time K4N211C1 quartz analog watch. Please read this manual carefully to ensure proper use and maintenance of your timepiece. This watch features a precise quartz movement, an analog display, and a genuine leather strap.

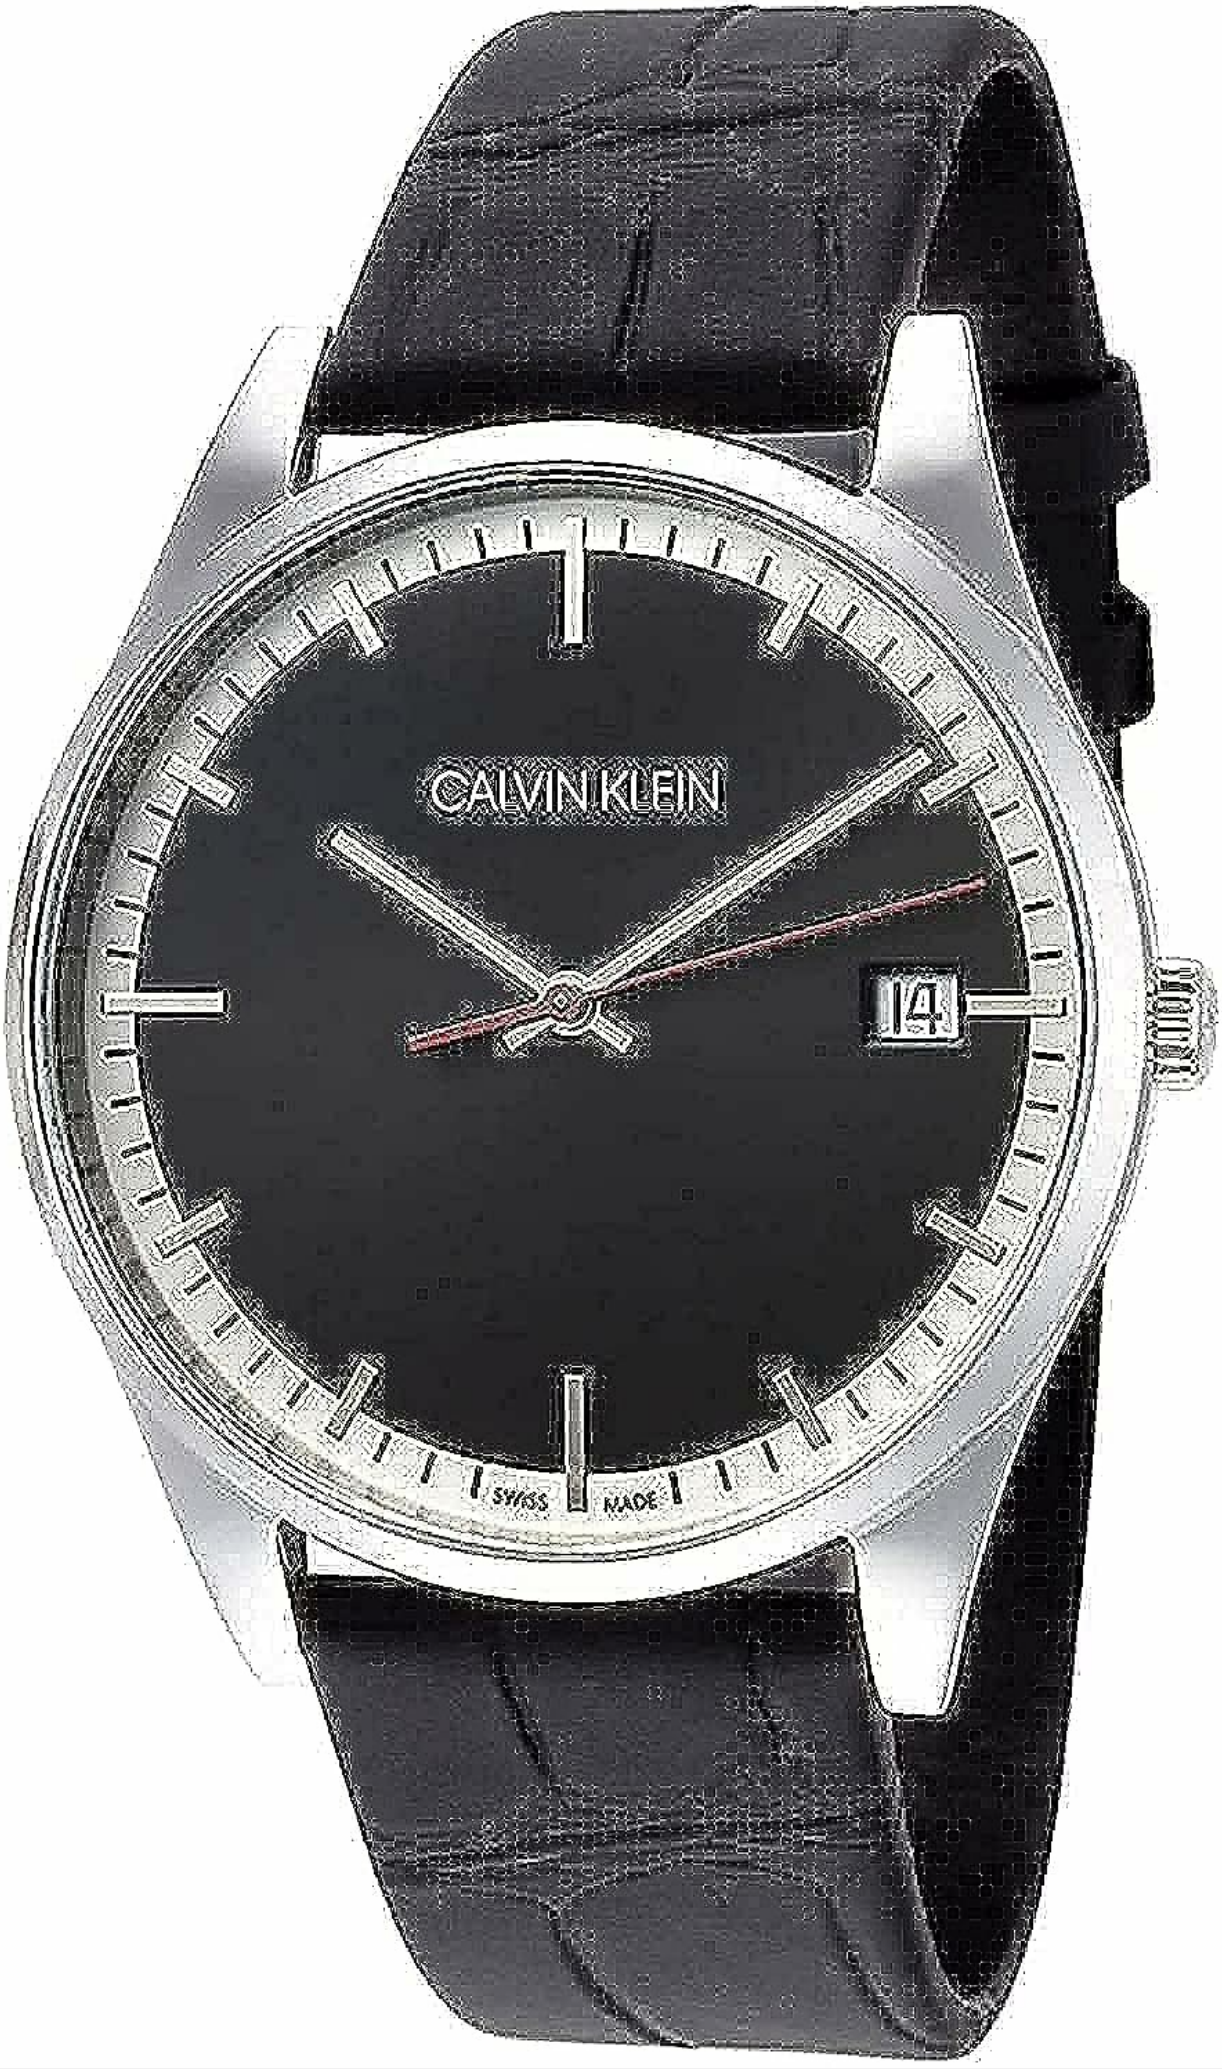

CALVIN KLEIN
14
SWISS MADE

Figure 1: Front view of the Calvin Klein Time K4N211C1 watch.

Setup

Setting the Time

1. **Pull out the crown:** Gently pull the crown (the small knob on the side of the watch case) out to the first click position.
2. **Adjust the time:** Turn the crown clockwise or counter-clockwise to set the hour and minute hands to the correct time.
3. **Push in the crown:** Once the time is set, push the crown back into its normal position.

Setting the Date

This watch features a date display. To set the date:

1. **Pull out the crown:** Gently pull the crown out to the first click position.
2. **Adjust the date:** Turn the crown counter-clockwise to advance the date. Avoid setting the date between 9 PM and 3 AM, as this may interfere with the automatic date change mechanism. If the current time falls within this period, first set the time outside this range, then set the date, and finally reset the time.
3. **Push in the crown:** Once the date is set, push the crown back into its normal position.



Figure 2: Side view illustrating the crown for time and date adjustment.

Operation

Timekeeping

Your Calvin Klein Time K4N211C1 watch is powered by a precise quartz movement, ensuring accurate timekeeping. Once the time and date are set, the watch will operate continuously until the battery requires replacement.

Water Resistance

This watch is water-resistant up to 30 meters (3 ATM). This means it is suitable for everyday use and can withstand splashes or brief immersion in water. It is *not* suitable for swimming, showering, or diving. Avoid operating the crown while the watch is wet to prevent water ingress.

Maintenance

Cleaning

- **Case and Crystal:** Wipe the watch case and crystal with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying.
- **Leather Strap:** Avoid prolonged exposure of the leather strap to water, direct sunlight, or harsh chemicals. Clean with a soft, dry cloth. If the strap becomes wet, allow it to air dry naturally, away from direct heat.

Battery Replacement

The watch is powered by one lithium metal battery. When the watch stops or the second hand begins to jump erratically (if applicable), it indicates a low battery. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and water resistance.

Storage

When not in use, store your watch in a cool, dry place, away from direct sunlight and strong magnetic fields.

Troubleshooting

Problem	Possible Cause	Solution
Watch stops or runs intermittently.	Low battery.	Replace the battery by a professional watchmaker.
Time is incorrect.	Crown is not fully pushed in, or time was not set correctly.	Ensure the crown is fully pushed in. Re-set the time as per "Setting the Time" instructions.
Date is incorrect.	Date was not set correctly.	Re-set the date as per "Setting the Date" instructions.
Condensation inside the watch.	Water ingress due to improper sealing or exposure to extreme temperature changes.	Immediately take the watch to a qualified watch technician for inspection and repair.

Specifications

Model Number:	K4N211C1
Brand:	Calvin Klein
Movement Type:	Quartz
Display Type:	Analog
Case Material:	Stainless Steel
Case Diameter:	40 Millimeters
Case Thickness:	8 Millimeters
Band Material:	Genuine Leather
Band Width:	20 Millimeters

Band Length:	19 Centimeters
Dial Color:	Dark Grey
Band Color:	Black
Crystal Material:	Sapphire
Water Resistance Depth:	30 Meters (3 ATM)
Item Weight:	50 Grams
Battery Type:	1 Lithium Metal (required)

Warranty & Support

Manufacturer's Warranty

This Calvin Klein watch is covered by a manufacturer's warranty. The specific terms and duration of the warranty are typically provided with your purchase documentation. Please refer to the warranty card or documentation included in the watch packaging for detailed information regarding coverage, exclusions, and how to make a claim.

Customer Support

For technical assistance, service, or warranty inquiries, please contact Calvin Klein customer support or an authorized service center. Contact details can usually be found on the official Calvin Klein website or in your watch's warranty booklet.

© 2023 Calvin Klein. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question