Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

Innsky IS-AF001

Innsky 10.6 Quart Air Fryer Oven User Manual

Model: IS-AF001 | Brand: Innsky

1. Introduction

Thank you for choosing the Innsky 10.6 Quart Air Fryer Oven. This versatile appliance combines the functions of an air fryer, rotisserie, dehydrator, pizza grill, and toaster oven, offering a healthy and efficient way to prepare a variety of meals. This manual provides essential information for safe operation, setup, maintenance, and troubleshooting to ensure optimal performance and longevity of your appliance.



Figure 1.1: Innsky 10.6 Quart Air Fryer Oven, showcasing its sleek design and transparent cooking window.

2. Important Safety Instructions

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury. This appliance is ETL Certified, ensuring compliance with safety standards.

- Read all instructions before operating the appliance.

- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- The appliance features an automatic shut-off when the door is pulled open and overheating protection for enhanced safety.
- Food-grade non-stick material is BPA & PFOA free.

3. Product Components and Accessories

The Innsky Air Fryer Oven comes equipped with several accessories to enhance your cooking experience:

- **Rotisserie Basket:** Ideal for tumbling smaller items like fries or nuts.
- **Rotisserie Shaft:** Used for cooking whole chickens or roasts.
- **Mesh Racks (2):** For air frying, baking, or dehydrating on multiple levels.
- **Removal Tool:** Safely remove hot rotisserie accessories.
- **Skewers (8):** For preparing kebabs.
- **Drip Tray:** Catches excess oil and food particles for easy cleanup.



Figure 3.1: Included accessories for the Innsky Air Fryer Oven, including mesh racks, rotisserie shaft, and basket.

4. Setup

1. **Unpacking:** Carefully remove all packaging materials and accessories. Ensure all components are present and undamaged.
2. **Initial Cleaning:** Before first use, wipe the exterior of the appliance with a damp cloth. Wash all removable accessories (mesh racks, drip tray, rotisserie basket, shaft, skewers, removal tool) with warm, soapy water. Rinse thoroughly and dry completely.
3. **Placement:** Place the air fryer oven on a stable, heat-resistant surface, away from walls or other appliances to allow for proper air circulation. Ensure there is at least 6 inches of space on all sides.
4. **First Use Test Run:** Before cooking food, perform a test run to eliminate any initial manufacturing odors.
    - Plug in the appliance.
    - Set the temperature to 400°F (200°C).
    - Set the cooking time to 20 minutes.
    - Allow the appliance to run for the full duration without any food inside.
    - After the cycle, open the door and let the appliance cool down for one day in a well-ventilated area. This helps dissipate any residual smell from the heating element.

5. Operating Instructions

5.1 Control Panel Overview

The Innsky Air Fryer Oven features an intuitive touchscreen control panel for easy operation.



Figure 5.1: Digital touch control panel with temperature, time, and preset icons.

- **Power Button:** Turns the appliance on/off and starts/pauses cooking.
- **Temperature Control:** Adjust temperature from 150℉ to 400℉ using the +/- buttons.
- **Time Control:** Adjust cooking time from 1 to 60 minutes using the +/- buttons.
- **Preset Functions:** 10 one-touch presets for common foods (e.g., chicken, seafood, pizza, fries). Selecting a preset

automatically sets optimal temperature and time.

- **Light Button:** Activates the internal light to monitor cooking progress without opening the door.
- **Rotation Button:** Activates the rotisserie function for even cooking of items in the rotisserie basket or on the shaft.

5.2 Cooking Modes and Functions

The Innsky Air Fryer Oven offers multiple cooking capabilities:

- **Air Fry:** Circulates super-hot air (360° circulation) for crispy results with up to 85% less fat.
- **Bake:** Ideal for cakes, pastries, and other baked goods.
- **Grill/Broil:** For searing and browning.
- **Roast:** Perfect for meats and vegetables.
- **Toast:** For bread and bagels.
- **Rotisserie:** Use with the rotisserie shaft for whole chickens or the rotisserie basket for fries and other small items.
- **Dehydrate:** Dries fruits, vegetables, and meats at lower temperatures (90℉-170℉).



Figure 5.2: Visual representation of the multi-functionality, including rotisserie, toaster, air fryer, and dehydrator.



Figure 5.3: Display of the 9 cooking presets available on the control panel.



Figure 5.4: Illustration of the 360° hot air circulation technology for efficient cooking.

6. Maintenance and Cleaning

Regular cleaning ensures the longevity and optimal performance of your Innsky Air Fryer Oven.

- **Before Cleaning:** Always unplug the appliance and allow it to cool completely before cleaning.
- **Removable Parts:** All removable parts, including mesh racks, rotisserie basket, rotisserie shaft, skewers, and drip tray, are dishwasher safe. For stubborn residue, soak in warm, soapy water before washing.
- **Interior:** The upgraded stainless steel inner surface is durable and easy to clean. Wipe the interior with a damp cloth and mild detergent. Avoid abrasive cleaners or scouring pads.
- **Exterior:** Wipe the exterior with a soft, damp cloth. Do not immerse the main unit in water.
- **Detachable Door:** The transparent thickened tempered glass window is detachable for easy cleaning. Refer to the product diagram for instructions on detaching and reattaching the door.
- **Storage:** Ensure the appliance and all accessories are clean and dry before storing. Store in a cool, dry place.

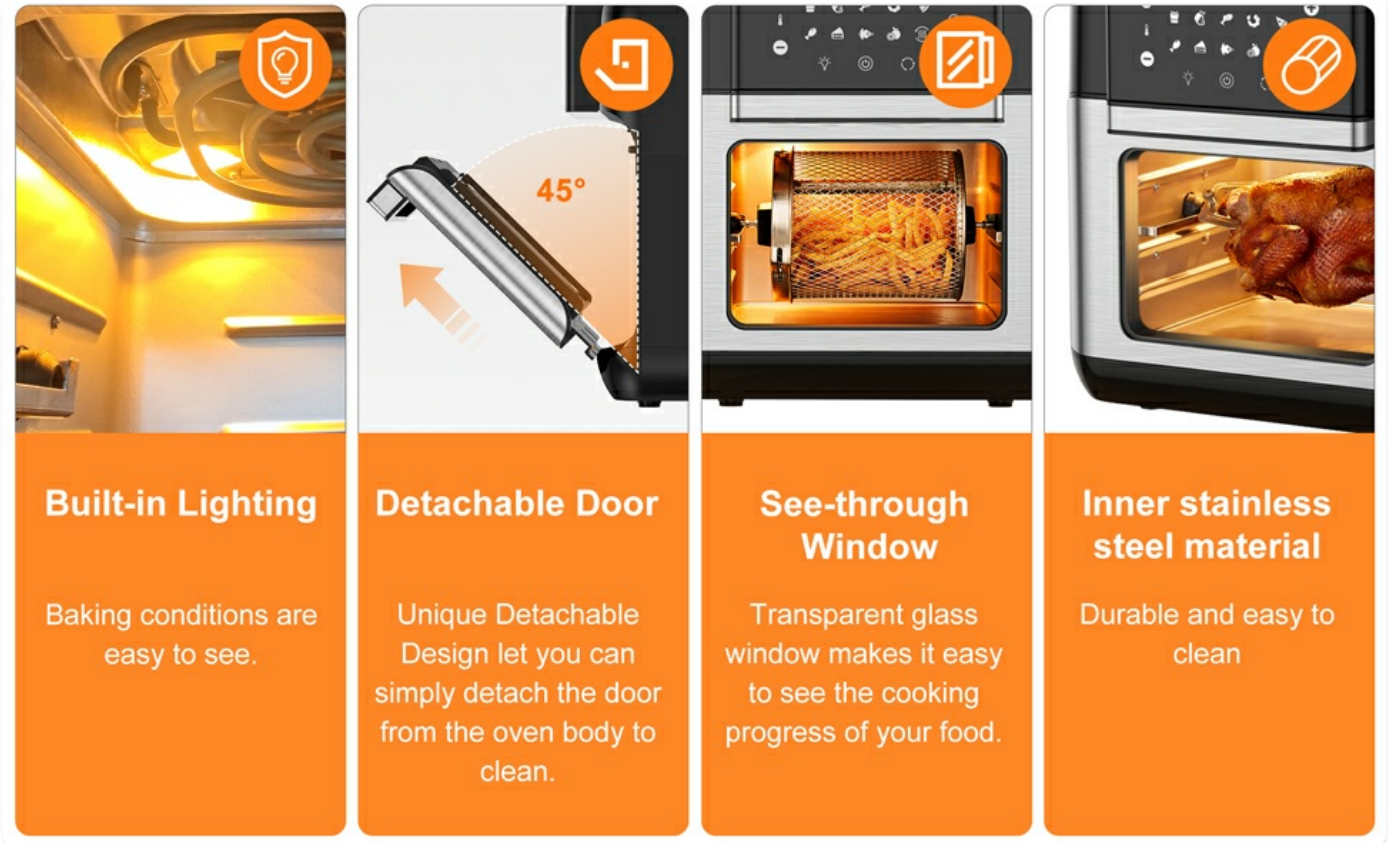


Figure 6.1: The detachable door feature for simplified cleaning of the interior.

7. Troubleshooting

If you encounter any issues with your Innsky Air Fryer Oven, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction.	Ensure the power cord is securely plugged into a working outlet.
Food is not cooked evenly.	Overcrowding; incorrect temperature/time; food not rotated.	Do not overcrowd the racks. Adjust temperature/time as needed. For best results, rotate food or use the rotisserie function for applicable items.

Problem	Possible Cause	Solution
White smoke coming from the appliance.	Excess oil/grease from food; residue from previous cooking.	Ensure the drip tray is clean. Trim excess fat from food. Clean the appliance thoroughly after each use.
Initial smell during first use.	New heating element residue.	This is normal. Perform the "First Use Test Run" as described in Section 4. Ensure good ventilation.

For issues not listed above, please contact Innsky Customer Support.

8. Specifications

- **Model Name:** IS-AF001
- **Brand:** Innsky
- **Capacity:** 10.6 Quarts
- **Product Dimensions:** 11.4"D x 14.2"W x 14.3"H
- **Item Weight:** 14.96 pounds (6.8 Kilograms)
- **Color:** Black
- **Material:** Aluminum (Exterior), Stainless Steel (Inner Surface)
- **Output Wattage:** 1500 Watts
- **Voltage:** 110 Volts
- **Control Method:** Touch Control
- **Max Temperature Setting:** 400 Degrees Fahrenheit
- **Special Feature:** Automatic Shut-Off
- **Nonstick Coating:** Yes
- **Dishwasher Safe Parts:** Yes (Removable Accessories)
- **Air Frying Technology:** True (360° Hot Air Circulation)

9. Warranty and Support

Innsky is committed to providing high-quality products and excellent customer service. While specific warranty details are not provided in this manual, Innsky has a track record of responsive support, including providing replacement units for defective items. For any product inquiries, technical assistance, or warranty claims, please contact Innsky Customer Support through their official channels. Refer to the product packaging or the official Innsky website for the most up-to-date contact information.

© 2023 Innsky. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07RX9JQGN

More documents and user manuals: **https://manuals.plus/**