Saved from manuals.plus.
Open the live page for links to other documents and user manuals.

ChooChoo EUR-ET19001-BK

ChooChoo End Table Model EUR-ET19001-BK Instruction Manual

Model: EUR-ET19001-BK

1. Introduction

This manual provides detailed instructions for the assembly, operation, and maintenance of your ChooChoo End Table, Model EUR-ET19001-BK. Please read all instructions carefully before beginning assembly and retain this manual for future reference.



Image 1.1: The ChooChoo End Table, featuring a flip-top compartment, a drawer, and an open lower shelf.

2. Product Overview

The ChooChoo End Table is designed for functionality and space efficiency, suitable for various living spaces. It features a unique design with practical storage solutions.

Key Features:

- **Unique Design:** Slim profile with a flip-top open design and X-shaped side panels.
- **Versatile Storage:** Includes a flip-top compartment, a pull-out drawer, and an open lower shelf for organizing various items.
- **Durable Construction:** Crafted from high-quality P2 Grade MDF board for long-lasting use.

Included Components:

The product package contains all necessary parts, hardware, and an assembly instruction guide.



Image 2.1: Detailed view of the hidden storage, drawer, flip hinge, and metal knob.

3. Safety Information

Please observe the following safety guidelines to ensure safe assembly and use of your end table:

- Read all instructions before assembly.
- Keep small parts and hardware away from children during assembly to prevent choking hazards.
- Assemble the table on a soft, clean surface to prevent scratches.
- Ensure all screws and fasteners are securely tightened before use. Periodically check and re-tighten as needed.
- Do not overload the table, drawer, or shelves. Refer to specifications for weight limits.
- Place the table on a level surface to prevent tipping.

4. Setup (Assembly Instructions)

Assembly of the ChooChoo End Table is designed to be straightforward. Detailed instructions, along with numbered parts and accessories, are included in your package to guide you step-by-step.

Before You Begin:

- Verify all parts and hardware are present by comparing them with the included parts list.
- Gather necessary tools (typically a screwdriver, not always included).
- Clear a spacious area for assembly.

Assembly Steps:

1. Follow the numerical sequence provided in the separate assembly guide.
2. Attach components securely using the designated hardware. Do not overtighten screws initially; tighten fully once all parts are aligned.
3. Ensure all joints are firm and stable before proceeding to the next step.
4. Once assembled, place the table in its desired location and ensure it is stable.



Image 4.1: The solid X-frame design, a key structural element of the table.

5. Operating (Usage)

Your ChooChoo End Table offers multiple storage options to help keep your space organized.

Flip-Top Compartment:

The top surface of the table features a hinged section that can be lifted to reveal a hidden storage compartment. This is ideal for discreetly storing small items such as remote controls, charging cables, or personal accessories.

Pull-Out Drawer:

An additional drawer provides enclosed storage for items you wish to keep out of sight but easily accessible. Gently pull the knob to open and push to close.

Open Lower Shelf:

The bottom shelf is suitable for displaying decorative items, storing books, magazines, or a small basket for additional organization.



Image 5.1: The end table demonstrating its hidden storage space and additional drawer.



Image 5.2: The end table in a typical living room setup, showcasing its practical placement.

6. Maintenance

Proper care will extend the life and appearance of your ChooChoo End Table.

Cleaning:

- Wipe the table surfaces with a damp cloth.
- Avoid using harsh chemicals or abrasive cleaners, as these can damage the finish.
- Dry immediately with a clean, soft cloth.

General Care:

- Periodically check all screws and connections to ensure they remain tight. Re-tighten if necessary.
- Avoid placing hot items directly on the surface; use coasters or protective pads.
- Keep the table away from direct sunlight and excessive moisture to prevent warping or fading.

7. Troubleshooting

If you encounter any issues with your end table, refer to the following common problems and solutions:

Problem: The table is wobbly.

- **Solution:** Ensure all screws are fully tightened. Check that the table is placed on a flat, level surface. If necessary, use furniture pads under the legs to stabilize.

Problem: The drawer does not slide smoothly.

- **Solution:** Verify that the drawer slides are correctly installed and aligned. Ensure no obstructions are in the drawer tracks. A small amount of silicone lubricant can be applied to the tracks if needed.

Problem: Missing parts or damaged components.

- **Solution:** Refer to the 'Warranty and Support' section for contact information to request replacement parts.

8. Specifications

Attribute	Detail
Brand	ChooChoo
Model Number	EUR-ET19001-BK
Product Dimensions (D x W x H)	11"D x 23.5"W x 24"H (27.9 cm D x 59.7 cm W x 61 cm H)
Item Weight	10.7 Kilograms (23.6 lbs)
Color	Black
Material Type	Engineered Wood (P2 Grade MDF)
Number of Drawers	1
Number of Shelves	1
Recommended Assembly People	1
Product Care Instructions	Wipe with Damp Cloth

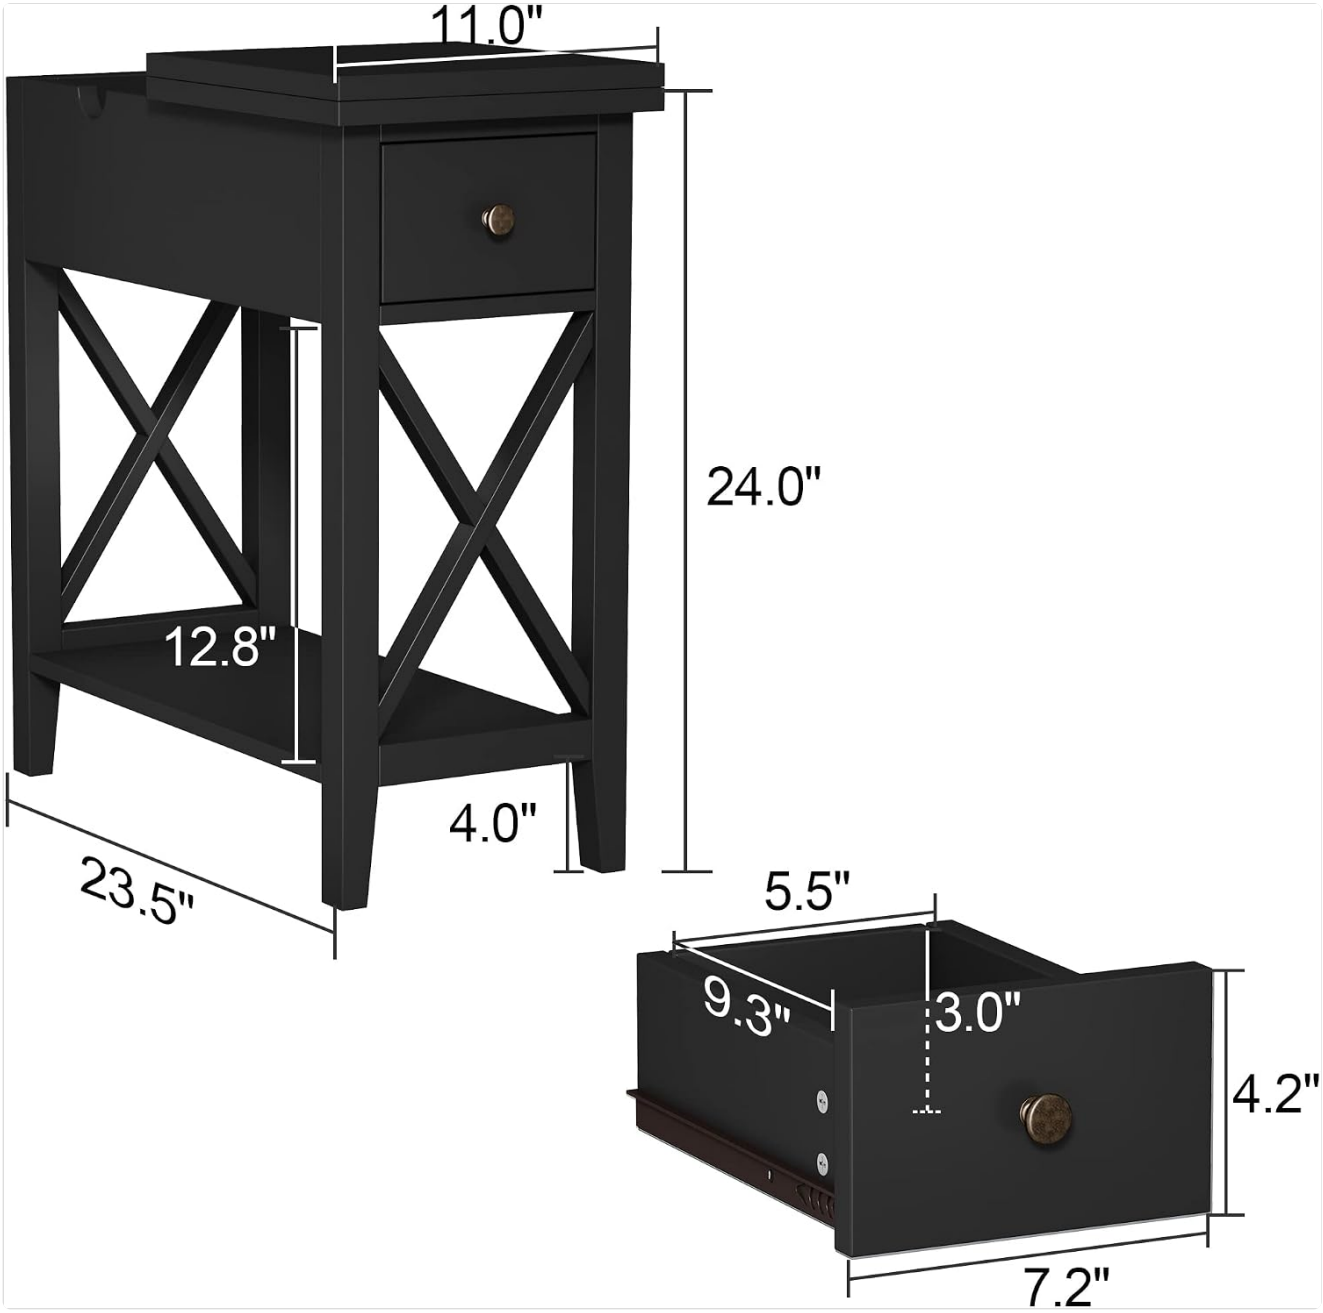


Image 8.1: Dimensional diagram of the ChooChoo End Table.

9. Warranty and Support

ChooChoo is committed to providing high-quality products and excellent customer care. If you have any questions, concerns, or require assistance with your ChooChoo End Table, please do not hesitate to contact our customer service team.

Please refer to your purchase documentation or the retailer's website for specific warranty details and contact information.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. Privacy details.

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

https://manuals.plus/asin/B07S1MRGLC

More documents and user manuals: **https://manuals.plus/**